


QUICK INSTALLATION

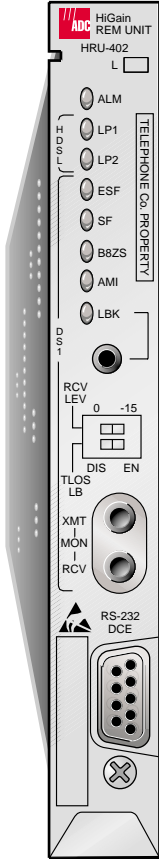

HRU-402 LIST 2 AND LIST 2A REMOTE UNIT

HRU-402 LIST 2 AND LIST 2A

The HiGain® HRU List 2 or List 2A Remote Units function as the remote end of a repeaterless T1 transmission system. When used in conjunction with a HDSL (High-bit-rate Digital Subscriber Line) HiGain Line Unit (HLU), the system provides 1.544 Mbps transmission on two unconditioned copper pairs over the full Carrier Service Area (CSA) range. HiGain Doubler Units (HDUs) can also be used to extend the range. The HRU-402 List 2 can be locally powered or powered by an upstream line unit. The List 2 and List 2A have identical features, except List 2A can not be locally powered.

FEATURES

-
- 1.544 Mbps full-duplex transmission on two unconditioned copper pairs
 - Status Light Emitting Diodes (LEDs) for Digital Signal Level 1 (DS1) and HDSL
 - Craft port access for maintenance terminal connection
 - Local (List 2 only) and line-powering options
 - Narrow 200 mechanics
 - Support for up to five spans
 - Generic and addressable repeater loopback activation codes
 - Lightning and power cross protection on HDSL and DS1 interfaces
 - DS1 transmit and receive monitor jacks for testing
 - Remote provisioning
 - Ultra-low wander
-


SPECIFICATIONS

Operating Temperature	-40 °F to +149 °F (-40 °C to + 65 °C)
Operating Humidity	5% to 95% non-condensing
Line Power Consumption	3.1 Watts
Electrical Protection	Secondary surge and power cross protection on all DS1 and HDSL ports
Mounting	Any 400 or 200 mechanics shelf
HDSL Line Code	784 kbps 2B1Q
HDSL Output	+13.5 dBm \pm 0.5 dB, 135 Ω
DS1 Pulse Output	0 dB or -15 dB
Maximum Provisioning Loss	35 dB at 196 KHz, 135 Ω
DS1 Line Rate	1.544 Mbps \pm 200 bps
DS1 Line Format	AMI or B8ZS
DS1 Frame Format	ESF, SF or Unframed

1


INSTALLATION

- For the List 2 only, set the simplex sealing current by doing one of the following:
 - If the HRU-402 List 2 is to be used with an HDU-451 List 1, 2, 3 or 3B doubler, disable the simplex sealing current by placing the SCURR switch in the up position.
 - For the following compatible doublers, enable the SCURR switch (down position).
 - HDU-404, HDU-407, HDU-409
 - HDU-437, HDU-439 List 1 and List 1B
 - HDU-451 List 4 and List 4B

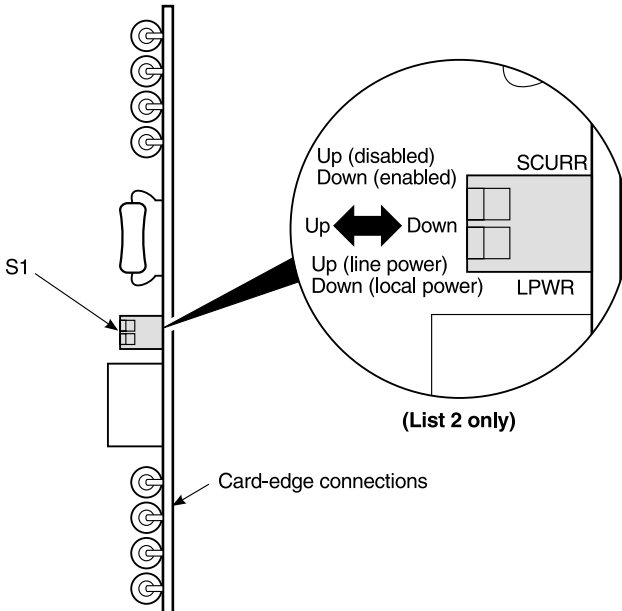


- For the List 2 only, set the power option by doing one of the following:
 - If the HRU-402 List 2 is to be powered by the upstream line unit, place LPWR in the up position.
 - For powering by a local -48 Vdc supply, place LPWR in the down position.
- Slide the HRU (List 2 or List 2A) into the card guides for the slot, and then push the unit back until properly seated in the backplane card-edge connector.

Card-edge Connector

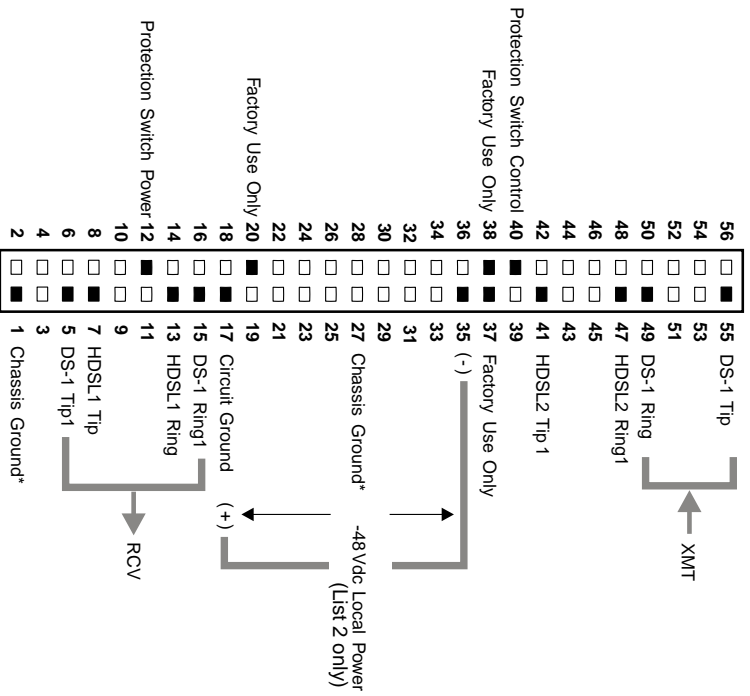

*Chassis Ground may be tied to earth ground per local practice.
Note: Active pins are highlighted in black.

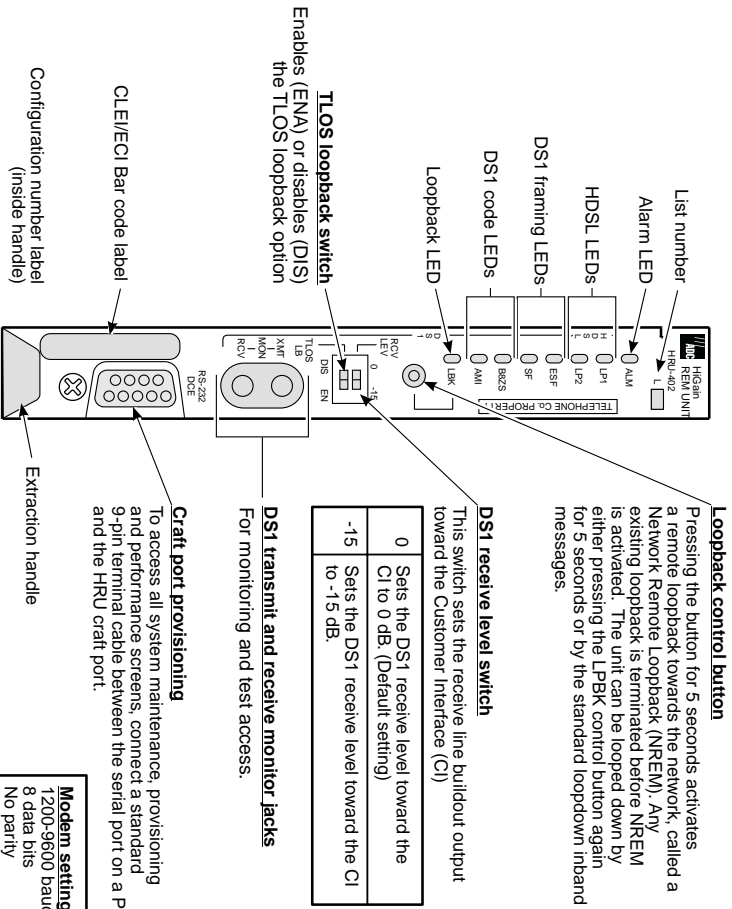

2 VERIFICATION

Once the HRU is installed, verify that it is operating properly by monitoring the status LEDs on the front panel.

Status LED Descriptions

LED Status	Indicates
Alarm (ALM) LED	Shows alarm states for remote and local Loss of Signal (LOS).
Solid red	Indicates a LOS condition at the HRU-402 T1 input.
Blinking	Indicates a LOS condition at the HLU T1 input.
HDSL LED	Displays HDSL Loop 1 and Loop 2 conditions.
Solid green	Indicates HDSL Loop 1 and Loop 2 are in sync.
Blinking once per second	Indicates the HDSL loop is trying to acquire sync.
Blinking 4 times per second	Indicates a margin alarm condition on the HDSL loop.
Blinking 10 times per second	Indicates a Cyclical Redundancy Check (CRC) error on the HDSL loop.
OFF	Indicates no activity on the HDSL loop.
DS1 Framing (FRM) LEDs (ESF and SF)	Indications for framing patterns. If DS1 signals are not detected, the ESF, SF, B8ZS, and AMI LEDs will not light.
ESF LED = Solid green	Indicates Extended Super Frame (ESF). The LED blinks once per second when a frame error is indicated.
SF LED = Solid green	Indicates Super Frame (SF). The LED blinks twice per second when a frame error is indicated.
OFF	Indicates unframed or no signal.
DS1 Code LEDs (B8ZS and AMI)	Indications for DS1 code options. If DS1 signals are not detected, the ESF, SF, B8ZS, and AMI LEDs will not light.
B8ZS LED = Solid green	Indicates that the DS1 line code option is set to Bipolar with 8-Zero Substitution (B8ZS). The LED blinks once per second when a string of excessive zeros is detected.
AMI LED = Solid green	Indicates that the user DS1 line code option is set to Alternate Mark Inversion (AMI). This LED blinks once per second when a Bipolar Violation (BPV) is detected.
Loopback (LPBK) LED	Shows loopback states to and from the network and to and from the Customer Interface (CI).
Solid yellow	Indicates Network Remote Loopback (NREM), SmartJack (SMJK), or Transmit Loss of Signal (TLOS).
Blinking once per second	Indicates Customer Local Loopback (CLOC) loopback state.
Blinking 4 times per second	Indicates the HRU is in an Armed state.

3 LOGGING ON TO THE MAIN MENU

The HRU supports remote login through a maintenance terminal (ASCII terminal or a PC running terminal emulation software) connected to the craft port on the HRU front panel. Remote login creates menus and screens for the HRU that are identical to those viewed at the HLU. Once logged on, access the Remote Terminal Main Menu screens to view system settings, initiate loopbacks, and provision the circuit.

To log on and access the Remote Terminal Main Menu screens using a maintenance terminal:

- 1 Press the **SPACEBAR** several times to display the Remote Login screen.
- 2 Press the **ENTER** key to view the HiGain Maintenance Terminal Screen.

The Remote Terminal Main Menu items are replications of the line unit screens. Depending on the HLU attached to the HRU-402, remote provisioning may be available. Refer to the appropriate HLU user manual for details.



For more detailed information about the Maintenance Terminal screens, provisioning and loopback mode testing, download the appropriate line unit user manual from the Customer Site portion of the ADC Web page at www.adc.com.

Table 1. Remote Terminal Main Menu Items

Menu Item	Function
View Span Status	Allows viewing of span status from the HLU to the HRU-402 (non-doubler applications) and from any doubler spans (multi-span applications).
Set Clock	Allows setting of time and date parameters at the HRU. ^(a)
System Settings	Allows viewing and setting of all system settings. ^(a)
Loopback Mode	Allows system loopbacks to be initiated.
View Performance Data	Allows viewing of the Errored Seconds (ES) and Unavailable Seconds (UAS) for the HLU to HRU-402 span (non-doubler applications) and any additional spans (doubler applications) in 15-minute intervals over a 4-hour time period.
View Performance History	Allows viewing of the ES and UAS for the HLU to HRU-402 span (non-doubler applications) and any additional spans (doubler applications) in 24-hour intervals over a 31-day period.
View Alarm History	Allows viewing of alarm conditions for the HLU to HRU-402 span (non-doubler applications) and any additional spans (doubler applications).
View System Inventory	Displays the model number, serial number, and ID of all units in the circuit.
View Troubleshooting	Provides a graphical analysis of the circuit and identifies problem areas.
Remote Logoff	Terminates the remote session.

(a) If the HLU does not have remote provisioning or its remote provisioning option is disabled, the HRU cannot modify these settings.

4 LOOPBACK TESTING

Initiate loopback testing from the HiGain maintenance menus or by using inband codes. The inband codes shown below can be sent by a test set.

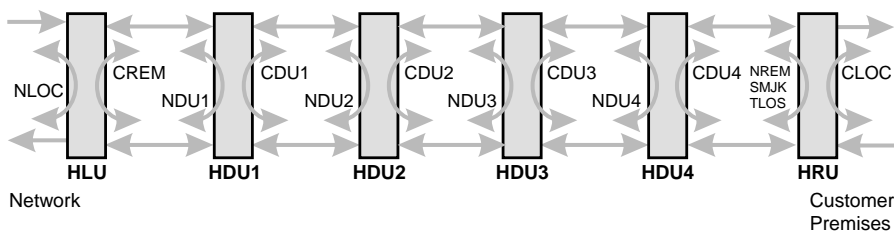


Table 2. GNLB Loopback Commands

Loopback	Inband Code	Description
NDU1	110000	DSX-1 signal is looped back to the network at HDU1.
NDU2	111000	DSX-1 signal is looped back to the network at HDU2.
NDU3	1010001	DSX-1 signal is looped back to the network at HDU3.
NDU4	1010010	DSX-1 signal is looped back to the network at HDU4.
NREM	1110000	DSX-1 signal is looped back to the network at the HRU.
SMJK	11000	DSX-1 signal is looped back to the network at the HRU SmartJack module.
CLOC	1111100	Signal from customer is looped back to the customer at the HRU.
CDU1	111100	Signal from customer is looped back to the customer at HDU1.
CDU2	111110	Signal from customer is looped back to the customer at HDU2.
CDU3	1011001	Signal from customer is looped back to the customer at HDU3.
CDU4	1011010	Signal from customer is looped back to the customer at HDU4.
CREM	1111110	Signal from customer is looped back to the customer at the HLU.
Loopdown	11100	Deactivates any of the above loopbacks.

FCC Class A Compliance

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

Limited Warranty

Product warranty is determined by your service agreement. Contact your sales representative or Customer Service for details.

Modifications

Any changes or modifications made to this device that are not expressly approved by ADC DSL Systems, Inc. voids the user's warranty.

All wiring external to the products should follow the provisions of the current edition of the National Electrical Code.

Standards Compliance

This equipment has been tested and verified to comply with the applicable sections of the following safety standards:

- GR 63-CORE - Network Equipment-Building System (NEBS) Requirements
- GR 1089-CORE - Electromagnetic Compatibility and Electrical Safety
- Binational standard, UL-1950/CSA-C22.2 No. 950-95: Safety of Information Technology Equipment

Trademark Information

ADC is a registered trademark of ADC Telecommunications, Inc. HiGain is a registered trademark of ADC DSL Systems, Inc. Other product names mentioned in this installation guide are used for identification purposes only and may be trademarks or registered trademarks of their respective companies.

Copyright Information

© 2002 ADC DSL Systems, Inc. All rights reserved. Information contained in this document is company private to ADC DSL Systems, Inc., and shall not be modified, used, copied, reproduced or disclosed in whole or in part without the written consent of ADC.

ADC DSL Systems, Inc.

14402 Franklin Avenue
Tustin, CA 92780-7013
Tel: 714.832.9922
Fax: 714.832.9924

Technical Assistance

Tel: 800.638.0031
Tel: 714.730.3222
Fax: 714.730.2400



Product Catalog: HRU-402-L2

CLEI: T1L4EE0B

Product Catalog: HRU-402-L2A

CLEI: T1L4EH0B

Document: 350-402-102-02, Issue 2



1221133

September 3, 1999