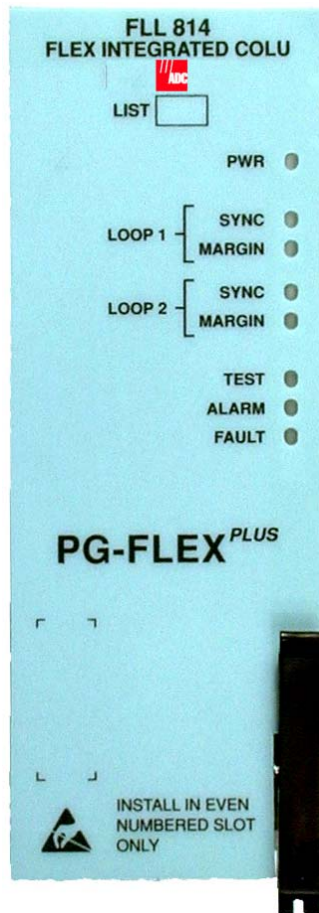


PG-Flex^{Plus}

24 Channel Integrated Central Office Line Unit Technical Practice



Model	List	CLEI Code
FLL-814	1B	VACJK88E~~
	2	VACJKPFE~~

REVISION HISTORY

Revision	Release Date	Revisions Made
01	August 14, 2002	Initial Release
02	September 30, 2002	Misc. software updates
03	January 6, 2003	Updated Product Support Information
04	April 22, 2003	Added L2 and FLL-814/FRL-842 compatibility note on page 1

Copyright © 2003 ADC DSL Systems, Inc. All Rights Reserved.

ADC is a registered trademark of ADC Telecommunications, Inc. PG-Flex^{Plus} is a trademark of ADC DSL Systems, Inc. No right, license, or interest to such trademarks is granted hereunder, and you agree that you shall assert no such right, license, or interest with respect to such trademarks.

Other product names mentioned in this document are used for identification purposes only and may be trademarks or registered trademarks of their respective companies.







Information contained in this document is company private to ADC DSL Systems, Inc., and shall not be modified, used, copied, reproduced or disclosed in whole or in part without the written consent of ADC.

Contents herein are current as of the date of publication. ADC reserves the right to change specifications at any time without notice. Information furnished by ADC is believed to be accurate and reliable. In no event shall ADC be liable for any damages resulting from the loss of data, loss of use, or loss of profits and ADC further disclaims any and all liability for indirect, incidental, special, consequential or other similar damages. This disclaimer of liability applies to all products, publications and services during and after the warranty period.

USING THIS TECHNICAL PRACTICE

The following style conventions and terminology are used throughout this guide.

Element	Meaning
Bold font	Text that you must input exactly as shown (e.g., type 1 for card 1), menu buttons (e.g., ACCEPT SHELF OPTIONS) or menu screen options (e.g., ALARMS screen) that you must select
Italic font	Variables that you must determine before inputting the correct value (e.g., <i>Password</i>)
Monospace font	References to screen prompts (e.g., Invalid Password...Try Again:.)

Reader Alert	Meaning
	Alerts you to supplementary information
<u>IMPORTANT</u> 	Alerts you to supplementary information that is essential to the completion of a task
 ATTENTION	Alerts you to possible equipment damage from electrostatic discharge
 CAUTION	Alerts you to possible data loss, service-affecting procedures, or other similar type problems
 WARNING	Alerts you that failure to take or avoid a specific action might result in hardware damage or loss of service
 DANGER	Alerts you that failure to take or avoid a specific action might result in personal harm

INSPECTING YOUR SHIPMENT

Upon receipt of the equipment:

- Unpack each container and visually inspect the contents for signs of damage. If the equipment has been damaged in transit, immediately report the extent of damage to the transportation company and to ADC. Order replacement equipment, if necessary.
- Check the packing list to ensure complete and accurate shipment of each listed item. If the shipment is short or irregular, contact ADC as described in [Product Support on page 121](#). If you must store the equipment for a prolonged period, store the equipment in its original container.

Table of Contents

Revision History	i
Using this Technical Practice	ii
Inspecting Your Shipment	ii
Overview	1
Description	2
Functions and Features	3
HDSL Transmission	4
Sealing Current	4
DISABLED	4
ENABLED	4
Subscriber Drop Testing	5
Specifications	6
Power Consumption and Heat Dissipation	7
Front Panel	8
Installation and Test	10
Required Tools and Test Equipment	10
Installation	10
Install a FLL-814	10
Initialize and Power Up the FLL-814	11
Administration	13
Navigational Methods	14
Testing, Configuration, and Maintenance	15
Menus and Display Structure	15
Log On The FLL-814 Through the PMU-712	16
Logout of the FLL-814 through the PMU-712	20
Main Menu Option	22
MAIN	23
Performance Menu Options	25
PERFORMANCE — HDSL Summary	27
PERFORMANCE — HDSL 24 Hour History	30
PERFORMANCE — HDSL 7 Day History	33
PERFORMANCE — ISDN Summary	36
PERFORMANCE — ISDN 7 Hour History	38
Alarm Menu Options	40
ALARMS — Alarms Summary	42

ALARMS — COLU System History	45
ALARMS — RTLU System History	48
ALARMS — HDSL History	51
ALARMS — ISDN History	54
ALARMS — CU History	58
ALARMS — COLU Faults	60
ALARMS — RTLU Faults	61
Configuration Menu Options	62
CONFIG — System Options	65
CONFIG — COLU System Alarm Type	68
CONFIG — RTLU System Alarm Types	72
CONFIG — HDSL Alarm Thresholds	75
CONFIG — HDSL Alarm Types	78
CONFIG — ISDN Options	81
CONFIG — ISDN Alarm Thresholds	84
CONFIG — ISDN Alarm Types	87
CONFIG — Channel Unit Alarm Types	90
CONFIG — POTS Options	93
CONFIG — LS/GS Options	96
CONFIG — Set Factory Defaults	97
CONFIG — Timeslot Configuration	99
Timeslot Mapping	99
TEST — Subscriber Drop Test	104
Information Menu Options	107
INFO — LU Inventory	108
INFO — RTCU Inventory	109
INFO — Doublers	110
INFO — Common Cards	111
INFO — Help	112
Fault Isolation and Troubleshooting	113
Subscriber Reported Faults	115
Appendix A	117
Acronyms	119
Product Support	121
Technical Support	121
Limited Warranty	121
Returns	121

FCC Class A Compliance 122
 Modifications 122

List of Figures

Figure 1.	Typical IDLC Configuration	2
Figure 2.	FLL-814 Front Panel	8
Figure 3.	Terminal Menu and Display Structure	15

List of Tables

Table 1.	HDSL Distances	4
Table 2.	Specifications	6
Table 3.	Power Consumption and Heat Dissipation	7
Table 4.	FLL-814 Front Panel LEDs	9
Table 5.	FLL-814 LED Status	12
Table 6.	Navigational Keystrokes	14
Table 7.	System Status	24
Table 8.	Performance Menu Options	26
Table 9.	HDSL Summary	29
Table 10.	Alarm Menu Options	41
Table 11.	Configuration Menu Options	62
Table 12.	System Options	67
Table 13.	Alarm Types Reported	70
Table 14.	CO Alarms	71
Table 15.	RTLU Alarms	74
Table 16.	HDSL Alarm Thresholds	77
Table 17.	HDSL Alarm Types	80
Table 18.	ISDN Options	83
Table 19.	ISDN Alarm Thresholds	86
Table 20.	ISDN Alarm Types	89
Table 21.	Channel Unit Alarms	92
Table 22.	POTS Options	95
Table 23.	Timeslot Configuration Options	102
Table 24.	Test Menu Options	103
Table 25.	Information Menu Options	107
Table 26.	FLL-814 and FRL-842 Fault Isolation	113
Table 27.	Subscriber Fault Isolating	115

OVERVIEW

The PG-Flex^{Plus}™ Integrated Central Office (CO) Line Unit is located in a Central Office Terminal (COT) Shelf. The system uses High-bit-rate Digital Subscriber Line (HDSL) 2B1Q technology to transport 24 DS0s of Plain Old Telephone Service (POTS) and Integrated Services Digital Network (ISDN) services between the FLL-814 and Remote Terminal (RT) Line Unit. The RT Line Unit can be line powered from the FLL-814 or locally powered.



The FLL-814 L1B and L2 CO Line Units are compatible with the FRL-842 L1A or later RT Line Unit. The FLL-814 L1B and L2 cannot be used in conjunction with the FRL-842 L1 RT Line Unit unless the application software on the FRL-842 L1 has been upgraded to 2.X or later.



If a single CO Line Unit or RT Line Unit has to be replaced, the new card does not have to be reconfigured because the existing settings are maintained.



Throughout this document, all references to a COT Shelf includes the PCS-822 Field Shelf unless otherwise specified.



All references to a VT-100 terminal imply that a Personal Computer running VT-100 terminal emulation software can also be used for accessing the FLL-814 through the Management Unit (MU).

IMPORTANT



Please refer to Appendix A on page 117 to facilitate proper system configuration. The Feature Matrix identifies the major features in the CO and RT line units. The Compatibility Matrix provides CO and RT line unit compatibility information.

DESCRIPTION

The integrated system is comprised of a line unit in the CO and line and channel units at the RT (Figure 1). Up to eight integrated systems can be supported in a 23" PCS-719 COT shelf. A Management Unit, common to all systems installed in the COT shelf, provides an interface for alarm relays and testing of subscriber circuits. A multiplexer card takes the DS0s from the systems and converts them to a D4, ESF, or TR-8 (DSX-1) interface.

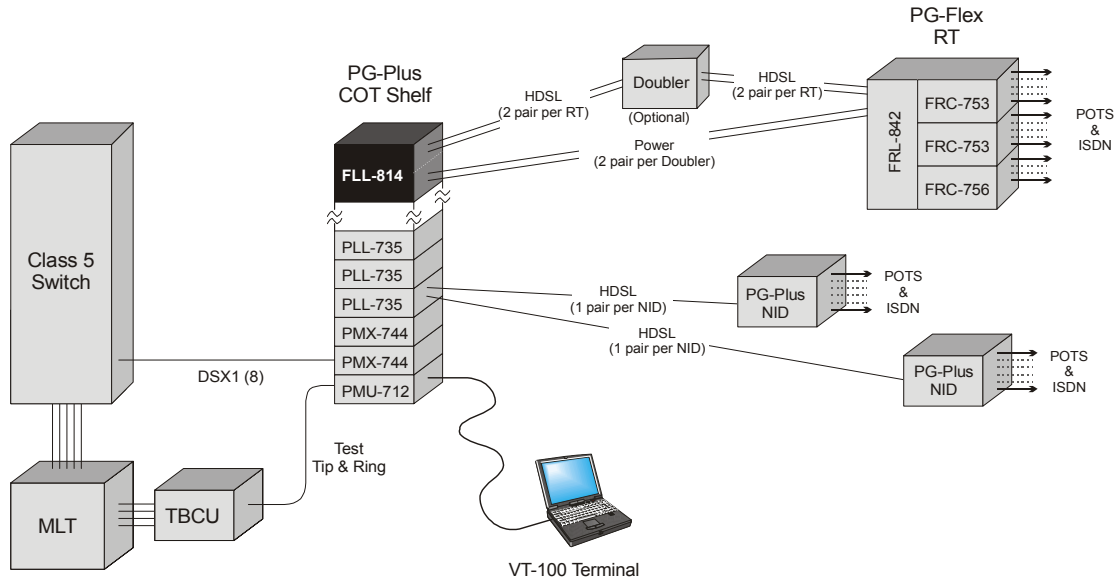


Figure 1. Typical IDLC Configuration



If the FLL-814 is connected to an FRL-842 List 2, the power pairs (as shown in Figure 1) will not be needed since the FRL-842 List 2 is locally powered.

The remote end of the system is housed in a RT Enclosure. RT enclosures are designed for outdoor and indoor applications and are provided with a diverse selection of mounting options. These enclosures support one or more systems that include one RT Line Unit and up to three RT Channel Units.

FUNCTIONS AND FEATURES

The FLL-814 provides the following functions and features:

- HDSL line transceivers and power supply
- Front panel status indicators
- Downloadable firmware
- Mechanized Loop Test (MLT)
- TR-909 Resistive Signatures

HDSL TRANSMISSION

The system uses HDSL 2B1Q technology to transport 24 DS0s plus signaling over two copper pairs. The HDSL circuits can be used without repeaters or loop conditioning. Adaptive equalization, scrambling, and a four-level 2B1Q line coding scheme are used to maximize distance and minimize crosstalk.

Table 1 shows the maximum distance between the COT and RT for various wire gauges and with up to two doublers in the circuit. These distances are shown for a cable temperature of 68° F (20° C). As the temperature of the cable increases, the distance decreases.

Table 1. HDSL Distances

Gauge Wire	HDSL Distance (6 dB Margin / 35 dB Loss / 68° F)			Analog Drop (530 Ω)
	No Doubler	1 Doubler	2 Doublers	
26 AWG (0.4 mm)	9.0 kft (2.8 km)	18.0 kft (5.6 km)	27.0 kft (8.4 km)	6.3 kft (1.9 km)
24 AWG (0.5 mm)	12.3 kft (3.8 km)	24.6 kft (7.6 km)	36.9 kft (11.4 km)	10.2 kft (3.1 km)
22 AWG (0.6 mm)	16.1 kft (5.0 km)	32.2 kft (10.0 km)	48.3 kft (15.0 km)	16.3 kft (5.0 km)
19 AWG (0.9 mm)	22.8 kft (7.0 km)	45.6 kft (14.0 km)	67.4 kft (21.0 km)	32.9 kft (10.0 km)

When the RT is powered from the COT, two auxiliary power pairs are required between the COT and RT for each doubler installed in the HDSL circuit. The power pairs should meet the same criteria as the HDSL pairs. Refer to the COT Shelf and RT Enclosure technical practices for additional information on the power pairs. The RT can also be locally powered to eliminate the need for auxiliary power pairs.

SEALING CURRENT

The FLL-814 provides line powering voltage even if the RT Line Unit is locally powered. In this configuration, the locally powered RT Line Unit draws no current on the HDSL pairs. In order to allow the operating company to “wet” the HDSL lines, the locally powered RTLU provides a provisionable sealing current load circuit. This feature is provisionable as ENABLED or DISABLED. The default is DISABLED. Refer to CONFIG — System Options section for a description of provisioning the sealing current feature.

DISABLED

If a single span system is used, no current flows in the span between the RT and the CO. If doublers are used, no current flows in the span between the last doubler and the RT. Current does flow in the spans between the CO and doublers since the doublers are still line powered.

ENABLED

The Sealing Current load is automatically applied for a period of 15-20 seconds, once every 24 hours at the system clock time of 00:05. A minimum of 20 mA is drawn through each conductor of HDSL A and B during the time the sealing current feature is active. The current flow is ramped at a rate less than 20 mA/second to meet industry standard requirements for pulsed sealing current.

SUBSCRIBER DROP TESTING

The FLL-814 supports subscriber drop testing using an internal test head in the RT line unit that eliminates the metallic bypass pair.

This test head reports its results using three-terminal signature resistors that are measured and converted to subscriber drop condition messages that can be viewed on the VT-100 terminal as described in [TEST — Subscriber Drop Test on page 104](#).

SPECIFICATIONS

Table 2 lists the specifications for the FLL-814.

Table 2. Specifications

Category	Item	Value
Electrical	Input Voltage	-42.5 Vdc to -56.5 Vdc
	Input Power	98 Watts (maximum), cooled by natural convection
	Output Voltage	± 130 Vdc
	Output Power	100 Watts (maximum)
	Heat Dissipation	16.5 Watts (maximum)
Compliance	NEBS	SR-3580 Level 3
	Human Safety	UL-1950 for Restricted Access
	Emissions Radiation and Immunity	GR-1089-CORE for Class A equipment
HDSL	Line Interface	Two pair, 784-kbps full-duplex 2B1Q transmission format
	Signal Characteristics	TR-NWT-001210, Generic Requirements for HDSL Systems
Environmental	Elevation	-200 ft. to 13,000 ft. -60 m to 4,000 m
	Temperature	-40° F to +150° F -40° C to +65° C
	Humidity	5% to 95% (non-condensing)
Physical	Height	5.5 in. (14.0 cm.)
	Width	2.2 in. (5.6 cm.)
	Depth	10.25 in. (26.0 cm.)
	Weight	1.2 lbs. (0.5 kg.)

POWER CONSUMPTION AND HEAT DISSIPATION

Table 3 lists the power consumption and heat dissipation for the FLL-814 on a per slot and per COT shelf basis.



The worst case conditions under which these parameters are measured include:

- * 9,000 ft., 26 AWG loop
- * fully loaded COT shelf
- * -42.5 Vdc COT shelf battery voltage
- * 104° F outdoor temperature

Table 3. Power Consumption and Heat Dissipation

Power	FLL-814 Slot	19-inch COT^a	23-inch COT^b
Maximum Heat Dissipation			
HDSL Line Power Off	5.0 W	50.0 W	60.0 W
HDSL Line Power On	16.5 W	119.0 W	152.0 W
Maximum Power Consumption			
HDSL Line Power Off	5.0 W	50.0 W	60.0 W
HDSL Line Power On	98.0 W	625.0 W	822.0 W
Maximum Current Drain			
HDSL Line Power Off	0.1 A	1.2 A	1.4 A
HDSL Line Power On	1.9 A	11.9 A	15.8 A
a. Indicates the COT shelf with one PMU-712, two PMX-744 and six FLL-814.			
b. Indicates the COT shelf with one PMU-712, two PMX-744 and eight FLL-814.			

FRONT PANEL

Figure 2 shows the FLL-814 front panel and Table 4 on page 9 describes the front panel LEDs.

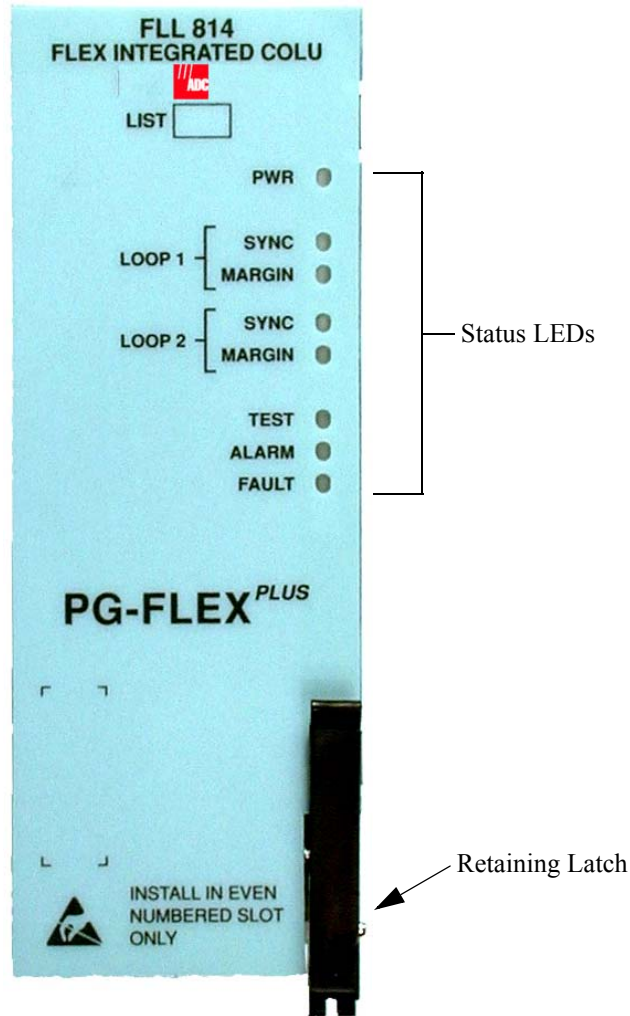


Figure 2. FLL-814 Front Panel

Table 4. FLL-814 Front Panel LEDs

LED	Color	State	Description
PWR	Green	On	FLL-814 power supply is normal
		Flashing	FLL-814 is attempting to power-up the FRL-842 or Doubler Unit
		Off	FLL-814 is not receiving power or internal fault
LOOP 1 SYNC	Green	On	Loop 1 is in synchronization between the FLL-814 and FRL-842 or Doubler Unit
		Flashing	Loop 1 is attempting to synchronize with the FRL-842 or Doubler Unit
		Off	FRL-842 or Doubler Unit is not detected
LOOP 1 MARGIN	Yellow	On	Loop 1 margin at the FLL-814 is equal to or below the provisioned threshold level
		Flashing	Loop 1 margin at the FRL-842 or Doubler Unit is equal to or below the provisioned threshold level
		Off	Loop 1 margin at the FLL-814 and FRL-842 or Doubler Unit is above the provisioned threshold level
LOOP 2 SYNC	Green	On	Loop 2 is in synchronization between the FLL-814 and FRL-842 or Doubler Unit
		Flashing	Loop 2 is attempting to synchronize with the FRL-842 or Doubler Unit
		Off	FRL-842 or Doubler Unit is not detected
LOOP 2 MARGIN	Yellow	On	Loop 2 margin at the FLL-814 is equal to or below the provisioned threshold level
		Flashing	Loop 2 margin at the FRL-842 or Doubler Unit is equal to or below the provisioned threshold level
		Off	Loop 2 margin at the FLL-814 and FRL-842 or Doubler Unit is above the provisioned threshold level
TEST	Yellow	On	Test active
		Off	Test not active
ALARM	Red	On	FLL-814 alarm condition exist
		Flashing	FRL-842 alarm condition exist
		Off	No alarm conditions exist
FAULT	Red	On	Fault in the FLL-814
		Off	No fault is detected

INSTALLATION AND TEST



STATIC SENSITIVE DEVICE – DO NOT HANDLE ANY MATERIAL WITHOUT FIRST TAKING PROPER STATIC CONTROL PRECAUTIONS.



The following procedure assumes that an RT Line Unit or Doubler Unit is installed in the system and all wiring between the CO and the RT has been completed and verified.

REQUIRED TOOLS AND TEST EQUIPMENT

No special tools or equipment are required to install the FLL-814.

INSTALLATION

Install a FLL-814

Step	Action
1	Open the latch on the front of the FLL-814.
2	Insert the FLL-814 into a vacant slot in the shelf that corresponds to the location of the wiring for the service being activated.
3	Engage the retaining latch to hold the card in place.

Initialize and Power Up the FLL-814

By default, the FLL-814 periodically attempts to power up and synchronize with the FRL-842 and the Doubler Units in the circuit until end-to-end HDSL synchronization is established. If the FLL-814 is unable to establish synchronization, it powers down the loops and waits approximately one minute before re-trying. The FLL-814 repeats this process continually until it is able to synchronize with the FRL-842 or Doubler Unit.



The FLL-814 initialization and power up sequence described below assumes:

- HDSL pairs are wired from the COT shelf, through doubler housings (if required) and terminated at the RT enclosure
- Auxiliary Power pairs (if required) are wired from the COT shelf and terminated at the RT enclosure (these pairs do not need to pass through the Doubler housing)
- COT shelf has been wired to CO battery
- Bay fuses have been installed
- Doubler(s) (if required) have been installed
- FRL-842 has been installed

1. When the FLL-814 is installed with power applied to the COT shelf, all LEDs turn on for one second, then go off.
2. After a few seconds, the PWR LED flashes.



To prevent all FLL-814s from attempting to power up simultaneously, there is a two second delay between each system in the COT shelf. For example, a FLL-814 installed in slot 4 will power up two seconds after the system installed in slot 2, and a system installed in slot 12 will power up ten seconds after the system installed in slot 2. This delay is dependent on the slot in the COT shelf that the FLL-814 is installed, rather than on the number of FLL-814s already installed in the COT shelf.

3. The FLL-814 attempts to power up the FRL-842 or Doubler Unit. Depending on the condition of the HDSL and auxiliary power pairs, one of the following scenarios occur:
 - a. One of more pairs are opened between the FLL-814 and the FRL-842 or Doubler Unit:
 - PWR LED flashes for approximately 12 seconds, then remains on
 - SYNC LEDs flash for approximately six seconds, then remains off
 - DSL Power Feed Open (PFO) alarm is indicated in **ALARMS — COLU System History on page 45**
 - FLL-814 waits one minute, then FLL-814 repeats startup sequence
 - b. One or more pairs are shorted or grounded between the FLL-814 and the FRL-842 or Doubler Unit:
 - PWR LED flashes for approximately 12 seconds, then remains on
 - SYNC LEDs flash for approximately six seconds, then remains off
 - DSL Power Feed Short (PFS) alarm indicated in **ALARMS — COLU System History on page 45**
 - FLL-814 waits one minute, then FLL-814 repeats startup sequence

- c. All pairs are good and properly wired between the FLL-814 and the FRL-842 or Doubler Unit:
 - PWR LED flashes for approximately 12 seconds, then remains on
 - SYNC LEDs flash and the FLL-814 attempts to synchronize with the FRL-842 or Doubler Unit. One of the following occurs:
 - FLL-814 does not detect or is not able to synchronize with the FRL-842 or Doubler Unit: SYNC LEDs flash for approximately one minute, then remain off
FLL-814 waits one minute, then FLL-814 repeats startup sequence
 - FLL-814 detects and is able to synchronize with the FRL-842 or Doubler Unit: Within a few minutes, the SYNC LEDs remain on and the FLL-814 establishes synchronized HDSL communications with the FRL-842 or Doubler Unit. Assumption: The HDSL margins are above alarm thresholds and there are no subscriber drop tests or other alarm/faults in the system. Therefore, verify [Table 5](#) front panel indications after the system powers up and establishes HDSL synchronized communications.

Table 5. FLL-814 LED Status

LED	Status
PWR	On
LOOP 1 SYNC	On
LOOP 1 MARGIN	Off
LOOP 2 SYNC	On
LOOP 2 MARGIN	Off
TEST	Off
ALARM	Off
FAULT	Off



It takes approximately two minutes before end-to-end synchronization is established with two doublers installed in the circuit. However, depending on the condition of the cable plant and length of the spans, it may take up to four minutes before synchronization is established.

ADMINISTRATION

Refer to the proper Management Unit Technical Practice for detailed Administration instructions.

For example:

1. Provision your PC/Laptop running Windows HyperTerminal or PROCOMM, etc. to the following terminal settings:

8 data bits

1 stop bit

no parity

VT-100 emulation

baud rate – 1200, 2400, 4800, 9600, 19200, 38400, 57600, 115200

2. Connect the DB-9 cable between the RS-232 port on the front of the Management Unit and the PC/Laptop serial port.

3. Press **ENTER** several times until the Main Menu appears.

NAVIGATIONAL METHODS

Table 6 shows the keys used to navigate through the menus and screens:

Table 6. Navigational Keystrokes

Keypress	Effect on Menu	Effect on Screen
ENTER	Moves to sub-menu or screen selected	Confirms changes
← or CTRL - F	Moves left across Main Menu	Moves the cursor left
→ or CTRL - G	Moves right across Main Menu	Moves the cursor to the right
↑ or CTRL - T	Moves up the sub-menu selection	Moves the cursor up
↓ or CTRL - V	Moves down the sub-menu selection	Moves the cursor down
TAB	No effect	Moves to the next field
SPACEBAR	No effect	Cycle through the field options
ESC	Moves up a menu level. From the Main Menu, the Logout screen is displayed.	Returns to Main Menu without accepting changes. The banner briefly appears and then the Main Menu bar displays.
CTRL - R	Returns to the Main Menu. The banner briefly appears and then the Main Menu bar displays.	Returns to Main Menu without accepting changes
A - Z keys	Selects an underlined or highlighted menu item	A screen entry is made



Some screens illustrated in this document may be slightly different than what may appear on the craft interface terminal. These differences are related to individual software installations.

TESTING, CONFIGURATION, AND MAINTENANCE

The following sections describe how to navigate the VT-100 screens to configure, check the status of, and maintain the FLL-814 system.

MENUS AND DISPLAY STRUCTURE

Figure 3 shows the menu structure of the terminal management system. In this software section, the COLU refers to the FLL-814 and the RTLU refers to the FRL-842.

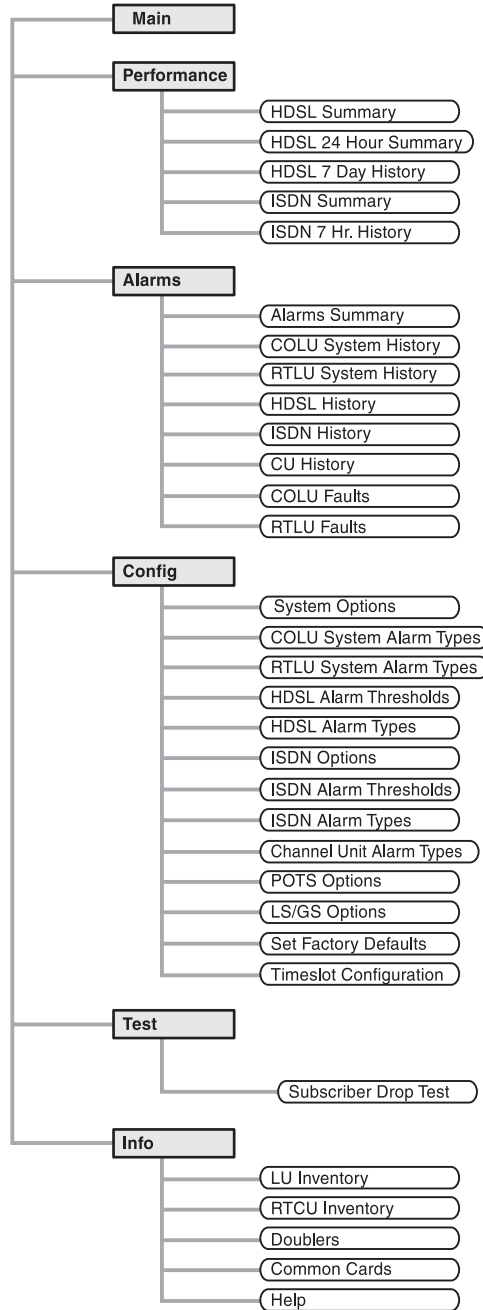


Figure 3. Terminal Menu and Display Structure

Log On The FLL-814 Through the PMU-712

This screen logs the user into the FLL-814 by going through the PMU-712.



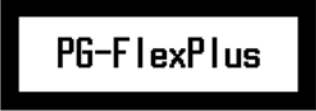
The factory-default password is **password#1**.

If the password has been changed and the new password is not known, contact ADC Technical Support while at the terminal. Technical Support will provide a temporary password based on the Access Key number displayed on the Logon screen.

Log On The FLL-814 Through the PMU-712

Step	Action
1	<p>After connecting a VT-100 terminal to the PMU-712, press SPACEBAR several times to start the autobaud feature. The Login Password screen appears.</p> <div data-bbox="479 737 1239 1209" style="border: 1px solid gray; padding: 20px; text-align: center;"> </div>
2	<p>If an invalid <i>Password</i> is entered, the Login screen is redisplayed with the message <i>Invalid Password... Try Again:.</i></p> <div data-bbox="479 1329 1239 1801" style="border: 1px solid gray; padding: 20px; text-align: center;"> </div>

Log On The FLL-814 Through the PMU-712 (Continued)

Step	Action
3	<p>Type the <i>Password</i>, then press ENTER. After a successful login, the system banner screen appears for a few seconds.</p> <div data-bbox="479 428 1239 903" style="border: 1px solid black; text-align: center; padding: 50px;"></div> <p>Then, the PMU-712 Main Menu screen appears.</p> <div data-bbox="479 982 1239 1457" style="border: 1px solid black; padding: 5px;"><pre>PG-FlexPlus Management Unit MAIN NETWORK SELECT ALARMS CONFIG S/W DNLD INFO 05/28/2002 Shelf ID: FIELD-SHELF 08:21:53</pre></div>

Log On The FLL-814 Through the PMU-712 (Continued)

Step	Action
4	<p>At the Main Menu, choose SELECT. Press ↓ to choose appropriate <i>COLU#</i> (e.g., COLU 2).</p> <div data-bbox="479 401 1239 871" data-label="Image"> </div> <p>The FLL-814 Main Menu appears.</p> <div data-bbox="479 947 1239 1417" data-label="Image"> </div>


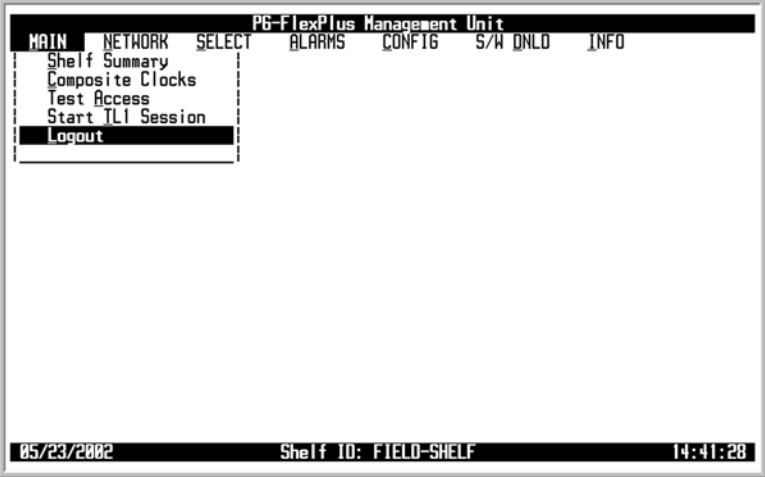
Log On The FLL-814 Through the PMU-712 (Continued)

Step	Action
5	<p>After 15 minutes of inactivity, the following menu appears.</p> <div data-bbox="479 401 1239 856" style="border: 1px solid gray; padding: 20px; margin: 10px auto; width: fit-content;"><div data-bbox="662 537 1024 678" style="border: 2px solid black; padding: 5px; text-align: center;"><p>LOGIN INACTIVITY TIMEOUT EXPIRED</p><p>Logout System Time: 02/28/2002 21:49:17</p></div></div> <p>Press Esc. The Login screen reappears.</p> <div data-bbox="479 930 1239 1402" style="border: 1px solid gray; padding: 20px; margin: 10px auto; width: fit-content;"><div data-bbox="652 1073 1052 1241" style="border: 2px solid black; padding: 5px; text-align: center;"><p>PG-FlexPlus Login Screen</p><p>Enter Password: <input type="password" value=""/></p><p>Access Key: 102463010230</p></div></div> <p>Repeat Step 1, Step 3 and Step 4 to log in again.</p>

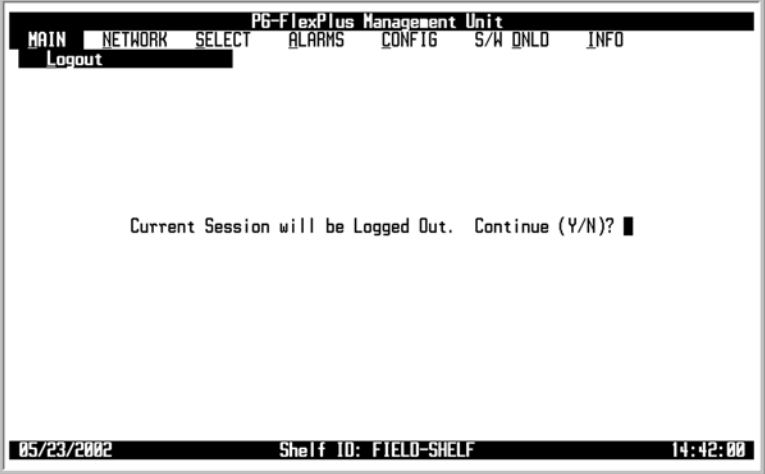

Logout of the FLL-814 through the PMU-712

This screen logs the user out of the FLL-814 by going through the PMU-712.

Performance Menu Options

Step	Action
1	<p>CAUTION <i>If you must leave your VT-100 terminal unattended for any length of time, log off until you are ready to resume work. This prevents unauthorized persons from inadvertently changing any of your operating parameters and possible loss of service.</i></p> <p>At the FLL-814 Main Menu screen, press ESC to return to the PMU-712 Main Menu. The following screen appears.</p> 
2	<p>At the Main Menu screen, select MAIN. Press ↓ to choose Logout. The following screen appears.</p> 

Performance Menu Options (Continued)

Step	Action
3	<p>To logout of the system, press Y.</p> <div data-bbox="479 407 1239 877"><p>The screenshot shows the PG-FlexPlus Management Unit menu. At the top, it says "PG-FlexPlus Management Unit". Below that, there are several menu options: MAIN, NETWORK, SELECT, ALARMS, CONFIG, S/W DNLD, and INFO. The "Logout" option is highlighted. Below the menu, there is a confirmation message: "Current Session will be Logged Out. Continue (Y/N)?". At the bottom of the screen, there is a status bar with the date "05/23/2002", the shelf ID "Shelf ID: FIELD-SHELF", and the time "14:42:00".</p></div> <p>The Login screen appears.</p> <div data-bbox="479 953 1239 1423"><p>The screenshot shows the PG-FlexPlus Login Screen. It has a title "PG-FlexPlus Login Screen". Below the title, there are two input fields: "Enter Password:" followed by a masked password, and "Access Key:" followed by the value "102463010230".</p></div>

MAIN MENU OPTION

The Main Menu provides system status (spans, services, channel status for each span and service).



MAIN

This screen displays the status of the system. Refer to [Table 7 on page 24](#) for System Status information.

MAIN

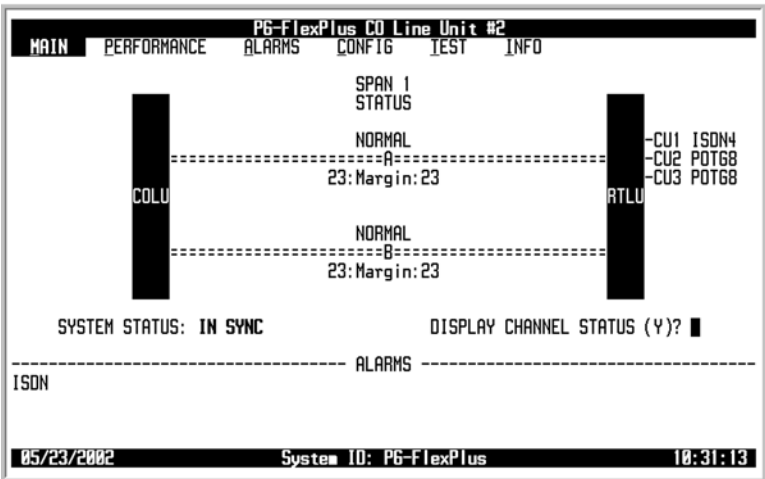
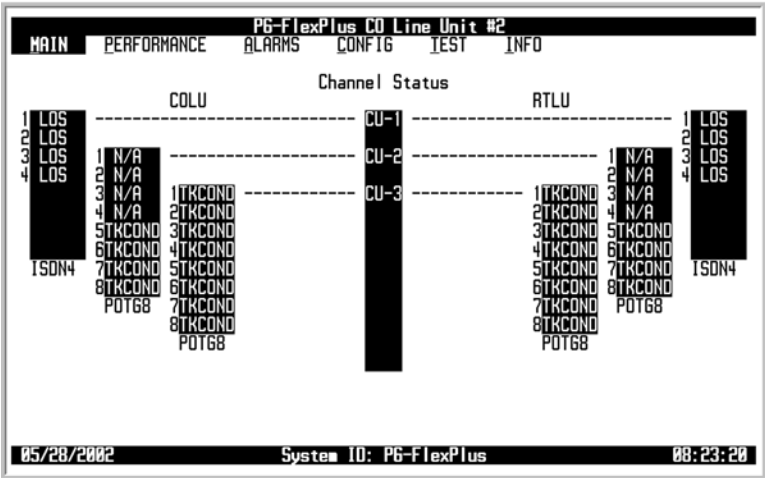
Step	Action
1	<p>At the Main Menu screen, select MAIN. The following screen appears.</p> 
2	<p>To display channel status, press y. The following screen appears.</p> 
3	<p>Press Esc. The Main Menu screen reappears.</p>

Table 7. System Status

Status	Description
System Status	
IN SYNC	Payload synchronized between the COLU and RTLU
OUT OF SYNC	Payload is not synchronized between the COLU and RTLU
Span "N" Status (where N = 1 – 3)	
HDSL LINK DOWN	HDSL link is down
NORMAL	HDSL link is synchronized
START-UP	HDSL link is acquiring synchronization
MARGIN	Indicates current noise margin of span
Alarms	
HDSL	Summary of alarms associated with HDSL link
ISDN	Summary of alarms associated with the ISDN channels
SYSTEM	Summary of alarms within the system
Display Channel Status	
ACTIVE	ISDN link is synchronized and the m-channel "Act" bit is set in the customer direction (towards NT1) as well as network direction (towards LT)
BUSY	Voice path through system is intact, Line is off-hook at RT with or without CO battery wired
DS0AIS	DS0 is not available due to a incoming DS1 facility fault failure
FRAMED	ISDN start-up sequence is complete, but end-to-end transparency has not been established
IDLE	Voice path through the system is intact, CO battery detected , Line is on-hook at RT (IDLE at CO, IDLE at RT)
INACT	"Act" bit in the ISDN m-channel is reset in the customer direction or network direction or both
LOS	Loss of signal
N/A	Not applicable, Timeslots are disabled, Channel Unit is removed at either end (CO or RT)
OPEN	Voice path through the system is intact, No CO battery detected (OPEN at CO, IDLE at RT)
RING	Line is ringing
RINGGND	Ring ground detected at the RT
TEST	Testing being done on line
TKCOND	Forced line condition
RBAT	Reverse battery

PERFORMANCE MENU OPTIONS

The Performance Menu provides access to HDSL and ISDN status (if ISDN is installed) and performance monitoring information. Refer to [Table 8 on page 26](#) for sub-menu options and descriptions, parameters and valid values.



ISDN menu selections are only present if ISDN is installed the system.

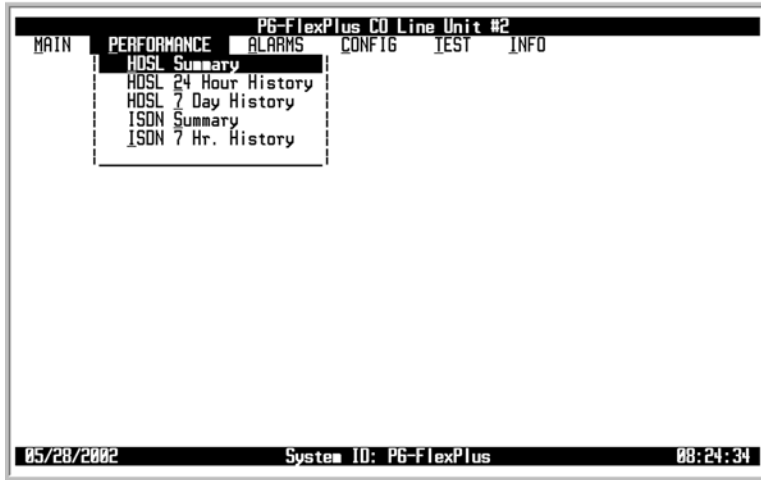


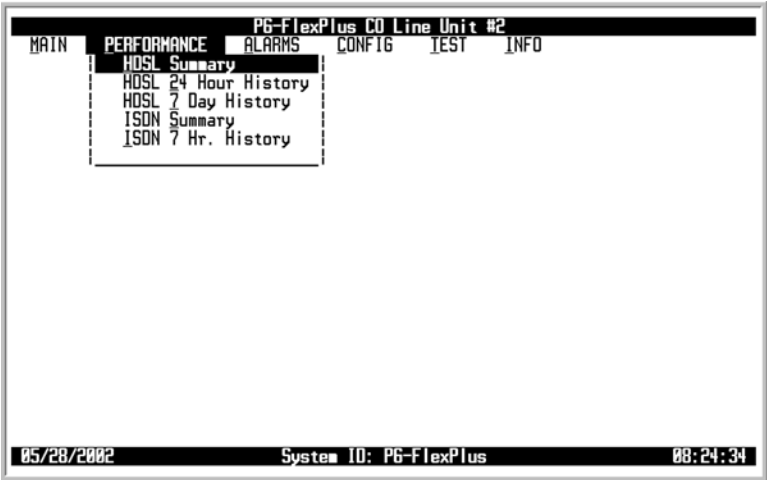
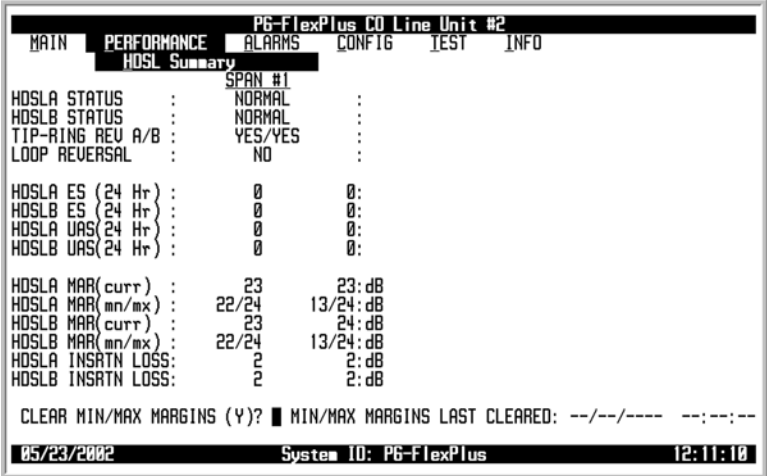
Table 8. Performance Menu Options

Sub-Menu Options	Sub-Menu Descriptions	Parameters	Valid Values
HDSL Summary	View the HDSL performance summary and status	<ul style="list-style-type: none"> • Clear Min/Max Margins (Y)? • HDSL Low/High margins will be reset. Continue (Y/N)? 	<ul style="list-style-type: none"> • Y • Y or N
HDSL 24 Hour History	View the last 24 hours of HDSL performance history in 15 minute intervals	<ul style="list-style-type: none"> • Span • HDSL 24 Hour History will be cleared. Continue (Y/N)? 	<ul style="list-style-type: none"> • 1 – 3 • Y or N
HDSL 7 Day History	View the last 7 days of performance history, plus the current day's accumulated performance history in 24 hour intervals	<ul style="list-style-type: none"> • Span • HDSL 7 Day History will be cleared. Continue (Y/N)? 	<ul style="list-style-type: none"> • 1 – 3 • Y or N
ISDN Summary	View the stored ISDN performance data	<ul style="list-style-type: none"> • Clear ISDN PM Counts for this channel (Y)? • ISDN PM Counts will be cleared. Continue (Y/N)? 	<ul style="list-style-type: none"> • Y • Y or N
ISDN 7 Hour History	View the 7 hour ISDN ES history info	<ul style="list-style-type: none"> • Clear ISDN PM Counts for this channel (Y)? • ISDN PM Counts will be cleared. Continue (Y/N)? 	<ul style="list-style-type: none"> • Y • Y or N

PERFORMANCE — HDSL Summary

This screen displays the HDSL performance summary and status. Refer to [Table 9 on page 29](#) for HDSL Summary information.

PERFORMANCE — HDSL Summary

Step	Action
1	<p>At the Main Menu screen, select PERFORMANCE. Press ↓ to choose HDSL Summary. The following screen appears.</p> 
2	<p>Press ENTER. The following screen appears.</p>  <p>The following actions can be taken:</p> <ol style="list-style-type: none"> To clear the minimum and maximum margins, press Y and continue with this procedure. To exit the HDSL Summary, press ESC.

PERFORMANCE — HDSL Summary (Continued)

Step	Action
3	<p>The following actions can be taken:</p> <p>a. To reset the margins, press Y. The following events occur:</p> <ul style="list-style-type: none"> • minimum and maximum margins are set to the current margins • time and date that the margins were last set are updated. <div style="border: 1px solid black; padding: 5px; margin: 10px 0;"> <pre> PG-FlexPlus CO Line Unit #2 MAIN PERFORMANCE ALARMS CONFIG TEST INFO HDSL Summary SPAN #1 HDSL A STATUS : NORMAL : HDSL B STATUS : NORMAL : TIP-RING REV A/B : YES/YES : LOOP REVERSAL : NO : HDSL A ES (24 Hr) : 0 0: HDSL B ES (24 Hr) : 0 0: HDSL A UAS(24 Hr) : 0 0: HDSL B UAS(24 Hr) : 0 0: HDSL A MAR(curr) : 23 23:dB HDSL A MAR(mn/mx) : 22/24 13/24:dB HDSL B MAR(curr) : 23 23:dB HDSL B MAR(mn/mx) : 22/24 13/24:dB HDSL A INSR TN LOSS: 2 2:dB HDSL B INSR TN LOSS: 2 2:dB CLEAR MIN/MAX MARGINS (Y)? MIN/MAX MARGINS LAST CLEARED: --/--/---- --:--:-- HDSL LOW/HIGH MARGINS WILL BE RESET. CONTINUE (Y/N)? 05/23/2002 System ID: PG-FlexPlus 12:12:08 </pre> </div> <div style="border: 1px solid black; padding: 5px; margin: 10px 0;"> <pre> PG-FlexPlus CO Line Unit #2 MAIN PERFORMANCE ALARMS CONFIG TEST INFO HDSL Summary SPAN #1 HDSL A STATUS : NORMAL : HDSL B STATUS : NORMAL : TIP-RING REV A/B : YES/YES : LOOP REVERSAL : NO : HDSL A ES (24 Hr) : 0 0: HDSL B ES (24 Hr) : 0 0: HDSL A UAS(24 Hr) : 0 0: HDSL B UAS(24 Hr) : 0 0: HDSL A MAR(curr) : 23 23:dB HDSL A MAR(mn/mx) : 23/23 23/23:dB HDSL B MAR(curr) : 23 24:dB HDSL B MAR(mn/mx) : 23/23 24/24:dB HDSL A INSR TN LOSS: 2 2:dB HDSL B INSR TN LOSS: 2 2:dB CLEAR MIN/MAX MARGINS (Y)? MIN/MAX MARGINS LAST CLEARED: 05/23/2002 12:12:26 05/23/2002 System ID: PG-FlexPlus 12:12:30 </pre> </div> <p>b. To retain the existing minimum and maximum margins, press N.</p>
4	<p>Press ESC. The Main Menu screen reappears.</p>


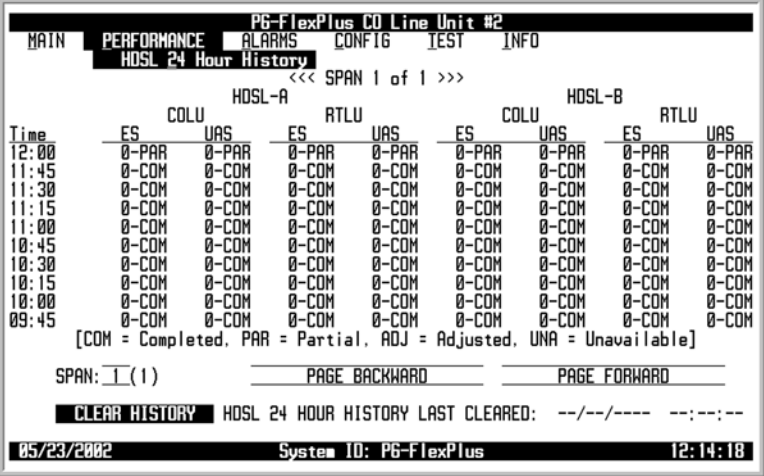
Table 9. HDSL Summary

Parameter	Description	State or Value
<ul style="list-style-type: none"> • HDSL A STATUS • HDSL B STATUS 	Status of the HDSL A/B link on the span	<ul style="list-style-type: none"> • NORMAL HDSL link and payload is synchronized • STARTUP HDSL link is attempting to synchronize • LINKDOWN HDSL transceiver at the far end has not been detected
TIP-RING REV A/B*	Tip-ring polarity of the HDSL A/B link	<ul style="list-style-type: none"> • NO Indicates that tip and ring are wired properly • YES Indicates that tip and ring are reversed
LOOP REVERSAL*	HDSL loop A and B connection	<ul style="list-style-type: none"> • NO Indicates HDSL loops A and B are wired properly • YES Indicates HDSL loops A and B are reversed
<ul style="list-style-type: none"> • HDSL A ES (24 Hr) • HDSL B ES (24 Hr) 	Total number of errored seconds in the last 24 hours on the HDSL A/B link	
<ul style="list-style-type: none"> • HDSL A UAS (24 Hr) • HDSL B UAS (24 Hr) 	Total number of unavailable seconds in the last 24 hours on the HDSL A/B link	
<ul style="list-style-type: none"> • HDSL A MAR (curr) • HDSL B MAR (curr) 	Current margin on the HDSL A/B link	
<ul style="list-style-type: none"> • HDSL A MAR (mn/mx) • HDSL B MAR (mn/mx) 	Minimum and maximum margins on the HDSL A/B link since the min/max margins were last cleared	
<ul style="list-style-type: none"> • HDSL A INSR TN LOSS • HDSL B INSR TN LOSS 	Loss on the HDSL A/B link	
<p>* The system works correctly with loop and/or tip and ring reversals. However, alarms are generated and fault isolation may be difficult.</p>		

PERFORMANCE — HDSL 24 Hour History

This screen displays the last 24 hours of HDSL performance history in 15 minute intervals. The performance history data displayed includes ES and UAS counts and the status of these counts.

PERFORMANCE — HDSL 24 Hour History

Step	Action
1	<p>At the Main Menu screen, select PERFORMANCE. Press ↓ to choose HDSL 24 Hour History. The following screen appears.</p> 
2	<p>Press ENTER. The following screen appears.</p>  <p>In the Time field, 15-minute interval information is displayed. For example, the time interval marked 12:00 contains the information for 11:45 AM to 12:00 AM. The status of the count is shown as:</p> <ul style="list-style-type: none"> • ADJ (Adjusted): Time or date has been changed or the history cleared on the system during this interval • COM (Complete): Data is saved in the history register for this interval • PAR (Partial): Data is being collected for this interval • UNA (Unavailable): Data has not been collected for this interval or has been reset during a previous time interval

PERFORMANCE — HDSL 24 Hour History (Continued)

Step	Action
3	<p>The following actions can be taken:</p> <ol style="list-style-type: none"> To scroll through all 15-minute intervals, select the PAGE FORWARD or PAGE BACKWARD button and press ENTER. To view additional spans, select the SPAN field and press SPACEBAR to toggle to the other spans, then press ENTER. To clear the HDSL 24 Hour History, select the CLEAR HISTORY button and press ENTER. From the HDSL 24 HOUR HISTORY WILL BE CLEARED. CONTINUE (Y/N)? prompt, the following actions can be taken: <ul style="list-style-type: none"> To clear the HDSL 24 Hour History, press Y. The following events occur: <ol style="list-style-type: none"> all HDSL 24 hour history 15-minute interval registers are set to zero and labeled UNA current interval is labeled as ADJ time and date that the registers were last cleared are updated

```

PG-FlexPlus CO Line Unit #2
MAIN PERFORMANCE ALARMS CONFIG TEST INFO
HDSL 24 Hour History
<<< SPAN 1 of 1 >>>
HDSL-A HDSL-B
Time ES COLU UAS ES RTLU UAS ES COLU UAS ES RTLU UAS
12:00 0-PAR 0-PAR 0-PAR 0-PAR 0-PAR 0-PAR 0-PAR 0-PAR 0-PAR 0-PAR
11:45 0-COM 0-COM 0-COM 0-COM 0-COM 0-COM 0-COM 0-COM 0-COM 0-COM
11:30 0-COM 0-COM 0-COM 0-COM 0-COM 0-COM 0-COM 0-COM 0-COM 0-COM
11:15 0-COM 0-COM 0-COM 0-COM 0-COM 0-COM 0-COM 0-COM 0-COM 0-COM
11:00 0-COM 0-COM 0-COM 0-COM 0-COM 0-COM 0-COM 0-COM 0-COM 0-COM
10:45 0-COM 0-COM 0-COM 0-COM 0-COM 0-COM 0-COM 0-COM 0-COM 0-COM
10:30 0-COM 0-COM 0-COM 0-COM 0-COM 0-COM 0-COM 0-COM 0-COM 0-COM
10:15 0-COM 0-COM 0-COM 0-COM 0-COM 0-COM 0-COM 0-COM 0-COM 0-COM
10:00 0-COM 0-COM 0-COM 0-COM 0-COM 0-COM 0-COM 0-COM 0-COM 0-COM
09:45 0-COM 0-COM 0-COM 0-COM 0-COM 0-COM 0-COM 0-COM 0-COM 0-COM
[COM = Completed, PAR = Partial, ADJ = Adjusted, UNA = Unavailable]
SPAN: 1(1) PAGE BACKWARD PAGE FORWARD
HDSL 24 HOUR HISTORY WILL BE CLEARED. CONTINUE (Y/N)?
CLEAR HISTORY HDSL 24 HOUR HISTORY LAST CLEARED: --/--/---- --:--:--
05/23/2002 System ID: PG-FlexPlus 12:14:54
    
```

```

PG-FlexPlus CO Line Unit #2
MAIN PERFORMANCE ALARMS CONFIG TEST INFO
HDSL 24 Hour History
<<< SPAN 1 of 1 >>>
HDSL-A HDSL-B
Time ES COLU UAS ES RTLU UAS ES COLU UAS ES RTLU UAS
12:15 0-ADJ 0-ADJ 0-ADJ 0-ADJ 0-ADJ 0-ADJ 0-ADJ 0-ADJ 0-ADJ 0-ADJ
12:00 0-UNA 0-UNA 0-UNA 0-UNA 0-UNA 0-UNA 0-UNA 0-UNA 0-UNA 0-UNA
11:45 0-UNA 0-UNA 0-UNA 0-UNA 0-UNA 0-UNA 0-UNA 0-UNA 0-UNA 0-UNA
11:30 0-UNA 0-UNA 0-UNA 0-UNA 0-UNA 0-UNA 0-UNA 0-UNA 0-UNA 0-UNA
11:15 0-UNA 0-UNA 0-UNA 0-UNA 0-UNA 0-UNA 0-UNA 0-UNA 0-UNA 0-UNA
11:00 0-UNA 0-UNA 0-UNA 0-UNA 0-UNA 0-UNA 0-UNA 0-UNA 0-UNA 0-UNA
10:45 0-UNA 0-UNA 0-UNA 0-UNA 0-UNA 0-UNA 0-UNA 0-UNA 0-UNA 0-UNA
10:30 0-UNA 0-UNA 0-UNA 0-UNA 0-UNA 0-UNA 0-UNA 0-UNA 0-UNA 0-UNA
10:15 0-UNA 0-UNA 0-UNA 0-UNA 0-UNA 0-UNA 0-UNA 0-UNA 0-UNA 0-UNA
10:00 0-UNA 0-UNA 0-UNA 0-UNA 0-UNA 0-UNA 0-UNA 0-UNA 0-UNA 0-UNA
[COM = Completed, PAR = Partial, ADJ = Adjusted, UNA = Unavailable]
SPAN: 1(1) PAGE BACKWARD PAGE FORWARD
CLEAR HISTORY HDSL 24 HOUR HISTORY LAST CLEARED: 05/23/2002 12:16:53
05/23/2002 System ID: PG-FlexPlus 12:16:57
    
```



If there is an active 15-minute ES or UAS alarm, this alarm becomes inactive when the 24-hour performance history is cleared and reactivates once the threshold has been crossed.

- To retain the existing HDSL 24 Hour History, press **N**.


PERFORMANCE — HDSL 24 Hour History (Continued)

Step	Action
4	Press ESC . The Main Menu screen reappears.

PERFORMANCE — HDSL 7 Day History

This screen displays the last seven days of performance history, plus the current day's accumulated performance history in 24-hour intervals. The performance history data information displayed includes ES counts, UAS counts, and the status of the counts.

PERFORMANCE — HDSL 7 Day History

Step	Action
1	<p>At the Main Menu screen, select PERFORMANCE. Press ↓ to choose HDSL 7 Day History. The following screen appears.</p> 

PERFORMANCE — HDSL 7 Day History (Continued)

Step	Action
2	<p>Press ENTER. The following screen appears.</p> <div data-bbox="479 388 1242 871" style="border: 1px solid black; padding: 5px;"> <pre> PG-FlexPlus CO Line Unit #2 MAIN PERFORMANCE ALARMS CONFIG TEST INFO HDSL 7 Day History <<< SPAN 1 of 1 >>> HDSL-A HDSL-B Date ES COLU UAS ES RTLU UAS ES COLU UAS ES RTLU UAS 05/23 0-ADJ 0-ADJ 0-ADJ 0-ADJ 0-ADJ 0-ADJ 0-ADJ 0-ADJ 0-ADJ 05/22 0-UNA 0-UNA 0-UNA 0-UNA 0-UNA 0-UNA 0-UNA 0-UNA 0-UNA 05/21 0-UNA 0-UNA 0-UNA 0-UNA 0-UNA 0-UNA 0-UNA 0-UNA 0-UNA 05/20 0-UNA 0-UNA 0-UNA 0-UNA 0-UNA 0-UNA 0-UNA 0-UNA 0-UNA 05/19 0-UNA 0-UNA 0-UNA 0-UNA 0-UNA 0-UNA 0-UNA 0-UNA 0-UNA 05/18 0-UNA 0-UNA 0-UNA 0-UNA 0-UNA 0-UNA 0-UNA 0-UNA 0-UNA 05/17 0-UNA 0-UNA 0-UNA 0-UNA 0-UNA 0-UNA 0-UNA 0-UNA 0-UNA 05/16 0-UNA 0-UNA 0-UNA 0-UNA 0-UNA 0-UNA 0-UNA 0-UNA 0-UNA [COM = Completed, PAR = Partial, ADJ = Adjusted, UNA = Unavailable] SPAN: 1(1) CLEAR HISTORY FOR ALL SPANS HDSL 7 DAY HISTORY LAST CLEARED: --/--/---- --:--:-- 05/23/2002 System ID: PG-FlexPlus 12:18:05 </pre> </div> <p>The current day performance information shows the performance since the previous midnight. At midnight of every day, the current day performance history is moved to the previous day's history and the current day performance information is cleared. The status of the count is shown as:</p> <ul style="list-style-type: none"> • ADJ (Adjusted): Time or date has been changed or the history cleared on the system during this interval • COM (Complete): Data is saved in the history register for this interval • PAR (Partial): Data is being collected for this interval • UNA (Unavailable): Data has not been collected for this interval or has been reset during a previous time interval

PERFORMANCE — HDSL 7 Day History (Continued)



Step	Action
3	<p>The following actions can be taken:</p> <ol style="list-style-type: none"> To view additional spans, select the SPAN field and press SPACEBAR to toggle to the other spans, then press ENTER. To clear the HDSL 7 Day History, select the CLEAR HISTORY FOR ALL SPANS button and press ENTER. From the HDSL 7 DAY HISTORY WILL BE CLEARED. CONTINUE (Y/N)? prompt, the following actions can be taken: <ul style="list-style-type: none"> To clear the HDSL 7 Day History, press Y. The following events occur: <ol style="list-style-type: none"> all HDSL 7 day history 24-hour interval registers are set to zero and labeled UNA current interval is labeled as ADJ time and date that the registers were last cleared are updated <div data-bbox="479 703 1237 1180" style="border: 1px solid black; padding: 5px; margin: 10px 0;"> <pre> PG-FlexPlus CO Line Unit #2 MAIN PERFORMANCE ALARMS CONFIG TEST INFO HDSL 7 Day History <<< SPAN 1 of 1 >>> COLU RTLU COLU RTLU Date ES UAS ES UAS ES UAS ES UAS 05/23 0-ADJ 0-ADJ 0-ADJ 0-ADJ 0-ADJ 0-ADJ 0-ADJ 0-ADJ 05/22 0-UNA 0-UNA 0-UNA 0-UNA 0-UNA 0-UNA 0-UNA 0-UNA 05/21 0-UNA 0-UNA 0-UNA 0-UNA 0-UNA 0-UNA 0-UNA 0-UNA 05/20 0-UNA 0-UNA 0-UNA 0-UNA 0-UNA 0-UNA 0-UNA 0-UNA 05/19 0-UNA 0-UNA 0-UNA 0-UNA 0-UNA 0-UNA 0-UNA 0-UNA 05/18 0-UNA 0-UNA 0-UNA 0-UNA 0-UNA 0-UNA 0-UNA 0-UNA 05/17 0-UNA 0-UNA 0-UNA 0-UNA 0-UNA 0-UNA 0-UNA 0-UNA 05/16 0-UNA 0-UNA 0-UNA 0-UNA 0-UNA 0-UNA 0-UNA 0-UNA [COM = Completed, PAR = Partial, ADJ = Adjusted, UNA = Unavailable] SPAN: 1(1) CLEAR HISTORY FOR ALL SPANS HDSL 7 DAY HISTORY LAST CLEARED: --/--/---- --:--:-- HDSL 7 DAY HISTORY WILL BE CLEARED. CONTINUE (Y/N)? 05/23/2002 System ID: PG-FlexPlus 12:18:31 </pre> </div> <div data-bbox="479 1213 1237 1690" style="border: 1px solid black; padding: 5px; margin: 10px 0;"> <pre> PG-FlexPlus CO Line Unit #2 MAIN PERFORMANCE ALARMS CONFIG TEST INFO HDSL 7 Day History <<< SPAN 1 of 1 >>> COLU RTLU COLU RTLU Date ES UAS ES UAS ES UAS ES UAS 05/23 0-ADJ 0-ADJ 0-ADJ 0-ADJ 0-ADJ 0-ADJ 0-ADJ 0-ADJ 05/22 0-UNA 0-UNA 0-UNA 0-UNA 0-UNA 0-UNA 0-UNA 0-UNA 05/21 0-UNA 0-UNA 0-UNA 0-UNA 0-UNA 0-UNA 0-UNA 0-UNA 05/20 0-UNA 0-UNA 0-UNA 0-UNA 0-UNA 0-UNA 0-UNA 0-UNA 05/19 0-UNA 0-UNA 0-UNA 0-UNA 0-UNA 0-UNA 0-UNA 0-UNA 05/18 0-UNA 0-UNA 0-UNA 0-UNA 0-UNA 0-UNA 0-UNA 0-UNA 05/17 0-UNA 0-UNA 0-UNA 0-UNA 0-UNA 0-UNA 0-UNA 0-UNA 05/16 0-UNA 0-UNA 0-UNA 0-UNA 0-UNA 0-UNA 0-UNA 0-UNA [COM = Completed, PAR = Partial, ADJ = Adjusted, UNA = Unavailable] SPAN: 1(1) CLEAR HISTORY FOR ALL SPANS HDSL 7 DAY HISTORY LAST CLEARED: 05/23/2002 12:18:59 05/23/2002 System ID: PG-FlexPlus 12:19:02 </pre> </div> <p>If there is an active 1-day ES or UAS alarm, this alarm becomes inactive when the 24-hour performance history is cleared and reactivates once the threshold has been crossed.</p> <ul style="list-style-type: none"> To retain the existing HDSL 7 Day History, press N.
4	Press ESC . The Main Menu screen reappears.

PERFORMANCE — ISDN Summary

This screen allows you to select an ISDN channel and view the ISDN performance data. The displayed information includes:

- ES and SES counts for the current hour, the previous hour, the current day and the previous day
- Bit Error (BE) counts for the current hour and previous hour

PERFORMANCE — ISDN Summary

Step	Action
1	<p>At the Main Menu screen, select PERFORMANCE. Press ↓ to choose ISDN Summary. The following screen appears.</p>  <p>The screenshot shows a terminal window with the title 'PG-FlexPlus CO Line Unit #2'. The menu options are: MAIN, PERFORMANCE (highlighted), ALARMS, CONFIG, TEST, and INFO. Under 'PERFORMANCE', the options are: HDSL Summary, HDSL 24 Hour History, HDSL 7 Day History, ISDN Summary (highlighted), and ISDN 7 Hr. History. The status bar at the bottom shows '05/23/2002', 'System ID: PG-FlexPlus', and '12:19:28'.</p>
2	<p>Press ENTER. The following screen appears.</p>  <p>The screenshot shows the same terminal window with 'ISDN Summary' selected. It prompts 'Select ISDN channel:' and lists four options: RTCU1 (ISDN4): CHANNEL1 (highlighted), CHANNEL2, CHANNEL3, CHANNEL4; RTCU2 (POT6S); RTCU3 (POT6S); and RTCU4 (EMPTY). The status bar at the bottom shows '05/23/2002', 'System ID: PG-FlexPlus', and '12:20:28'.</p> <p>To view the ISDN performance data, select the ISDN channel, then press ENTER.</p>

PERFORMANCE — ISDN Summary (Continued)

Step	Action
3	<p>The following actions can be taken:</p> <ol style="list-style-type: none"> To clear the current and 7 hour history ISDN PM counts for this channel, press Y from the CLEAR ISDN PM COUNTS FOR THIS CHANNEL (Y)? prompt. To verify you want to clear the current and 7 hour history ISDN PM counts for this channel, press Y from the ISDN PM COUNTS WILL BE CLEARED. CONTINUE (Y/N)? prompt. The following event occurs: <ul style="list-style-type: none"> all ISDN PM counts are set to zero To retain the existing ISDN performance data, press N. <div data-bbox="479 611 1239 1083" style="border: 1px solid black; padding: 5px; margin: 10px 0;"> <pre> PG-FlexPlus CO Line Unit #2 MAIN PERFORMANCE ALARMS CONFIG TEST INFO ISDN Summary PM TYPE: Interim Path CU: 1 CH: 1 COLU CURRENT COLU PREVIOUS ATLU CURRENT ATLU PREVIOUS Customer/Network Customer/Network Customer/Network Customer/Network HOURLY ES : N/A / N/A N/A / N/A 0 / 0 0 / 0 HOURLY SES : N/A / N/A N/A / N/A 0 / 0 0 / 0 HOURLY BE : N/A / N/A N/A / N/A 0 / 0 0 / 0 DAILY ES : N/A / N/A N/A / N/A 0 / 2 0 / 0 DAILY SES : N/A / N/A N/A / N/A 0 / 1 0 / 0 CLEAR ISDN PM COUNTS FOR THIS CHANNEL (Y)? █ (Y WILL CLEAR CURRENT AND 7 HOUR HISTORY ISDN PM COUNTS FOR THIS CHANNEL) 05/23/2002 System ID: PG-FlexPlus 12:21:23 </pre> </div> <div data-bbox="479 1115 1239 1587" style="border: 1px solid black; padding: 5px; margin: 10px 0;"> <pre> PG-FlexPlus CO Line Unit #2 MAIN PERFORMANCE ALARMS CONFIG TEST INFO ISDN Summary PM TYPE: Interim Path CU: 1 CH: 1 COLU CURRENT COLU PREVIOUS ATLU CURRENT ATLU PREVIOUS Customer/Network Customer/Network Customer/Network Customer/Network HOURLY ES : N/A / N/A N/A / N/A 0 / 0 0 / 0 HOURLY SES : N/A / N/A N/A / N/A 0 / 0 0 / 0 HOURLY BE : N/A / N/A N/A / N/A 0 / 0 0 / 0 DAILY ES : N/A / N/A N/A / N/A 0 / 2 0 / 0 DAILY SES : N/A / N/A N/A / N/A 0 / 1 0 / 0 ISDN PM COUNTS WILL BE CLEARED. CONTINUE (Y/N)? █ (Y WILL CLEAR CURRENT AND 7 HOUR HISTORY ISDN PM COUNTS FOR THIS CHANNEL) 05/23/2002 System ID: PG-FlexPlus 12:21:55 </pre> </div>
4	<p>Press ESC. The Main Menu screen reappears.</p>



If there are alarms associated with the performance counts, those alarms are reset when the ISDN performance data is cleared.


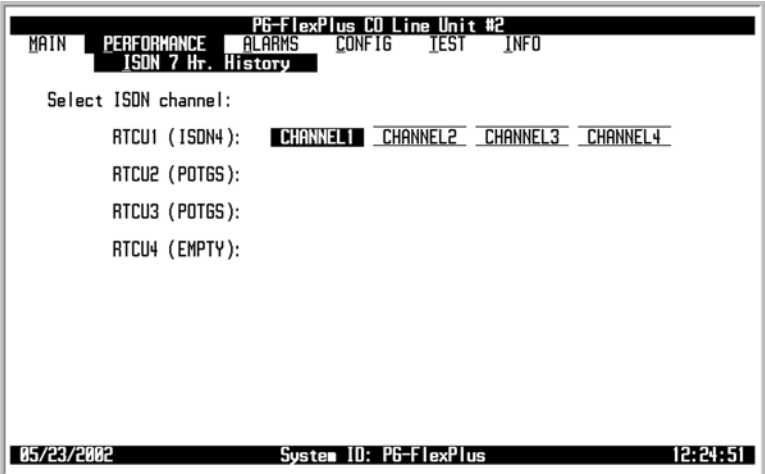


Errors in the Customer column indicate errors in transmission from the Network (ISDN switch) to the Customer. Errors in the Network column indicate errors in transmission from the Customer to the Network.

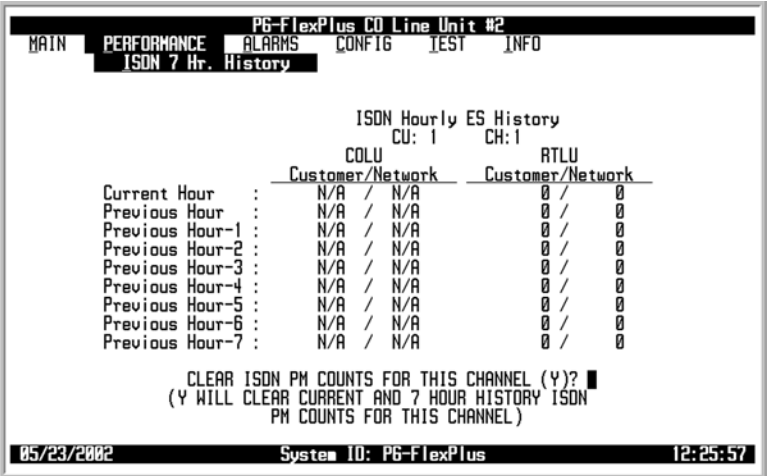
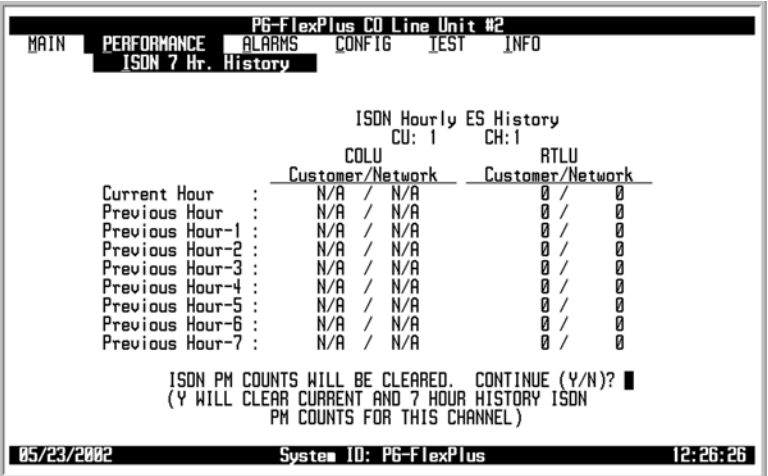


PERFORMANCE — ISDN 7 Hour History

This screen allows you to select an ISDN channel and view the ISDN 7 Hour ES history information.

PERFORMANCE — ISDN 7 Hour History

Step	Action
1	<p>At the Main Menu screen, select PERFORMANCE. Press ↓ to choose ISDN 7 Hr. History. The following screen appears.</p>  <p>The screenshot shows a terminal window with the title 'PG-FlexPlus CO Line Unit #2'. The menu options are: MAIN, PERFORMANCE, ALARMS, CONFIG, TEST, INFO. The 'PERFORMANCE' menu is expanded to show: HDSL Summary, HDSL 24 Hour History, HDSL 7 Day History, ISDN Summary, and ISDN 7 Hr. History (which is highlighted with a black bar). At the bottom of the screen, it displays '05/23/2002', 'System ID: PG-FlexPlus', and '12:24:12'.</p>
2	<p>Press ENTER. The following screen appears..</p>  <p>The screenshot shows a terminal window with the title 'PG-FlexPlus CO Line Unit #2'. The menu options are: MAIN, PERFORMANCE, ALARMS, CONFIG, TEST, INFO. The 'PERFORMANCE' menu is expanded to show 'ISDN 7 Hr. History' (highlighted). Below this, it says 'Select ISDN channel:' followed by four options: RTCU1 (ISDN4): CHANNEL1, CHANNEL2, CHANNEL3, CHANNEL4; RTCU2 (POTGS); RTCU3 (POTGS); and RTCU4 (EMPTY). At the bottom of the screen, it displays '05/23/2002', 'System ID: PG-FlexPlus', and '12:24:51'.</p> <p>To view ISDN 7 Hour ES history, select an ISDN channel unit, then press ENTER.</p>

PERFORMANCE — ISDN 7 Hour History (Continued)

Step	Action																																																																																																														
3	<p>The following actions can be taken:</p> <ol style="list-style-type: none"> To clear the current and 7 hour history counts for this channel, press Y from the CLEAR ISDN PM COUNTS FOR THIS CHANNEL (Y)? prompt. To verify you want the ISDN PM counts to be cleared, press Y from the ISDN PM COUNTS WILL BE CLEARED. CONTINUE (Y/N)? prompt. The following event occurs: <ul style="list-style-type: none"> all ISDN PM counts are set to zero To retain the existing performance data, press N. <div style="text-align: center;">  <p>PG-FlexPlus CD Line Unit #2 MAIN PERFORMANCE ALARMS CONFIG TEST INFO ISDN 7 Hr. History</p> <p>ISDN Hourly ES History CU: 1 CH:1</p> <table border="1"> <thead> <tr> <th></th> <th colspan="2">COLU</th> <th colspan="2">RTLU</th> </tr> <tr> <th></th> <th>Customer</th> <th>Network</th> <th>Customer</th> <th>Network</th> </tr> </thead> <tbody> <tr><td>Current Hour :</td><td>N/A</td><td>N/A</td><td>0</td><td>0</td></tr> <tr><td>Previous Hour :</td><td>N/A</td><td>N/A</td><td>0</td><td>0</td></tr> <tr><td>Previous Hour-1 :</td><td>N/A</td><td>N/A</td><td>0</td><td>0</td></tr> <tr><td>Previous Hour-2 :</td><td>N/A</td><td>N/A</td><td>0</td><td>0</td></tr> <tr><td>Previous Hour-3 :</td><td>N/A</td><td>N/A</td><td>0</td><td>0</td></tr> <tr><td>Previous Hour-4 :</td><td>N/A</td><td>N/A</td><td>0</td><td>0</td></tr> <tr><td>Previous Hour-5 :</td><td>N/A</td><td>N/A</td><td>0</td><td>0</td></tr> <tr><td>Previous Hour-6 :</td><td>N/A</td><td>N/A</td><td>0</td><td>0</td></tr> <tr><td>Previous Hour-7 :</td><td>N/A</td><td>N/A</td><td>0</td><td>0</td></tr> </tbody> </table> <p>CLEAR ISDN PM COUNTS FOR THIS CHANNEL (Y)? █ (Y WILL CLEAR CURRENT AND 7 HOUR HISTORY ISDN PM COUNTS FOR THIS CHANNEL)</p> <p>05/23/2002 System ID: PG-FlexPlus 12:25:57</p> </div> <div style="text-align: center;">  <p>PG-FlexPlus CD Line Unit #2 MAIN PERFORMANCE ALARMS CONFIG TEST INFO ISDN 7 Hr. History</p> <p>ISDN Hourly ES History CU: 1 CH:1</p> <table border="1"> <thead> <tr> <th></th> <th colspan="2">COLU</th> <th colspan="2">RTLU</th> </tr> <tr> <th></th> <th>Customer</th> <th>Network</th> <th>Customer</th> <th>Network</th> </tr> </thead> <tbody> <tr><td>Current Hour :</td><td>N/A</td><td>N/A</td><td>0</td><td>0</td></tr> <tr><td>Previous Hour :</td><td>N/A</td><td>N/A</td><td>0</td><td>0</td></tr> <tr><td>Previous Hour-1 :</td><td>N/A</td><td>N/A</td><td>0</td><td>0</td></tr> <tr><td>Previous Hour-2 :</td><td>N/A</td><td>N/A</td><td>0</td><td>0</td></tr> <tr><td>Previous Hour-3 :</td><td>N/A</td><td>N/A</td><td>0</td><td>0</td></tr> <tr><td>Previous Hour-4 :</td><td>N/A</td><td>N/A</td><td>0</td><td>0</td></tr> <tr><td>Previous Hour-5 :</td><td>N/A</td><td>N/A</td><td>0</td><td>0</td></tr> <tr><td>Previous Hour-6 :</td><td>N/A</td><td>N/A</td><td>0</td><td>0</td></tr> <tr><td>Previous Hour-7 :</td><td>N/A</td><td>N/A</td><td>0</td><td>0</td></tr> </tbody> </table> <p>ISDN PM COUNTS WILL BE CLEARED. CONTINUE (Y/N)? █ (Y WILL CLEAR CURRENT AND 7 HOUR HISTORY ISDN PM COUNTS FOR THIS CHANNEL)</p> <p>05/23/2002 System ID: PG-FlexPlus 12:26:26</p> </div> <p> If there are alarms associated with the performance counts, those alarms are reset when the ISDN performance data is cleared.</p> <p> Errors in the Customer column indicate errors in transmission from the Network (ISDN switch) to the Customer. Errors in the Network column indicate errors in transmission from the Customer to the Network.</p>		COLU		RTLU			Customer	Network	Customer	Network	Current Hour :	N/A	N/A	0	0	Previous Hour :	N/A	N/A	0	0	Previous Hour-1 :	N/A	N/A	0	0	Previous Hour-2 :	N/A	N/A	0	0	Previous Hour-3 :	N/A	N/A	0	0	Previous Hour-4 :	N/A	N/A	0	0	Previous Hour-5 :	N/A	N/A	0	0	Previous Hour-6 :	N/A	N/A	0	0	Previous Hour-7 :	N/A	N/A	0	0		COLU		RTLU			Customer	Network	Customer	Network	Current Hour :	N/A	N/A	0	0	Previous Hour :	N/A	N/A	0	0	Previous Hour-1 :	N/A	N/A	0	0	Previous Hour-2 :	N/A	N/A	0	0	Previous Hour-3 :	N/A	N/A	0	0	Previous Hour-4 :	N/A	N/A	0	0	Previous Hour-5 :	N/A	N/A	0	0	Previous Hour-6 :	N/A	N/A	0	0	Previous Hour-7 :	N/A	N/A	0	0
	COLU		RTLU																																																																																																												
	Customer	Network	Customer	Network																																																																																																											
Current Hour :	N/A	N/A	0	0																																																																																																											
Previous Hour :	N/A	N/A	0	0																																																																																																											
Previous Hour-1 :	N/A	N/A	0	0																																																																																																											
Previous Hour-2 :	N/A	N/A	0	0																																																																																																											
Previous Hour-3 :	N/A	N/A	0	0																																																																																																											
Previous Hour-4 :	N/A	N/A	0	0																																																																																																											
Previous Hour-5 :	N/A	N/A	0	0																																																																																																											
Previous Hour-6 :	N/A	N/A	0	0																																																																																																											
Previous Hour-7 :	N/A	N/A	0	0																																																																																																											
	COLU		RTLU																																																																																																												
	Customer	Network	Customer	Network																																																																																																											
Current Hour :	N/A	N/A	0	0																																																																																																											
Previous Hour :	N/A	N/A	0	0																																																																																																											
Previous Hour-1 :	N/A	N/A	0	0																																																																																																											
Previous Hour-2 :	N/A	N/A	0	0																																																																																																											
Previous Hour-3 :	N/A	N/A	0	0																																																																																																											
Previous Hour-4 :	N/A	N/A	0	0																																																																																																											
Previous Hour-5 :	N/A	N/A	0	0																																																																																																											
Previous Hour-6 :	N/A	N/A	0	0																																																																																																											
Previous Hour-7 :	N/A	N/A	0	0																																																																																																											
4	Press ESC . The Main Menu screen reappears.																																																																																																														

ALARM MENU OPTIONS

The Alarm Menu provides access to the alarm status and system related alarm events. Refer to [Table 10 on page 41](#) for sub-menu options and descriptions, parameters and valid values.



ISDN menu selections are only present if ISDN is installed the system.

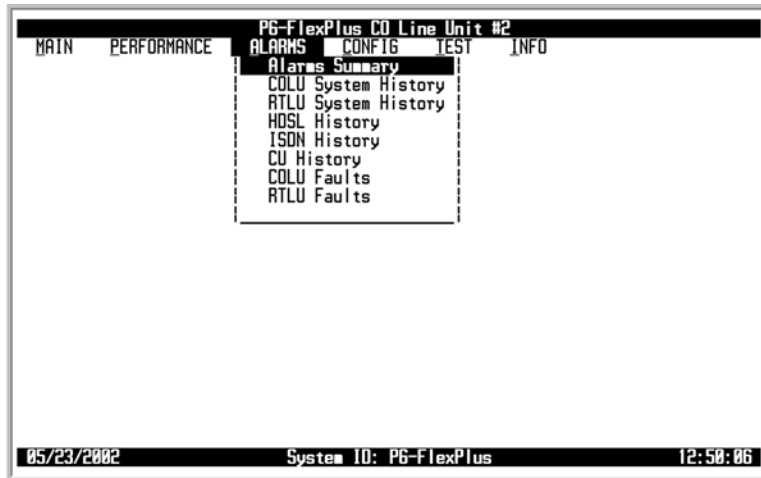



Table 10. Alarm Menu Options

Sub-Menu Options	Sub-Menu Descriptions	Selectable Parameter Options	Valid Values
Alarm Summary	View the active system alarms	All Alarm Histories will be cleared. Continue (Y/N)?	Y or N
COLU System History	View the COLU alarm history	System Alarm History will be cleared. Continue (Y/N)?	Y or N
RTLU System History	View the RTLU alarm history	System Alarm History will be cleared. Continue (Y/N)?	Y or N
HDSL History	View the HDSL history	<ul style="list-style-type: none"> • Span • HDSL Alarm History will be cleared. Continue (Y/N)? 	<ul style="list-style-type: none"> • 1 – 3 • Y or N
ISDN History	View the ISDN history	ISDN Alarm History will be cleared. Continue (Y/N)?	Y or N
CU History	View the channel unit alarm history	CU Alarm History will be cleared. Continue (Y/N)?	Y or N
COLU Faults	View COLU faults detected by the unit		
RTLU Faults	View RTLU faults detected by the unit		

ALARMS — Alarms Summary

This screen displays the active critical, major, and minor alarms of the system.

ALARMS — Alarms Summary

Step	Action
1	<p>At the Main Menu screen, select ALARMS. Press  to choose Alarms Summary. The following screen appears.</p> <div data-bbox="479 552 1239 1024" style="border: 1px solid black; padding: 5px; margin: 10px auto; width: fit-content;"> <pre> PG-FlexPlus CO Line Unit #2 MAIN PERFORMANCE ALARMS CONFIG TEST INFO Alarms Summary COLU System History ATLU System History HDSL History ISDN History CU History COLU Faults ATLU Faults 05/23/2002 System ID: PG-FlexPlus 12:50:06 </pre> </div> <p>The alarm information displayed indicates:</p> <p>Alarm Types:</p> <ul style="list-style-type: none"> • CRITICAL Critical alarm is present • MAJOR Major alarm is present • MINOR Minor alarm is present • NOT ALARMED Condition is active, but has no severity • NOT REPORTED Condition not reported by system <p>Alarm States:</p> <ul style="list-style-type: none"> • * Designates active alarm

ALARMS — Alarms Summary (Continued)

Step	Action
2	<p>Press ENTER. The following screen appears.</p> <div data-bbox="477 401 1239 873" style="border: 1px solid black; padding: 5px;"> <pre> PG-FlexPlus CO Line Unit #2 MAIN PERFORMANCE ALARMS CONFIG TEST INFO Alarms Summary SYSTEM ALARMS HDLSL ALARMS CU ALARMS ISDN ALARMS COLU RTLU SPAN1 SPAN2 SPAN3 COCU RTCU COCU RTCU CRITICAL : : : : : N/A : N/A : : N/A : : : N/A : : MAJOR : : : : : N/A : N/A : : N/A : : : N/A : : MINOR : : : : : N/A : N/A : : N/A : : : N/A : * NOT REPORTED : : : : : N/A : N/A : : N/A : : : N/A : : CLEAR ALL ALARM HISTORIES [* = ACTIVE ALARM, N/A = Not Applicable] 05/23/2002 System ID: PG-FlexPlus 12:50:48 </pre> </div> <p>To view an alarm, press ← or → to move to the appropriate alarm column:</p> <ul style="list-style-type: none"> • SYSTEM ALARMS – COLU or RTLU • HDLSL ALARMS – SPAN1, SPAN 2, or SPAN3 • CU ALARMS – COCU or RTCU • ISDN ALARMS – COLU or RTLU <p>Then press ENTER.</p>

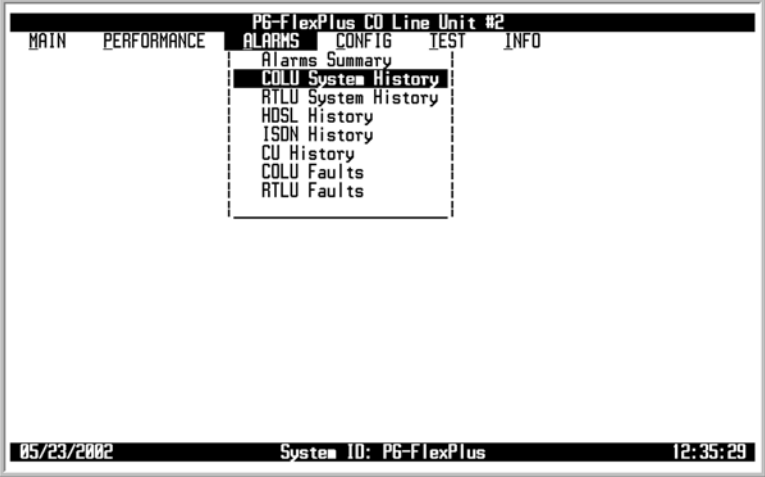
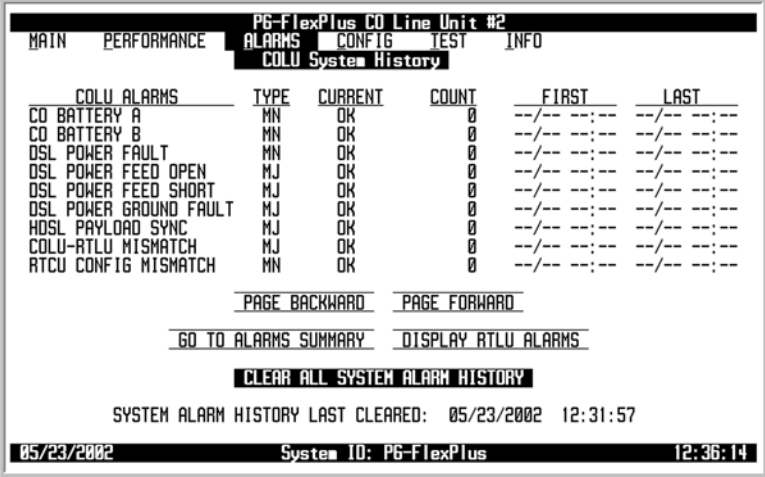

ALARMS — Alarms Summary (Continued)

Step	Action
3	<p>The following actions can be taken:</p> <p>a. To clear the history of all alarms, select the CLEAR ALL ALARM HISTORIES button, then press ENTER. From the HDSL ALARM HISTORIES WILL BE CLEARED. CONTINUE (Y/N)? prompt, the following actions can be taken:</p> <p>b. To clear the history of all alarms, press Y. The following events occur:</p> <ul style="list-style-type: none"> all alarm history counts are set to zero time and date that the registers were last cleared are updated <div data-bbox="479 598 1242 1071" style="border: 1px solid black; padding: 5px;"> <pre> PG-FlexPlus CO Line Unit #2 MAIN PERFORMANCE ALARMS CONFIG TEST INFO Alarms Summary SYSTEM ALARMS HDSL ALARMS CU ALARMS ISDN ALARMS COLU RTLU SPAN1 SPAN2 SPAN3 COCU RTCU COCU RTCU CRITICAL : : : N/A : N/A : : : : MAJOR : : : N/A : N/A : : : : MINOR : : : N/A : N/A : : : N/A : * NOT REPORTED : : : N/A : N/A : : : : CLEAR ALL ALARM HISTORIES ALL ALARM HISTORIES WILL BE CLEARED. CONTINUE (Y/N)? █ [* = ACTIVE ALARM. N/A = Not Applicable] 05/23/2002 System ID: PG-FlexPlus 12:51:10 </pre> </div> <div data-bbox="479 1102 1242 1575" style="border: 1px solid black; padding: 5px;"> <pre> PG-FlexPlus CO Line Unit #2 MAIN PERFORMANCE ALARMS CONFIG TEST INFO Alarms Summary SYSTEM ALARMS HDSL ALARMS CU ALARMS ISDN ALARMS COLU RTLU SPAN1 SPAN2 SPAN3 COCU RTCU COCU RTCU CRITICAL : : : N/A : N/A : : : : MAJOR : : : N/A : N/A : : : : MINOR : : : N/A : N/A : : : N/A : * NOT REPORTED : : : N/A : N/A : : : : CLEAR ALL ALARM HISTORIES [* = ACTIVE ALARM. N/A = Not Applicable] 05/23/2002 System ID: PG-FlexPlus 12:51:40 </pre> </div> <p>c. To retain the existing summary of active alarms, press N.</p>
4	<p>Press Esc. The Main Menu screen reappears.</p>

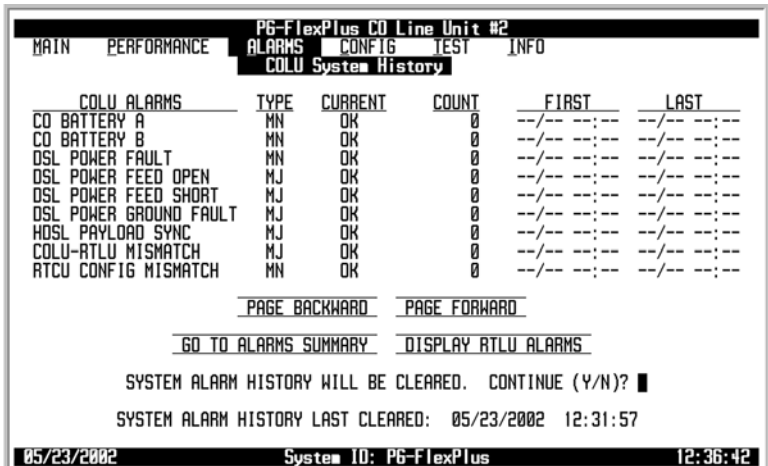
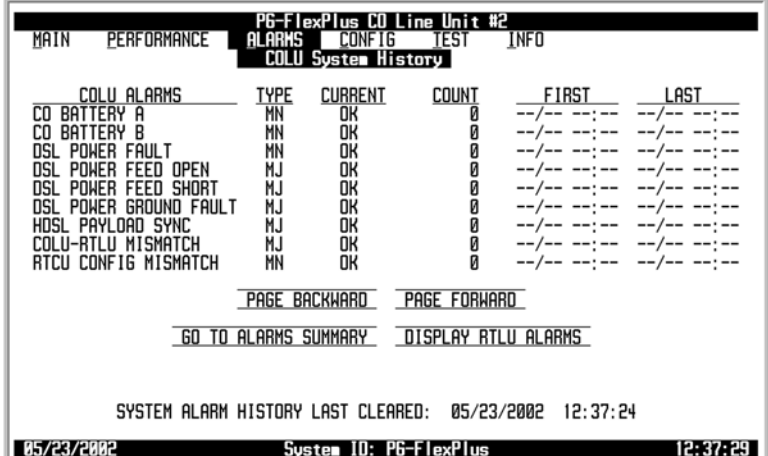


ALARMS — COLU System History

This screen displays the COLU alarm history. Information includes a count of the number of times each alarm occurred, the time and date of the first and last occurrence, the provisioned alarm type, and the current status.

ALARMS — COLU System History

Step	Action
1	<p>At the Main Menu screen, select ALARMS. Press ↓ to choose COLU System History. The following screen appears.</p>  <p>The screenshot shows a terminal window with the following content:</p> <pre> PG-FlexPlus CO Line Unit #2 MAIN PERFORMANCE ALARMS CONFIG TEST INFO Alarms Summary COLU System History RTLU System History HDSL History ISDN History CU History COLU Faults RTLU Faults 05/23/2002 System ID: PG-FlexPlus 12:35:29 </pre>
2	<p>Press ENTER. The following screen appears.</p>  <p>The screenshot shows a terminal window with the following content:</p> <pre> PG-FlexPlus CO Line Unit #2 MAIN PERFORMANCE ALARMS CONFIG TEST INFO COLU System History COLU ALARMS TYPE CURRENT COUNT FIRST LAST CO BATTERY A MN OK 0 --/-- --/-- CO BATTERY B MN OK 0 --/-- --/-- DSL POWER FAULT MN OK 0 --/-- --/-- DSL POWER FEED OPEN MJ OK 0 --/-- --/-- DSL POWER FEED SHORT MJ OK 0 --/-- --/-- DSL POWER GROUND FAULT MJ OK 0 --/-- --/-- HDSL PAYLOAD SYNC MJ OK 0 --/-- --/-- COLU-RTLU MISMATCH MJ OK 0 --/-- --/-- RTCU CONFIG MISMATCH MN OK 0 --/-- --/-- PAGE BACKWARD PAGE FORWARD GO TO ALARMS SUMMARY DISPLAY RTLU ALARMS CLEAR ALL SYSTEM ALARM HISTORY SYSTEM ALARM HISTORY LAST CLEARED: 05/23/2002 12:31:57 05/23/2002 System ID: PG-FlexPlus 12:36:14 </pre> <p> The status <i>OK</i> displays in the <i>Current</i> column when the alarm is not present. The status <i>Active</i> displays when an alarm is present (see Table 14 on page 71 for CO Alarms). A description of the Alarm types reported is provided in Table 13 on page 70.</p>

ALARMS — COLU System History (Continued)

Step	Action
3	<p>The following actions can be taken:</p> <ol style="list-style-type: none"> To scroll through the COLU system alarm history, select the PAGE FORWARD or PAGE BACKWARD button, then press ENTER. To view a summary of all active alarms, select the GO TO ALARMS SUMMARY button, then press ENTER. To view the RTLU alarm information, select the DISPLAY RTLU ALARMS button, then press ENTER. To clear the COLU alarm history, select the CLEAR ALL SYSTEM ALARM HISTORY button, then press ENTER. From the SYSTEM ALARM HISTORY WILL BE CLEARED. CONTINUE (Y/N)? prompt, the following actions can be taken: <ul style="list-style-type: none"> To clear the COLU alarm history, press Y. The following events occur: <ol style="list-style-type: none"> COLU alarm history counts are set to zero time and date that the registers were last cleared are updated
	 <p>05/23/2002 System ID: PG-FlexPlus 12:36:42</p>
	 <p>05/23/2002 System ID: PG-FlexPlus 12:37:29</p>
	<p> Clearing the alarm history does not clear any alarm that is currently active in the system.</p> <p> If there is an active alarm, the count is set to 1 and the value in the LAST date and time field is set to the FIRST date and time field.</p> <ul style="list-style-type: none"> To retain the existing COLU alarm history, press N.


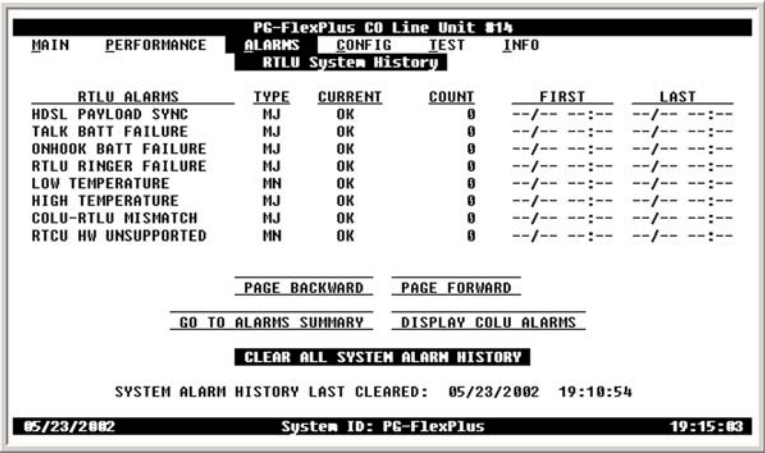

ALARMS — COLU System History (Continued)

Step	Action
4	Press ESC . The Main Menu screen reappears.



ALARMS — RTLU System History

This screen displays the RTLU alarm history. Information includes a count of the number of times each alarm occurred, the time and date of the first and last occurrence, the provisioned alarm type, and the current status.

ALARMS — RTLU System History

Step	Action
1	<p>At the Main Menu screen, select ALARMS. Press ↓ to choose RTLU System History. The following screen appears.</p> 
2	<p>Press ENTER. The following screen appears.</p>  <p> The status <i>OK</i> displays in the <i>Current</i> column when the alarm is not present. The status <i>Active</i> displays when an alarm is present (see Table 15 on page 74 for RTLU Alarms). A description of the Alarm types reported is provided in Table 13 on page 70.</p>

ALARMS — RTLU System History (Continued)

Step	Action																																																						
3	<p>The following actions can be taken:</p> <ol style="list-style-type: none"> To scroll through the RTLU system alarm history, select the PAGE FORWARD or PAGE BACKWARD button, then press ENTER. To view a summary of all active alarms, select the GO TO ALARMS SUMMARY button, then press ENTER. To view the COLU alarm information, select the DISPLAY COLU ALARMS button, then press ENTER. To clear the RTLU alarm history, select the CLEAR ALL SYSTEM ALARM HISTORY button, then press ENTER. From the SYSTEM ALARM HISTORY WILL BE CLEARED. CONTINUE (Y/N)? prompt, the following actions can be taken: <ul style="list-style-type: none"> To clear the RTLU alarm history, press Y. The following events occur: <ol style="list-style-type: none"> RTLU alarm history counts are set to zero time and date that the registers were last cleared are updated 																																																						
	<p>The screenshot shows the 'RTLU System History' screen with the following data:</p> <table border="1"> <thead> <tr> <th>RTLU ALARMS</th> <th>TYPE</th> <th>CURRENT</th> <th>COUNT</th> <th>FIRST</th> <th>LAST</th> </tr> </thead> <tbody> <tr><td>HD SL PAYLOAD SYNC</td><td>HJ</td><td>OK</td><td>0</td><td>--/--</td><td>--/--</td></tr> <tr><td>TALK BATT FAILURE</td><td>HJ</td><td>OK</td><td>0</td><td>--/--</td><td>--/--</td></tr> <tr><td>ONHOOK BATT FAILURE</td><td>HJ</td><td>OK</td><td>0</td><td>--/--</td><td>--/--</td></tr> <tr><td>RTLU RINGER FAILURE</td><td>HJ</td><td>OK</td><td>0</td><td>--/--</td><td>--/--</td></tr> <tr><td>LOW TEMPERATURE</td><td>MN</td><td>OK</td><td>0</td><td>--/--</td><td>--/--</td></tr> <tr><td>HIGH TEMPERATURE</td><td>HJ</td><td>OK</td><td>0</td><td>--/--</td><td>--/--</td></tr> <tr><td>COLU-RTLU MISMATCH</td><td>HJ</td><td>OK</td><td>0</td><td>--/--</td><td>--/--</td></tr> <tr><td>RTCU HW UNSUPPORTED</td><td>MN</td><td>OK</td><td>0</td><td>--/--</td><td>--/--</td></tr> </tbody> </table> <p>Navigation options: PAGE BACKWARD, PAGE FORWARD, GO TO ALARMS SUMMARY, DISPLAY COLU ALARMS.</p> <p>SYSTEM ALARM HISTORY WILL BE CLEARED. CONTINUE (Y/N)?</p> <p>SYSTEM ALARM HISTORY LAST CLEARED: 05/23/2002 19:10:54</p> <p>05/23/2002 System ID: PG-FlexPlus 19:15:31</p>	RTLU ALARMS	TYPE	CURRENT	COUNT	FIRST	LAST	HD SL PAYLOAD SYNC	HJ	OK	0	--/--	--/--	TALK BATT FAILURE	HJ	OK	0	--/--	--/--	ONHOOK BATT FAILURE	HJ	OK	0	--/--	--/--	RTLU RINGER FAILURE	HJ	OK	0	--/--	--/--	LOW TEMPERATURE	MN	OK	0	--/--	--/--	HIGH TEMPERATURE	HJ	OK	0	--/--	--/--	COLU-RTLU MISMATCH	HJ	OK	0	--/--	--/--	RTCU HW UNSUPPORTED	MN	OK	0	--/--	--/--
RTLU ALARMS	TYPE	CURRENT	COUNT	FIRST	LAST																																																		
HD SL PAYLOAD SYNC	HJ	OK	0	--/--	--/--																																																		
TALK BATT FAILURE	HJ	OK	0	--/--	--/--																																																		
ONHOOK BATT FAILURE	HJ	OK	0	--/--	--/--																																																		
RTLU RINGER FAILURE	HJ	OK	0	--/--	--/--																																																		
LOW TEMPERATURE	MN	OK	0	--/--	--/--																																																		
HIGH TEMPERATURE	HJ	OK	0	--/--	--/--																																																		
COLU-RTLU MISMATCH	HJ	OK	0	--/--	--/--																																																		
RTCU HW UNSUPPORTED	MN	OK	0	--/--	--/--																																																		
	<p>The screenshot shows the 'RTLU System History' screen with the same data as above, but the 'SYSTEM ALARM HISTORY LAST CLEARED' time is now 19:15:50.</p> <p>SYSTEM ALARM HISTORY LAST CLEARED: 05/23/2002 19:15:50</p> <p>05/23/2002 System ID: PG-FlexPlus 19:15:52</p>																																																						
	<p> Clearing the alarm history does not clear any alarm that is currently active in the system.</p> <p> If there is an active alarm, the count is set to 1 and the value in the LAST date and time field is set to the FIRST date and time field.</p> <ul style="list-style-type: none"> To retain the existing RTLU alarm history, press N. 																																																						


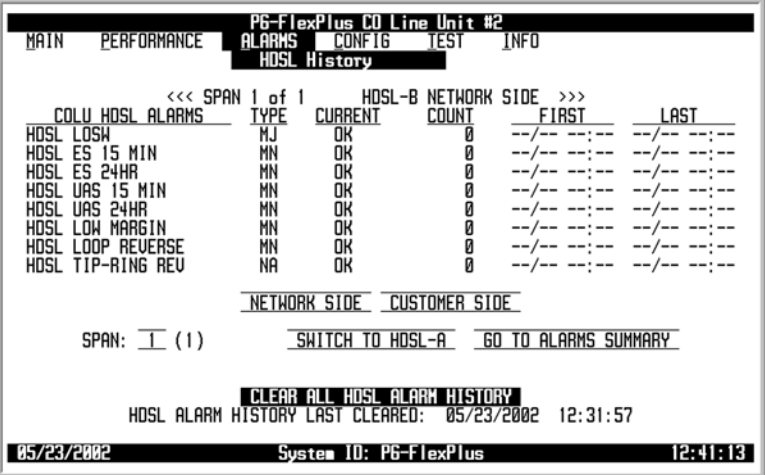
ALARMS — RTLU System History (Continued)

Step	Action
4	Press ESC . The Main Menu screen reappears.

ALARMS — HDSL History

This screen displays the HDSL alarm history for each span in the system. Information includes a count of the number of times each alarm occurred, the time and date of the first and last occurrence, the provisioned alarm type, and the current status.

ALARMS — HDSL History

Step	Action																																																						
1	<p>At the Main Menu screen, select ALARMS. Press ↓ to choose HDSL History. The following screen appears.</p> 																																																						
2	<p>Press ENTER. The following screen appears.</p>  <table border="1" data-bbox="500 1266 1218 1455"> <thead> <tr> <th>COLU HDSL ALARMS</th> <th>TYPE</th> <th>CURRENT</th> <th>COUNT</th> <th>FIRST</th> <th>LAST</th> </tr> </thead> <tbody> <tr> <td>HDSL LOSH</td> <td>MJ</td> <td>OK</td> <td>0</td> <td>--/--</td> <td>--/--</td> </tr> <tr> <td>HDSL ES 15 MIN</td> <td>MN</td> <td>OK</td> <td>0</td> <td>--/--</td> <td>--/--</td> </tr> <tr> <td>HDSL ES 24HR</td> <td>MN</td> <td>OK</td> <td>0</td> <td>--/--</td> <td>--/--</td> </tr> <tr> <td>HDSL UAS 15 MIN</td> <td>MN</td> <td>OK</td> <td>0</td> <td>--/--</td> <td>--/--</td> </tr> <tr> <td>HDSL UAS 24HR</td> <td>MN</td> <td>OK</td> <td>0</td> <td>--/--</td> <td>--/--</td> </tr> <tr> <td>HDSL LOW MARGIN</td> <td>MN</td> <td>OK</td> <td>0</td> <td>--/--</td> <td>--/--</td> </tr> <tr> <td>HDSL LOOP REVERSE</td> <td>MN</td> <td>OK</td> <td>0</td> <td>--/--</td> <td>--/--</td> </tr> <tr> <td>HDSL TIP-RING REV</td> <td>NA</td> <td>OK</td> <td>0</td> <td>--/--</td> <td>--/--</td> </tr> </tbody> </table> <p>The status <i>OK</i> displays in the <i>Current</i> column when the alarm is not present. The status <i>Active</i> displays when an alarm is present (see Table 17 on page 80 for HDSL Alarms). A description of the Alarm types reported is provided in Table 13 on page 70.</p>	COLU HDSL ALARMS	TYPE	CURRENT	COUNT	FIRST	LAST	HDSL LOSH	MJ	OK	0	--/--	--/--	HDSL ES 15 MIN	MN	OK	0	--/--	--/--	HDSL ES 24HR	MN	OK	0	--/--	--/--	HDSL UAS 15 MIN	MN	OK	0	--/--	--/--	HDSL UAS 24HR	MN	OK	0	--/--	--/--	HDSL LOW MARGIN	MN	OK	0	--/--	--/--	HDSL LOOP REVERSE	MN	OK	0	--/--	--/--	HDSL TIP-RING REV	NA	OK	0	--/--	--/--
COLU HDSL ALARMS	TYPE	CURRENT	COUNT	FIRST	LAST																																																		
HDSL LOSH	MJ	OK	0	--/--	--/--																																																		
HDSL ES 15 MIN	MN	OK	0	--/--	--/--																																																		
HDSL ES 24HR	MN	OK	0	--/--	--/--																																																		
HDSL UAS 15 MIN	MN	OK	0	--/--	--/--																																																		
HDSL UAS 24HR	MN	OK	0	--/--	--/--																																																		
HDSL LOW MARGIN	MN	OK	0	--/--	--/--																																																		
HDSL LOOP REVERSE	MN	OK	0	--/--	--/--																																																		
HDSL TIP-RING REV	NA	OK	0	--/--	--/--																																																		

ALARMS — HDSL History (Continued)

Step	Action
3	<p>The following actions can be taken:</p> <ol style="list-style-type: none"> To view the network side or the customer side of the HDSL alarm history, select the NETWORK SIDE or CUSTOMER SIDE button, then press ENTER. To view the HDSL alarm history for HDSL-B or HDSL-A, select the SWITCH TO HDSL-B or SWITCH TO HDSL-A button, then press ENTER. To view a summary of all active alarms, select the GO TO ALARMS SUMMARY button, then press ENTER. To clear the HDSL alarm history, select the CLEAR ALL HDSL ALARM HISTORY button, then press ENTER. From the HDSL ALARM HISTORY WILL BE CLEARED. CONTINUE (Y/N)? prompt, the following actions can be taken: <ul style="list-style-type: none"> To clear the HDSL alarm history, press Y. The following events occur: <ol style="list-style-type: none"> all HDSL alarm history counts are set to zero time and date that the registers were last cleared are updated

```

PG-FlexPlus CO Line Unit #2
MAIN PERFORMANCE ALARMS CONFIG TEST INFO
HDSL History

<<< SPAN 1 of 1 HDSL-B NETWORK SIDE >>>
COLU HDSL ALARMS TYPE CURRENT COUNT FIRST LAST
HDSL LOSW MJ OK 0 --/-- --:--
HDSL ES 15 MIN MN OK 0 --/-- --:--
HDSL ES 24HR MN OK 0 --/-- --:--
HDSL UAS 15 MIN MN OK 0 --/-- --:--
HDSL UAS 24HR MN OK 0 --/-- --:--
HDSL LOW MARGIN MN OK 0 --/-- --:--
HDSL LOOP REVERSE MN OK 0 --/-- --:--
HDSL TIP-RING REV NA OK 0 --/-- --:--

NETWORK SIDE CUSTOMER SIDE
SPAN: 1 (1) SWITCH TO HDSL-A GO TO ALARMS SUMMARY
HDSL ALARM HISTORY WILL BE CLEARED. CONTINUE (Y/N)?
CLEAR ALL HDSL ALARM HISTORY
HDSL ALARM HISTORY LAST CLEARED: 05/23/2002 12:31:57

05/23/2002 System ID: PG-FlexPlus 12:41:36
    
```

```

PG-FlexPlus CO Line Unit #2
MAIN PERFORMANCE ALARMS CONFIG TEST INFO
HDSL History

<<< SPAN 1 of 1 HDSL-B NETWORK SIDE >>>
COLU HDSL ALARMS TYPE CURRENT COUNT FIRST LAST
HDSL LOSW MJ OK 0 --/-- --:--
HDSL ES 15 MIN MN OK 0 --/-- --:--
HDSL ES 24HR MN OK 0 --/-- --:--
HDSL UAS 15 MIN MN OK 0 --/-- --:--
HDSL UAS 24HR MN OK 0 --/-- --:--
HDSL LOW MARGIN MN OK 0 --/-- --:--
HDSL LOOP REVERSE MN OK 0 --/-- --:--
HDSL TIP-RING REV NA OK 0 --/-- --:--

NETWORK SIDE CUSTOMER SIDE
SPAN: 1 (1) SWITCH TO HDSL-A GO TO ALARMS SUMMARY
CLEAR ALL HDSL ALARM HISTORY
HDSL ALARM HISTORY LAST CLEARED: 05/23/2002 12:41:59

05/23/2002 System ID: PG-FlexPlus 12:42:15
    
```



Clearing the alarm history does not clear any alarm that is currently active in the system.



If there is an active alarm, the count is set to 1 and the value in the LAST date and time field is set to the FIRST date and time field.

- To retain the existing HDSL alarm history, press **N**.


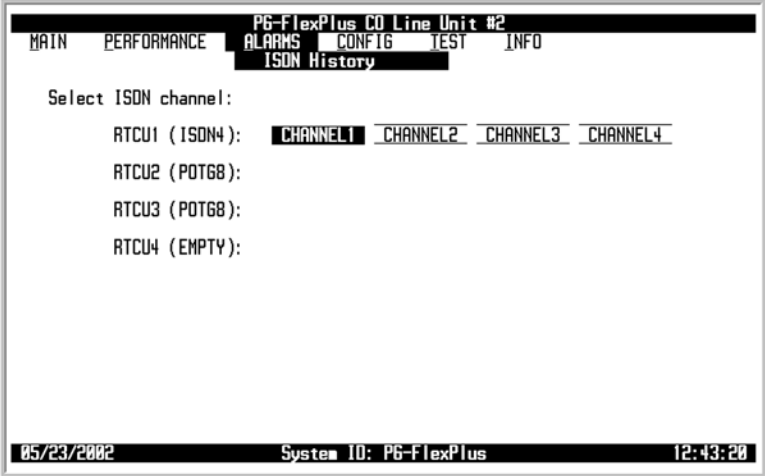
ALARMS — HDSL History (Continued)

Step	Action
4	Press ESC . The Main Menu screen reappears.


ALARMS — ISDN History

This screen displays the ISDN alarm history. Information includes the provisionable alarm type, the current status of the alarm, the number of times the alarm was reported, the date and time of the first and last occurrence, and the current status.



ALARMS — ISDN History

Step	Action
1	<p>At the Main Menu screen, select ALARMS. Press ↓ to choose ISDN History. The following screen appears.</p>  <p>The screenshot shows a terminal-style interface with a title bar 'PG-FlexPlus CO Line Unit #2'. Below it are menu options: MAIN, PERFORMANCE, ALARMS (highlighted), CONFIG, TEST, and INFO. Under 'ALARMS', there is a sub-menu: Alarms Summary, COLU System History, ATLU System History, HDSL History, ISDN History (highlighted), CU History, COLU Faults, and ATLU Faults. At the bottom, a status bar shows the date '05/23/2002', 'System ID: PG-FlexPlus', and the time '12:42:45'.</p>
2	<p>Press ENTER. The following screen appears.</p>  <p>The screenshot shows the 'ISDN History' screen. The title bar is 'PG-FlexPlus CO Line Unit #2'. Below it are menu options: MAIN, PERFORMANCE, ALARMS (highlighted), CONFIG, TEST, and INFO. Under 'ALARMS', there is a sub-menu: ISDN History (highlighted), CU History, COLU Faults, and ATLU Faults. The main content area says 'Select ISDN channel:' followed by four options: RTCU1 (ISDN4): CHANNEL1 (highlighted), CHANNEL2, CHANNEL3, CHANNEL4; RTCU2 (POT68); RTCU3 (POT68); and RTCU4 (EMPTY). At the bottom, a status bar shows the date '05/23/2002', 'System ID: PG-FlexPlus', and the time '12:43:20'.</p> <p>To view the ISDN History, select the ISDN channel, then press ENTER.</p>

ALARMS — ISDN History (Continued)

Step	Action
3	<p>To view the ISDN history data, select the ISDN channel, then press ENTER. The following screen appears.</p> <div data-bbox="479 426 1239 898" style="border: 1px solid black; padding: 5px;"> <pre> PG-FlexPlus CO Line Unit #2 MAIN PERFORMANCE ALARMS CONFIG TEST INFO ISDN History <<< ATCU: 1 CH: 1 >>> ATCU ALARMS TYPE CURRENT COUNT FIRST LAST DSL LOSS OF FRAME MN ACTIVE 1 05/23 10:11 05/23 10:11 DSL LOSS OF SIGNAL MN ACTIVE 1 05/23 10:11 05/23 10:11 D+ LOSS OF FRAME MN ACTIVE 1 05/23 10:11 05/23 10:11 D+ LOSS OF SIGNAL MN ACTIVE 1 05/23 10:11 05/23 10:11 ES HOURLY (CUST) MN OK 0 --/-- --:-- --/-- --:-- ES DAILY (CUST) MN OK 0 --/-- --:-- --/-- --:-- SES HOURLY (CUST) MN OK 0 --/-- --:-- --/-- --:-- SES DAILY (CUST) MN OK 0 --/-- --:-- --/-- --:-- ES HOURLY (NTWK) MN OK 0 --/-- --:-- --/-- --:-- ES DAILY (NTWK) MN OK 0 --/-- --:-- --/-- --:-- SES HOURLY (NTWK) MN OK 0 --/-- --:-- --/-- --:-- SES DAILY (NTWK) MN OK 0 --/-- --:-- --/-- --:-- GO TO ALARMS SUMMARY CLEAR ALL ISDN ALARM HISTORY ISDN ALARM HISTORY LAST CLEARED: 05/23/2002 12:31:57 05/23/2002 System ID: PG-FlexPlus 12:43:48 </pre> </div> <p> The status <i>OK</i> displays in the <i>Current</i> column when the alarm is not present. The status <i>Active</i> displays when an alarm is present. A description of the Alarm types reported is provided in Table 13 on page 70.</p>

ALARMS — ISDN History (Continued)

Step	Action
4	<p>The following actions can be taken:</p> <ol style="list-style-type: none"> To view a summary of all active alarms, select the GO TO ALARMS SUMMARY button, then press ENTER. To clear the ISDN alarm history, select the CLEAR ALL ISDN ALARM HISTORY button, then press ENTER. From the ISDN ALARM HISTORY WILL BE CLEARED. CONTINUE (Y/N)? prompt, the following actions can be taken: <ul style="list-style-type: none"> To clear the ISDN alarm history, press Y. The following events occur: <ol style="list-style-type: none"> all ISDN alarm history counts are set to zero time and date that the registers were last cleared are updated <div data-bbox="479 667 1242 1144" style="border: 1px solid black; padding: 5px; margin: 10px 0;"> <pre> PG-FlexPlus CO Line Unit #2 MAIN PERFORMANCE ALARMS CONFIG TEST INFO ISDN History <<< RTCU: 1 CH: 1 >>> RTCU ALARMS TYPE CURRENT COUNT FIRST LAST DSL LOSS OF FRAME MN ACTIVE 1 05/23 10:11 05/23 10:11 DSL LOSS OF SIGNAL MN ACTIVE 1 05/23 10:11 05/23 10:11 D+ LOSS OF FRAME MN ACTIVE 1 05/23 10:11 05/23 10:11 D+ LOSS OF SIGNAL MN ACTIVE 1 05/23 10:11 05/23 10:11 ES HOURLY (CUST) MN OK 0 --/-- --:-- --/-- --:-- ES DAILY (CUST) MN OK 0 --/-- --:-- --/-- --:-- SES HOURLY (CUST) MN OK 0 --/-- --:-- --/-- --:-- SES DAILY (CUST) MN OK 0 --/-- --:-- --/-- --:-- ES HOURLY (NTWK) MN OK 0 --/-- --:-- --/-- --:-- ES DAILY (NTWK) MN OK 0 --/-- --:-- --/-- --:-- SES HOURLY (NTWK) MN OK 0 --/-- --:-- --/-- --:-- SES DAILY (NTWK) MN OK 0 --/-- --:-- --/-- --:-- ISDN ALARM HISTORY WILL BE CLEARED. CONTINUE (Y/N)? GO TO ALARMS SUMMARY CLEAR ALL ISDN ALARM HISTORY ISDN ALARM HISTORY LAST CLEARED: 05/23/2002 12:31:57 05/23/2002 System ID: PG-FlexPlus 12:44:12 </pre> </div> <div data-bbox="479 1165 1242 1642" style="border: 1px solid black; padding: 5px; margin: 10px 0;"> <pre> PG-FlexPlus CO Line Unit #2 MAIN PERFORMANCE ALARMS CONFIG TEST INFO ISDN History <<< RTCU: 1 CH: 1 >>> RTCU ALARMS TYPE CURRENT COUNT FIRST LAST DSL LOSS OF FRAME MN ACTIVE 1 05/23 10:11 05/23 10:11 DSL LOSS OF SIGNAL MN ACTIVE 1 05/23 10:11 05/23 10:11 D+ LOSS OF FRAME MN ACTIVE 1 05/23 10:11 05/23 10:11 D+ LOSS OF SIGNAL MN ACTIVE 1 05/23 10:11 05/23 10:11 ES HOURLY (CUST) MN OK 0 --/-- --:-- --/-- --:-- ES DAILY (CUST) MN OK 0 --/-- --:-- --/-- --:-- SES HOURLY (CUST) MN OK 0 --/-- --:-- --/-- --:-- SES DAILY (CUST) MN OK 0 --/-- --:-- --/-- --:-- ES HOURLY (NTWK) MN OK 0 --/-- --:-- --/-- --:-- ES DAILY (NTWK) MN OK 0 --/-- --:-- --/-- --:-- SES HOURLY (NTWK) MN OK 0 --/-- --:-- --/-- --:-- SES DAILY (NTWK) MN OK 0 --/-- --:-- --/-- --:-- GO TO ALARMS SUMMARY CLEAR ALL ISDN ALARM HISTORY ISDN ALARM HISTORY LAST CLEARED: 05/23/2002 12:44:34 05/23/2002 System ID: PG-FlexPlus 12:44:37 </pre> </div>
	<p> Clearing the alarm history does not clear any alarm that is currently active in the system.</p> <p> If there is an active alarm, the count is set to 1 and the value in the LAST date and time field is set to the FIRST date and time field.</p> <ul style="list-style-type: none"> To retain the existing ISDN alarm history, press N.


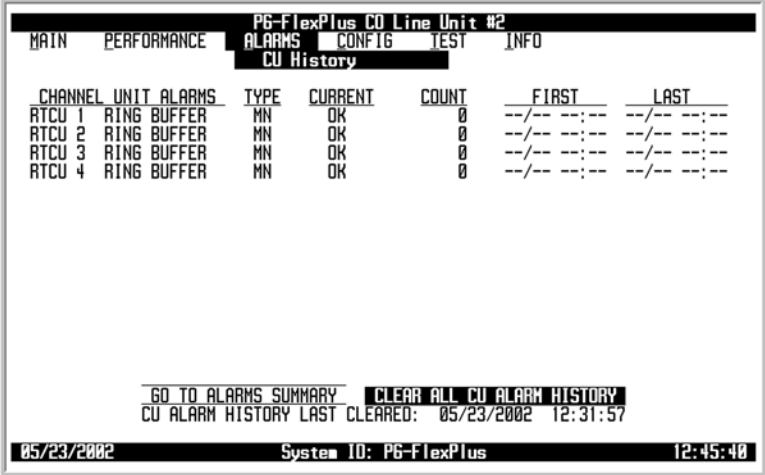
ALARMS — ISDN History (Continued)

Step	Action
5	Press ESC . The Main Menu screen reappears.

ALARMS — CU History

This screen displays the Channel Unit alarm history. Information includes the provisionable alarm type, the current status of the alarm, the number of times the alarm was reported, the date and time of the first and last occurrence and the current status.

ALARMS — CU History

Step	Action																																			
1	<p>At the Main Menu screen, select ALARMS. Press ↓ to choose CU History. The following screen appears.</p> 																																			
2	<p>Press ENTER. The following screen appears.</p>  <table border="1" data-bbox="487 1260 1218 1365"> <thead> <tr> <th>CHANNEL UNIT</th> <th>ALARMS</th> <th>TYPE</th> <th>CURRENT</th> <th>COUNT</th> <th>FIRST</th> <th>LAST</th> </tr> </thead> <tbody> <tr> <td>RTCU 1</td> <td>RING BUFFER</td> <td>MN</td> <td>OK</td> <td>0</td> <td>--/-- --:--</td> <td>--/-- --:--</td> </tr> <tr> <td>RTCU 2</td> <td>RING BUFFER</td> <td>MN</td> <td>OK</td> <td>0</td> <td>--/-- --:--</td> <td>--/-- --:--</td> </tr> <tr> <td>RTCU 3</td> <td>RING BUFFER</td> <td>MN</td> <td>OK</td> <td>0</td> <td>--/-- --:--</td> <td>--/-- --:--</td> </tr> <tr> <td>RTCU 4</td> <td>RING BUFFER</td> <td>MN</td> <td>OK</td> <td>0</td> <td>--/-- --:--</td> <td>--/-- --:--</td> </tr> </tbody> </table> <p>At the bottom of the screen, there are two options: GO TO ALARMS SUMMARY and CLEAR ALL CU ALARM HISTORY. Below these options, it says: CU ALARM HISTORY LAST CLEARED: 05/23/2002 12:31:57.</p>	CHANNEL UNIT	ALARMS	TYPE	CURRENT	COUNT	FIRST	LAST	RTCU 1	RING BUFFER	MN	OK	0	--/-- --:--	--/-- --:--	RTCU 2	RING BUFFER	MN	OK	0	--/-- --:--	--/-- --:--	RTCU 3	RING BUFFER	MN	OK	0	--/-- --:--	--/-- --:--	RTCU 4	RING BUFFER	MN	OK	0	--/-- --:--	--/-- --:--
CHANNEL UNIT	ALARMS	TYPE	CURRENT	COUNT	FIRST	LAST																														
RTCU 1	RING BUFFER	MN	OK	0	--/-- --:--	--/-- --:--																														
RTCU 2	RING BUFFER	MN	OK	0	--/-- --:--	--/-- --:--																														
RTCU 3	RING BUFFER	MN	OK	0	--/-- --:--	--/-- --:--																														
RTCU 4	RING BUFFER	MN	OK	0	--/-- --:--	--/-- --:--																														

The status *OK* displays in the *Current* column when the alarm is not present. The status *Active* displays when an alarm is present (see [Table 21 on page 92](#) for Channel Unit Alarms). A description of the Alarm types reported is provided in [Table 13 on page 70](#).

ALARMS — CU History (Continued)

Step	Action
3	<p>The following actions can be taken:</p> <ol style="list-style-type: none"> To view a summary of all active alarms, select the GO TO ALARMS SUMMARY button, then press ENTER. To clear the CU alarm history, select the CLEAR ALL CU ALARM HISTORY button, then press ENTER. From the CU ALARM HISTORY WILL BE CLEARED. CONTINUE (Y/N)? prompt, the following actions can be taken: <ul style="list-style-type: none"> To clear the CU alarm history, press Y. The following events occur: <ol style="list-style-type: none"> all CU alarm history counts are set to zero time and date that the registers were last cleared are updated <div data-bbox="479 667 1237 1144" style="border: 1px solid black; padding: 5px; margin: 10px 0;"> <pre> PG-FlexPlus CO Line Unit #2 MAIN PERFORMANCE ALARMS CONFIG TEST INFO CU History CHANNEL UNIT ALARMS TYPE CURRENT COUNT FIRST LAST RTCU 1 RING BUFFER MN OK 0 --/-- :--:-- --/-- :--:-- RTCU 2 RING BUFFER MN OK 0 --/-- :--:-- --/-- :--:-- RTCU 3 RING BUFFER MN OK 0 --/-- :--:-- --/-- :--:-- RTCU 4 RING BUFFER MN OK 0 --/-- :--:-- --/-- :--:-- CU ALARM HISTORY WILL BE CLEARED. CONTINUE (Y/N)? █ GO TO ALARMS SUMMARY CLEAR ALL CU ALARM HISTORY CU ALARM HISTORY LAST CLEARED: 05/23/2002 12:31:57 05/23/2002 System ID: PG-FlexPlus 12:46:05 </pre> </div> <div data-bbox="479 1165 1237 1642" style="border: 1px solid black; padding: 5px; margin: 10px 0;"> <pre> PG-FlexPlus CO Line Unit #2 MAIN PERFORMANCE ALARMS CONFIG TEST INFO CU History CHANNEL UNIT ALARMS TYPE CURRENT COUNT FIRST LAST RTCU 1 RING BUFFER MN OK 0 --/-- :--:-- --/-- :--:-- RTCU 2 RING BUFFER MN OK 0 --/-- :--:-- --/-- :--:-- RTCU 3 RING BUFFER MN OK 0 --/-- :--:-- --/-- :--:-- RTCU 4 RING BUFFER MN OK 0 --/-- :--:-- --/-- :--:-- GO TO ALARMS SUMMARY CLEAR ALL CU ALARM HISTORY CU ALARM HISTORY LAST CLEARED: 05/23/2002 12:46:29 05/23/2002 System ID: PG-FlexPlus 12:46:33 </pre> </div>
4	<p>Press ESC. The Main Menu screen reappears.</p>



Clearing the alarm history does not clear any alarm that is currently active in the system.







If there is an active alarm, the count is set to 1 and the value in the LAST date and time field is set to the FIRST date and time field.

- To retain the existing CU alarm history, press **N**.




ALARMS — COLU Faults

This screen displays any faults detected in the CO Line Unit.

Step	Action
1	<p>At the Main Menu screen, select ALARMS. Press  to choose COLU Faults. The following screen appears.</p> 
2	<p>Press ENTER. The following screen appears.</p>  <p> If there are no faults detected, then the COLU Faults screen displays the message NO FAULTS ON COT LINE UNIT. If there is a fault detected, a descriptive message appears.</p>
3	<p>Press Esc. The Main Menu screen reappears.</p>

ALARMS — RTLU Faults

This screen displays any faults detected on the RT Line Unit.

Step	Action
1	<p>At the Main Menu screen, select ALARMS. Press ↓ to choose RTLU Faults. The following screen appears.</p> 
2	<p>Press ENTER. The following screen appears.</p>  <p> If there are no faults detected, then the RT Faults screen displays the message NO FAULTS ON RT LINE UNIT. If there is a fault detected, a descriptive message appears.</p>
3	<p>Press ESC. The Main Menu screen reappears.</p>

CONFIGURATION MENU OPTIONS

The Configuration Menu provides access to system provisioning and setting all options to factory defaults, etc. Refer to [Table 11](#) for sub-menu options and descriptions, parameters and valid values.



ISDN menu selections are only present if ISDN is installed the system.

IMPORTANT



All RTLU Configuration Options are enabled from the COLU through the CONFIG\System Options\Allow System Provisioning From RTLU (set to Enabled) menu choices. Unless this has been set through the COLU, you will not be able to make Configuration Menu Option changes through the RTLU.

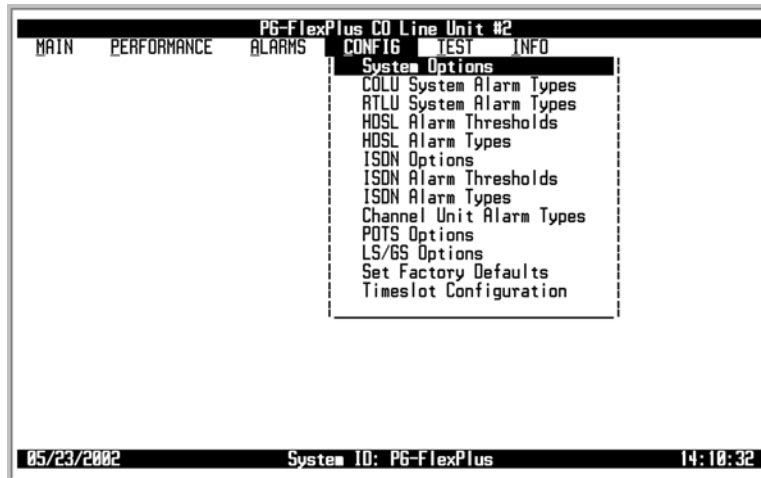


Table 11. Configuration Menu Options

Sub-Menu Options	Sub-Menu Descriptions	Parameters	Valid Values
System Options (See Table 12 on page 67 for System Options)	Set system options	System Options will be changed. Continue (Y/N)?	Y or N
COLU System Alarm Types (See Table 14 on page 71 for CO Alarms)	Provision COLU alarm types	System Alarm Types will be Changed. Continue (Y/N)?	Y or N


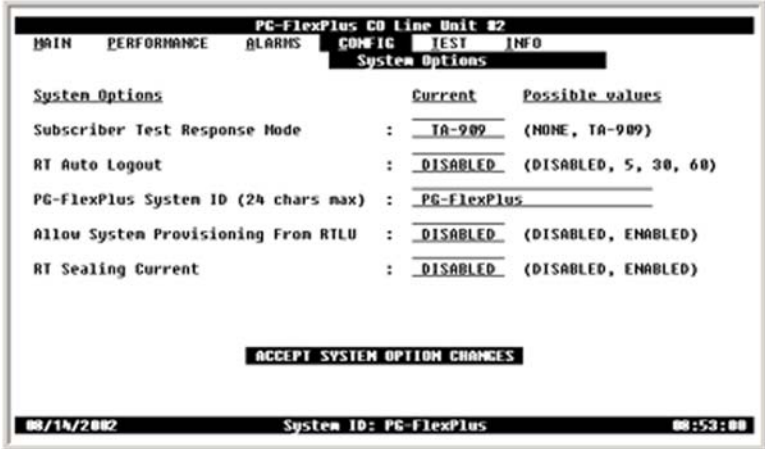
Sub-Menu Options	Sub-Menu Descriptions	Parameters	Valid Values
RTLU System Alarm Types (See Table 15 on page 74 for Types)	Provision RTLU alarm types	System Alarm Types will be Changed. Continue (Y/N)?	Y or N
HDSL Alarm Thresholds (See Table 16 on page 77 for HDSL Alarm Thresholds)	Provision HDSL alarm thresholds	HDSL Alarm Thresholds will be Changed. Continue (Y/N)?	Y or N
HDSL Alarm Types (See Table 17 on page 80 for HDSL Alarm Types)	Provision HDSL alarm types	HDSL Alarm Types will be Changed. Continue (Y/N)?	Y or N
ISDN Options (See Table 18 on page 83 for ISDN Options)	Provision ISDN options	ISDN Options will be changed. Continue (Y/N)?	Y or N
ISDN Alarm Thresholds (See Table 19 on page 86 for ISDN Alarm Thresholds)	Provision ISDN alarm thresholds	ISDN Thresholds will be changed. Continue (Y/N)?	Y or N
ISDN Alarm Types (See Table 20 on page 89 for ISDN Alarm Thresholds)	Provision ISDN alarm types	ISDN Alarm Types will be changed. Continue (Y/N)?	Y or N
Channel Unit Alarm Types (See Table 21 on page 92 for Channel Unit Alarm Types)	Provision channel unit alarm types	Channel Unit Alarm Types will be Changed. Continue (Y/N)?	Y or N

Sub-Menu Options	Sub-Menu Descriptions	Parameters	Valid Values
POTS Options (See Table 22 on page 95 for POTS Options)	Provision the ringing frequency for POTS lines	POTS Options will be Changed. Continue (Y/N)?	Y or N
LS/GS Options	View the Loop Start/Ground Start (LS/GS) circuit configuration		
Set Factory Defaults	Reset the provisionable items to the original factory settings	<ul style="list-style-type: none"> • Configuration data will be set to factory defaults (This May Be Service Affecting!) Continue (Y/N)? • Configuration data has been set to factory defaults. Press ESC to continue: 	<ul style="list-style-type: none"> • Y or N • ESC
Timeslot Configuration (See Table 23 on page 102 for Timeslot Configuration Options)	Allows mapping of a timeslot to a channel and channel unit	Timeslot Configuration will be Changed. Continue (Y/N)?	Y or N

CONFIG — System Options

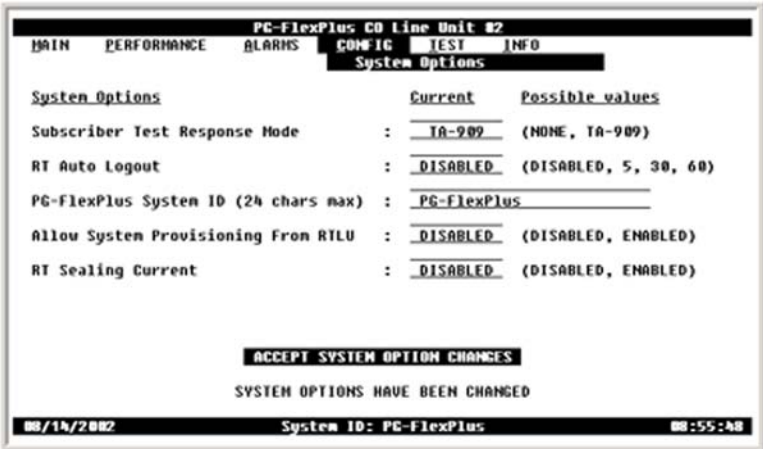
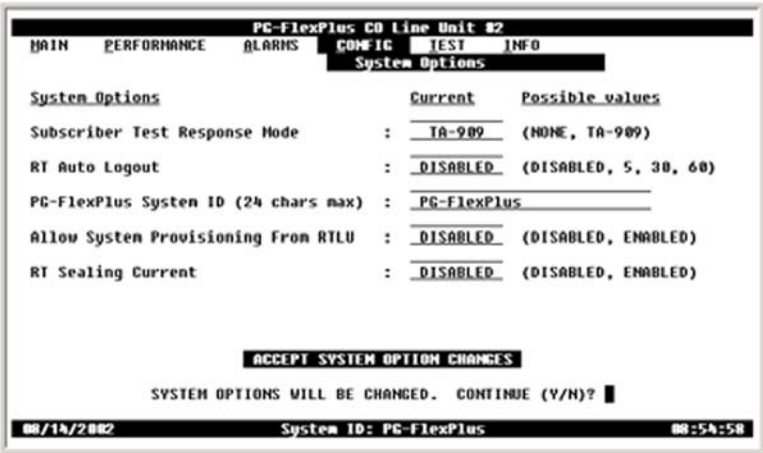
The System Options screen allows provisioning of system options such as Subscriber Test Response Mode and System ID. Refer to [Table 12 on page 67](#) for system options.

CONFIG — System Options

Step	Action
1	<p>At the Main Menu screen, select CONFIG. Press ↓ to choose System Options. The following screen appears.</p> 
2	<p>Press ENTER. The following screen appears.</p> 

CONFIG — System Options (Continued)

Step	Action
3	<p>The following actions can be taken:</p> <ol style="list-style-type: none"> To change the Subscriber Test Response Mode value, press SPACEBAR to toggle to the desired value, or press ↓ or ↑ to move to the next option. To change the RTLU Auto Logout value, press SPACEBAR to toggle to the desired value, or press ↓ or ↑ to move to the next option. To change the PG-FlexPlus System ID, type in a <i>System ID</i>, or press ↓ or ↑ to move to the next option. To change the Allow System Provisioning From RTLU value, press SPACEBAR to toggle to the desired value, or press ↓ or ↑ to move to the next option. To change the RT Sealing Current value, press SPACEBAR to toggle to the desired value, or press ↓ or ↑ to move to the next option. This option is displayed only on a locally powered system. To save the shelf options, select the ACCEPT SYSTEM OPTION CHANGES button, then press ENTER. From the SHELF OPTIONS WILL BE CHANGED. CONTINUE (Y/N)? prompt, the following actions can be taken: <ul style="list-style-type: none"> To save the shelf options, press Y. The following events occur: <ul style="list-style-type: none"> – all current values are set to desired values
4	<p>Press ESC. The Main Menu screen reappears.</p>



- To retain the existing shelf options on the Shelf Options screen, press **N**.


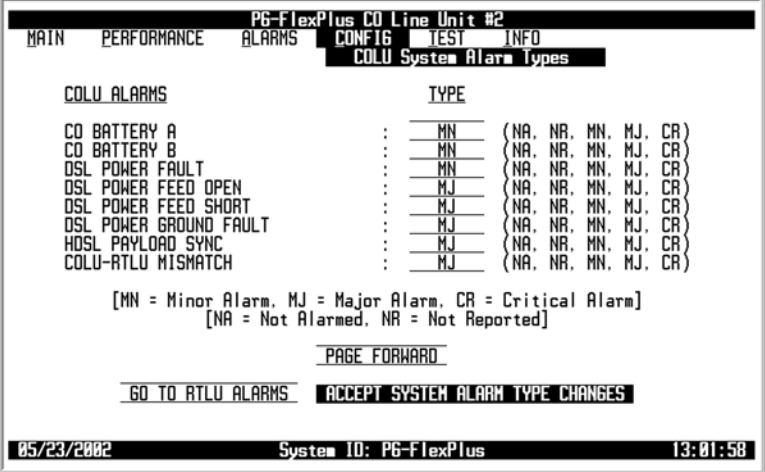
Table 12. System Options

System Options	Value	Description	Default
Subscriber Test Response Mode	NONE	Disables the test and there will be no response	TA-909
	TA-909	Performs the subscriber drop test at the RTLU and presents the TA-909 resistive signatures at the PMU	
RT Auto Logout	DISABLED	Auto logout feature is disabled	DISABLED
	5	Screens session logs out after 5 minutes of inactivity	
	30	Screens session logs out after 30 minutes of inactivity	
	60	Screens session logs out after 60 minutes of inactivity	
PG-FlexPlus System ID (24 chars max)	24 Alphanumeric Characters maximum	Configurable identification string for the system can be up to 24 characters. The System ID is always visible at the bottom of every screen. There are no special rules for changing the System ID. Any printable character, including space, is valid.	PG-FlexPlus
Allow System Provisioning from RTLU	DISABLED	Disables configuration from the RTLU	DISABLED
	ENABLED	Allows configuration from the RTLU	
* RT Sealing Current	DISABLED	Single Span: Disables current flow between the CO and RT Doubler Used: Disables current flow between the last doubler and RT	DISABLED
	ENABLED	Sealing Current load is automatically applied for a period of 15-20 seconds, once every 24 hours at the system clock time of 00:05	
* RT SEALING CURRENT option is displayed only on a locally powered system.			

CONFIG — COLU System Alarm Type

The COLU System Alarm Types screen allows provisioning of all COLU system alarms. Table 14 on page 71 shows the COLU system alarm fields, values, descriptions and default settings. Table 13 on page 70 provides a description of the Alarm types reported.

CONFIG — COLU System Alarm Type

Step	Action
1	<p>At the Main Menu screen, select CONFIG. Press ↓ to choose COLU System Alarm Types. The following screen appears.</p>  <p>The screenshot shows a terminal window with the following content:</p> <pre> PG-FlexPlus CO Line Unit #2 MAIN PERFORMANCE ALARMS CONFIG TEST INFO System Options COLU System Alarm Types RTLU System Alarm Types HDSL Alarm Thresholds HDSL Alarm Types ISDN Options ISDN Alarm Thresholds ISDN Alarm Types Channel Unit Alarm Types POTS Options LS/BS Options Set Factory Defaults Timeslot Configuration 05/23/2002 System ID: PG-FlexPlus 14:11:04 </pre>
2	<p>Press ENTER. The following screen appears.</p>  <p>The screenshot shows a terminal window with the following content:</p> <pre> PG-FlexPlus CO Line Unit #2 MAIN PERFORMANCE ALARMS CONFIG TEST INFO COLU System Alarm Types COLU ALARMS TYPE CO BATTERY A : MN (NA, NR, MN, MJ, CR) CO BATTERY B : MN (NA, NR, MN, MJ, CR) DSL POWER FAULT : MN (NA, NR, MN, MJ, CR) DSL POWER FEED OPEN : MJ (NA, NR, MN, MJ, CR) DSL POWER FEED SHORT : MJ (NA, NR, MN, MJ, CR) DSL POWER GROUND FAULT : MJ (NA, NR, MN, MJ, CR) HDSL PAYLOAD SYNC : MJ (NA, NR, MN, MJ, CR) COLU-RTLU MISMATCH : MJ (NA, NR, MN, MJ, CR) [MN = Minor Alarm, MJ = Major Alarm, CR = Critical Alarm] [NA = Not Alarmed, NR = Not Reported] PAGE FORWARD GO TO RTLU ALARMS ACCEPT SYSTEM ALARM TYPE CHANGES 05/23/2002 System ID: PG-FlexPlus 13:01:58 </pre>

CONFIG — COLU System Alarm Type (Continued)

Step	Action
3	<p>The following actions can be taken:</p> <ol style="list-style-type: none"> To change the field value, press SPACEBAR to toggle to the desired value, or press ↓ or ↑ to move to the next option. To scroll through the entire set of system alarms, select the PAGE FORWARD or PAGE BACKWARD button, then press ENTER. To view the RTLU alarm information, select the GO TO RTLU ALARMS button, then press ENTER. To save the COLU alarm type changes, select the ACCEPT SYSTEM ALARM TYPE CHANGES button, then press ENTER. From the SYSTEM ALARM TYPE CHANGES WILL BE CHANGED. CONTINUE (Y/N)? prompt, the following actions can be taken: <ul style="list-style-type: none"> To save the COLU alarm type changes, press Y. The following events occur: <ul style="list-style-type: none"> – all current values are set to desired values
4	<p>Press Esc. The Main Menu screen reappears.</p>

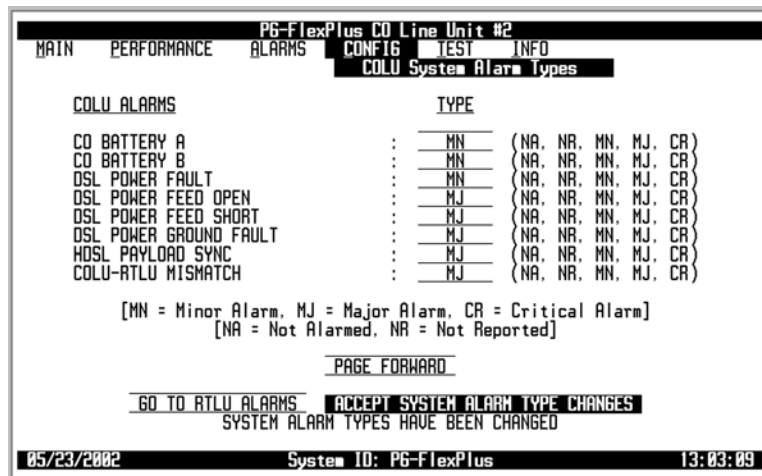
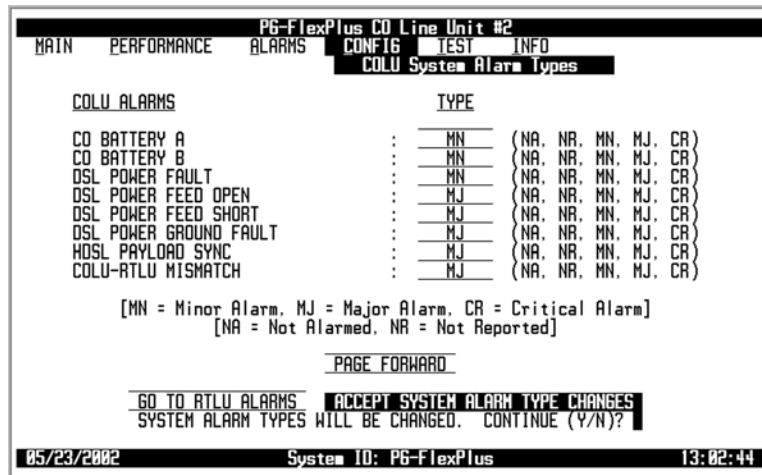


Table 13. Alarm Types Reported

Settings	Reported	Alarm LED Lit	Main Shelf Summary	History Updated
CR – Critical	Yes	Yes	Yes	Yes
MJ – Major	Yes	Yes	Yes	Yes
MN – Minor	Yes	Yes	Yes	Yes
NA – Not Alarmed	No	No	No	Yes
NR – Not Reported	No	No	No	No


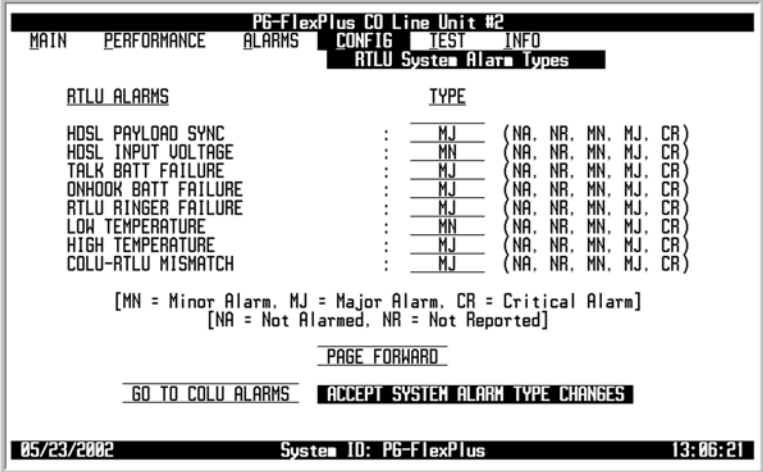
Table 14. CO Alarms

Alarm	Value	Description	Default
CO BATTERY A	CR, MJ, MN, NA, NR	COLU detected missing A -48 V power source. If power is verified at the unit, then the unit must be replaced, because it has a blown fuse.	MN
CO BATTERY B	CR, MJ, MN, NA, NR	COLU detected missing B -48V power source. If power is verified at the unit, then the unit must be replaced, because it has a blown fuse.	MN
DSL POWER FAULT	CR, MJ, MN, NA, NR	DSL Power Fault	MN
DSL POWER FEED OPEN	CR, MJ, MN, NA, NR	COLU cannot power the RTLU due to an open circuit. A possible cause is that there is no RTLU at the other end of the circuit. No user intervention is required	MJ
DSL POWER FEED SHORT	CR, MJ, MN, NA, NR	COLU cannot power the RTLU due to a short circuit. A PFS alarm indicates an overcurrent condition due to wire shorting or an RTLU failure. COLU automatically turns off power feeding to both loops in response to a PFO or PFS condition on a single loop.	MJ
DSL POWER GROUND FAULT	CR, MJ, MN, NA, NR	Ground fault detected on HDSL loop	MJ
HDSL PAYLOAD SYNC	CR, MJ, MN, NA, NR	HDSL payload is out of synchronization	MJ
COLU-RTLU MISMATCH	CR, MJ, MN, NA, NR	Incompatible COLU and RTLUs installed, for example, an incompatible RTLU is installed	MJ
RTCUCONFIG MISMATCH	CR, MJ, MN, NA, NR	Incompatible COLU and RTCUs installed, for example, a POTS COCU is connected to an ISDN RTCU	MN
NO RTLU S/W	CR, MJ, MN, NA, NR	RTLU has no application software and is awaiting software download	MJ
INVALID SLOT	CR, MJ, MN, NA, NR	RTCUC installed in an invalid slot	MJ
LOW TEMPERATURE	CR, MJ, MN, NA, NR	Temperature at RTLU is too low	MN
HIGH TEMPERATURE	CR, MJ, MN, NA, NR	Temperature at RTLU is too high	MJ
EEPROM FAILURE	CR, MJ, MN, NA, NR	A checksum error has been detected on COLUs EEPROM data	MN
MUX PARITY	CR, MJ, MN, NA, NR	Errors are detected between the COLU and the PMX	MJ
COLU HW FAULT	CR, MJ, MN, NA, NR	COLU hardware fault detected in COLU hardware	MN

CONFIG — RTLU System Alarm Types

The RTLU System Alarm Types screen allows provisioning of all RTLU system alarms. Table 15 on page 74 shows the RTLU system alarm fields, values, descriptions and default settings. Table 13 on page 70 provides a description of the Alarm types reported.

CONFIG — RTLU System Alarm Types

Step	Action
1	<p>At the Main Menu screen, select CONFIG. Press ↓ to choose RTLU System Alarm Types. The following screen appears.</p>  <p>The screenshot shows a terminal window with the following content:</p> <pre> PG-FlexPlus CO Line Unit #2 MAIN PERFORMANCE ALARMS CONFIG TEST INFO System Options COLU System Alarm Types RTLU System Alarm Types HOSL Alarm Thresholds HOSL Alarm Types ISDN Options ISDN Alarm Thresholds ISDN Alarm Types Channel Unit Alarm Types POTS Options LS/GS Options Set Factory Defaults Timeslot Configuration 05/23/2002 System ID: PG-FlexPlus 14:11:29 </pre>
2	<p>Press ENTER. The following screen appears.</p>  <p>The screenshot shows a terminal window with the following content:</p> <pre> PG-FlexPlus CO Line Unit #2 MAIN PERFORMANCE ALARMS CONFIG TEST INFO RTLU System Alarm Types RTLU ALARMS TYPE HOSL PAYLOAD SYNC : MJ (NA, NR, MN, MJ, CR) HOSL INPUT VOLTAGE : MN (NA, NR, MN, MJ, CR) TALK BATT FAILURE : MJ (NA, NR, MN, MJ, CR) ONHOOK BATT FAILURE : MJ (NA, NR, MN, MJ, CR) RTLU RINGER FAILURE : MJ (NA, NR, MN, MJ, CR) LOW TEMPERATURE : MN (NA, NR, MN, MJ, CR) HIGH TEMPERATURE : MJ (NA, NR, MN, MJ, CR) COLU-RTLU MISMATCH : MJ (NA, NR, MN, MJ, CR) [MN = Minor Alarm, MJ = Major Alarm, CR = Critical Alarm] [NA = Not Alarmed, NR = Not Reported] PAGE FORWARD GO TO COLU ALARMS ACCEPT SYSTEM ALARM TYPE CHANGES 05/23/2002 System ID: PG-FlexPlus 13:06:21 </pre>

CONFIG — RTLU System Alarm Types (Continued)


Step	Action
3	<p>The following actions can be taken:</p> <p>a. To change the field value, press SPACEBAR to toggle to the desired value, or press ↓ or ↑ to move to the next option.</p>  <p>HDSL INPUT VOLTAGE option is displayed, set and cleared only on a line-powered system.</p> <p>b. To scroll through the entire set of system alarms, select the PAGE FORWARD or PAGE BACKWARD button, then press ENTER.</p> <p>c. To view the COLU alarm information, select the GO TO COLU ALARMS button, then press ENTER.</p> <p>d. To save the RTLU alarm type changes, select the ACCEPT SYSTEM ALARM TYPE CHANGES button, then press ENTER. From the SYSTEM ALARM TYPE CHANGES WILL BE CHANGED. CONTINUE (Y/N)? prompt, the following actions can be taken:</p> <ul style="list-style-type: none"> To save the RTLU alarm type changes, press Y. The following events occur: <ul style="list-style-type: none"> – all current values are set to desired values <div data-bbox="479 840 1239 1312" style="border: 1px solid black; padding: 5px; margin: 10px 0;"> <pre> PG-FlexPlus CO Line Unit #2 MAIN PERFORMANCE ALARMS CONFIG TEST INFO RTLU System Alarm Types RTLU ALARMS TYPE HDSL PAYLOAD SYNC : MJ (NA, NR, MN, MJ, CR) HDSL INPUT VOLTAGE : MN (NA, NR, MN, MJ, CR) TALK BATT FAILURE : MJ (NA, NR, MN, MJ, CR) ONHOOK BATT FAILURE : MJ (NA, NR, MN, MJ, CR) RTLU RINGER FAILURE : MJ (NA, NR, MN, MJ, CR) LOW TEMPERATURE : MN (NA, NR, MN, MJ, CR) HIGH TEMPERATURE : MJ (NA, NR, MN, MJ, CR) COLU-RTLU MISMATCH : MJ (NA, NR, MN, MJ, CR) [MN = Minor Alarm, MJ = Major Alarm, CR = Critical Alarm] [NA = Not Alarmed, NR = Not Reported] PAGE FORWARD GO TO COLU ALARMS ACCEPT SYSTEM ALARM TYPE CHANGES SYSTEM ALARM TYPES WILL BE CHANGED. CONTINUE (Y/N)? 05/23/2002 System ID: PG-FlexPlus 13:06:50 </pre> </div> <div data-bbox="479 1344 1239 1816" style="border: 1px solid black; padding: 5px; margin: 10px 0;"> <pre> PG-FlexPlus CO Line Unit #2 MAIN PERFORMANCE ALARMS CONFIG TEST INFO RTLU System Alarm Types RTLU ALARMS TYPE HDSL PAYLOAD SYNC : MJ (NA, NR, MN, MJ, CR) HDSL INPUT VOLTAGE : MN (NA, NR, MN, MJ, CR) TALK BATT FAILURE : MJ (NA, NR, MN, MJ, CR) ONHOOK BATT FAILURE : MJ (NA, NR, MN, MJ, CR) RTLU RINGER FAILURE : MJ (NA, NR, MN, MJ, CR) LOW TEMPERATURE : MN (NA, NR, MN, MJ, CR) HIGH TEMPERATURE : MJ (NA, NR, MN, MJ, CR) COLU-RTLU MISMATCH : MJ (NA, NR, MN, MJ, CR) [MN = Minor Alarm, MJ = Major Alarm, CR = Critical Alarm] [NA = Not Alarmed, NR = Not Reported] PAGE FORWARD GO TO COLU ALARMS ACCEPT SYSTEM ALARM TYPE CHANGES SYSTEM ALARM TYPES HAVE BEEN CHANGED 05/23/2002 System ID: PG-FlexPlus 13:07:22 </pre> </div>
4	<p>Press ESC. The Main Menu screen reappears.</p>


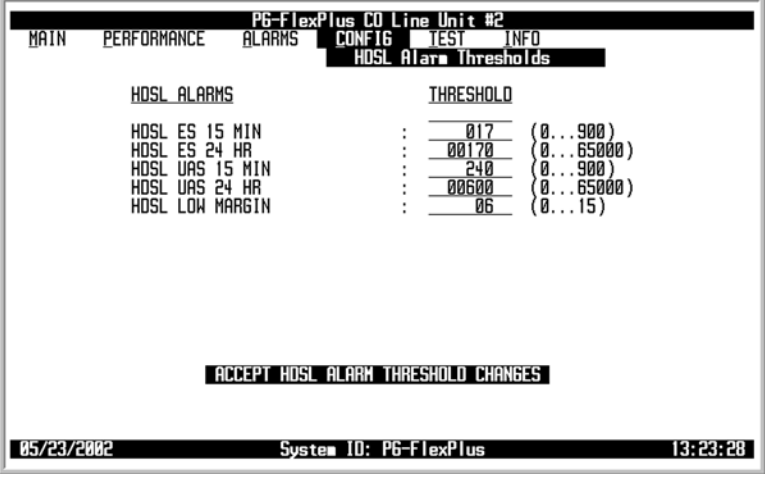
Table 15. RTLU Alarms

Alarms	Value	Description	Default
HDSL PAYLOAD SYNC	CR, MJ, MN, NA, NR	HDSL payload is out of sync	MJ
* HDSL INPUT VOLTAGE	CR, MJ, MN, NA, NR	HDSL input voltage is less than 170 Vdc	MN
TALK BATT FAILURE	CR, MJ, MN, NA, NR	Talk battery failure at RTLU	MJ
ONHOOK BATT FAILURE	CR, MJ, MN, NA, NR	On-hook battery failure at RTLU	MJ
RTL U RINGER FAILURE	CR, MJ, MN, NA, NR	RT ringer failure at RTLU	MJ
LOW TEMPERATURE	CR, MJ, MN, NA, NR	Temperature at RTLU is too low	MN
HIGH TEMPERATURE	CR, MJ, MN, NA, NR	Temperature at RTLU is too high	MJ
COLU-RTL U MISMATCH	CR, MJ, MN, NA, NR	COLU-RTL U mismatch	MJ
RTL CU HW SUPPORTED	CR, MJ, MN, NA, NR	RTL CU hardware installed is not supported	MN
EEPROM FAILURE	CR, MJ, MN, NA, NR	COLU memory checksum is incorrect	MN
RTL U HW FAULT	CR, MJ, MN, NA, NR	Fault detected in RTLU hardware	MN
RT EXTERNAL ALARM 1	CR, MJ, MN, NA, NR	RT External 1 Alarm reported	MN
RT EXTERNAL ALARM 2	CR, MJ, MN, NA, NR	RT External 2 Alarm reported	MN
RT EXTERNAL ALARM 3	CR, MJ, MN, NA, NR	RT External 3 Alarm reported	MN
RT EXTERNAL ALARM 4	CR, MJ, MN, NA, NR	RT External 4 Alarm reported	MN
RT FAN FAILURE	CR, MJ, MN, NA, NR	RT Fan Failure reported	MN
* HDSL INPUT VOLTAGE option is displayed, set and cleared only on a line-powered system.			

CONFIG — HDSL Alarm Thresholds

This screen allows the provisioning of the threshold crossing values for the 15 minute and 24-hour ES and UAS counts and HDSL margin. [Table 16 on page 77](#) shows the HDSL Alarm Threshold fields, values, descriptions and default settings.

CONFIG — HDSL Alarm Thresholds

Step	Action
1	<p>At the Main Menu screen, select CONFIG. Press ↓ to choose HDSL Alarm Thresholds. The following screen appears.</p>  <p>The screenshot shows a terminal window with the following content:</p> <pre> PG-FlexPlus CO Line Unit #2 MAIN PERFORMANCE ALARMS CONFIG TEST INFO System Options COLU System Alarm Types RTLU System Alarm Types HDSL Alarm Thresholds HDSL Alarm Types ISDN Options ISDN Alarm Thresholds ISDN Alarm Types Channel Unit Alarm Types POTS Options LS/GS Options Set Factory Defaults Timeslot Configuration 05/23/2002 System ID: PG-FlexPlus 14:12:18 </pre>
2	<p>Press ENTER. The following screen appears.</p>  <p>The screenshot shows a terminal window with the following content:</p> <pre> PG-FlexPlus CO Line Unit #2 MAIN PERFORMANCE ALARMS CONFIG TEST INFO HDSL Alarm Thresholds HDSL ALARMS THRESHOLD HDSL ES 15 MIN : 017 (0..900) HDSL ES 24 HR : 00170 (0..65000) HDSL UAS 15 MIN : 240 (0..900) HDSL UAS 24 HR : 00600 (0..65000) HDSL LOW MARGIN : 06 (0..15) ACCEPT HDSL ALARM THRESHOLD CHANGES 05/23/2002 System ID: PG-FlexPlus 13:23:28 </pre>

CONFIG — HDSL Alarm Thresholds (Continued)

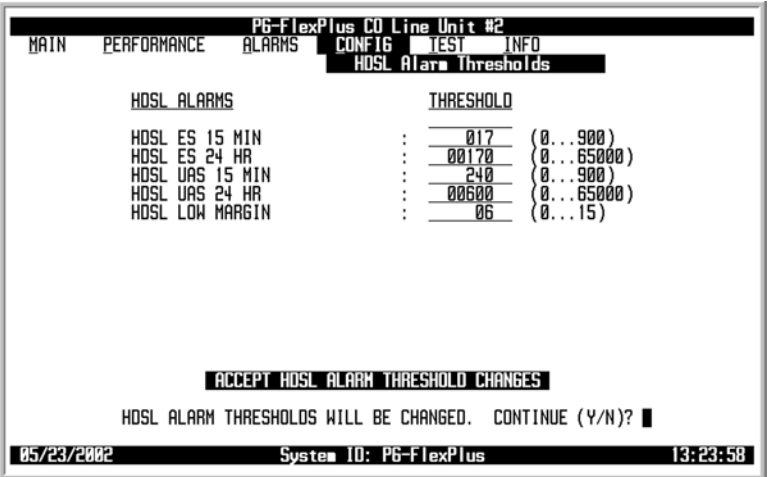
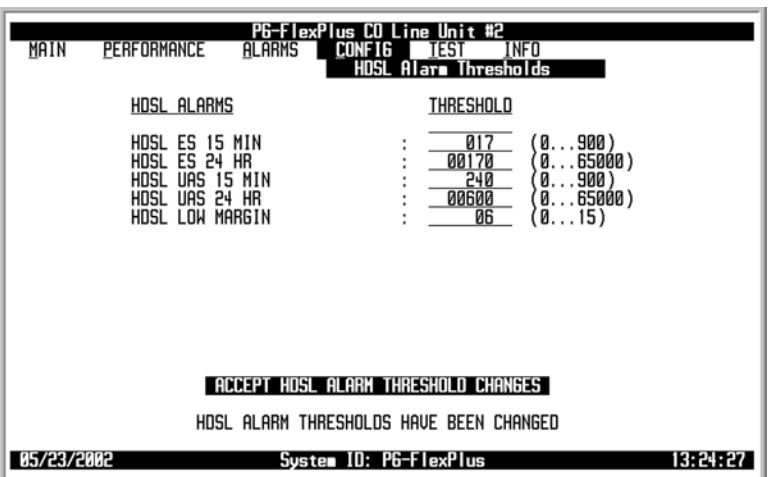
Step	Action
3	<p>The following actions can be taken:</p> <ol style="list-style-type: none"> To change the threshold value, press ↓ or ↑ to go to the appropriate HDSL Alarm Threshold. Then type the appropriate numbers on the keypad for each field. To save the HDSL Alarm Threshold changes, select the ACCEPT HDSL ALARM THRESHOLD CHANGES button, then press ENTER. From the HDSL ALARM THRESHOLDS WILL BE CHANGED. CONTINUE (Y/N)? prompt, the following actions can be taken: <ul style="list-style-type: none"> To save the HDSL Alarm Threshold changes, press Y. The following events occur: <ul style="list-style-type: none"> – all current values are set to desired values <div style="text-align: center;">  <p>The screenshot shows a terminal window titled "PG-FlexPlus CO Line Unit #2". The menu options are MAIN, PERFORMANCE, ALARMS, CONFIG, TEST, and INFO. The "CONFIG" option is selected, leading to the "HDSL Alarm Thresholds" screen. The screen displays a table of HDSL ALARMS and their THRESHOLD values. The current values are: HDSL ES 15 MIN (017), HDSL ES 24 HR (00170), HDSL UAS 15 MIN (240), HDSL UAS 24 HR (00600), and HDSL LOW MARGIN (06). Below the table is a prompt: "ACCEPT HDSL ALARM THRESHOLD CHANGES" and "HDSL ALARM THRESHOLDS WILL BE CHANGED. CONTINUE (Y/N)?". The footer shows the date 05/23/2002, System ID: PG-FlexPlus, and time 13:23:58.</p> </div> <div style="text-align: center;">  <p>The screenshot shows the same terminal window as above. The "ACCEPT HDSL ALARM THRESHOLD CHANGES" prompt is still present. Below it, the message "HDSL ALARM THRESHOLDS HAVE BEEN CHANGED" is displayed. The footer shows the date 05/23/2002, System ID: PG-FlexPlus, and time 13:24:27.</p> </div> <ul style="list-style-type: none"> To retain the existing HDSL Alarm Thresholds, press N.
4	<p>Press ESC. The Main Menu screen reappears.</p>


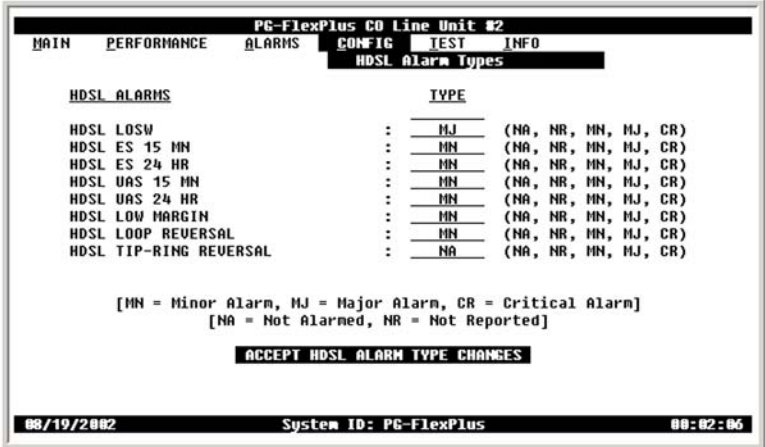
Table 16. HDSL Alarm Thresholds

Alarms	Value	Description	Default
HDSL ES 15 MIN	0 to 900	HDSL ES 15 minutes alarm is generated if the current 15-minute HDSL ES count reaches or exceeds this threshold	17
HDSL ES 24 HOUR	0 to 65,000	HDSL ES 24 hour alarm is generated if ES 24 hour counts become equal to or greater than this threshold	170
HDSL UAS 15 MIN	0 to 900	HDSL UAS-15 minutes alarm is generated in the current 15-minute HDSL UAS count reaches or exceeds this threshold	240
HDSL UAS 24 HR	0 to 65,000	HDSL UAS-24 hour alarm is generated if UAS counts become equal to or greater than this threshold	600
HDSL LOW MARGIN	0 to 15	HDSL Low Margin alarm is generated if margin drops equal to or less than this threshold	6

CONFIG — HDSL Alarm Types

This screen allows provisioning of the alarm types for all HDSL alarms. Table 17 on page 80 lists the HDSL Alarm Type fields, values, descriptions and default settings.

CONFIG — HDSL Alarm Types

Step	Action																		
1	<p>At the Main Menu screen, select CONFIG. Press ↓ to choose HDSL Alarm Types. The following screen appears.</p>  <p>The screenshot shows a terminal window titled "PG-FlexPlus CO Line Unit #2". The menu options are: MAIN, PERFORMANCE, ALARMS, CONFIG (highlighted), TEST, and INFO. Under CONFIG, the options are: System Options, COLU System Alarm Types, RTLU System Alarm Types, HDSL Alarm Thresholds, HDSL Alarm Types (highlighted), ISDN Options, ISDN Alarm Thresholds, ISDN Alarm Types, Channel Unit Alarm Types, POTS Options, LS/GS Options, Set Factory Defaults, and Timeslot Configuration. The status bar at the bottom shows "05/23/2002", "System ID: PG-FlexPlus", and "14:12:43".</p>																		
2	<p>Press ENTER. The following screen appears.</p>  <p>The screenshot shows a terminal window titled "PG-FlexPlus CO Line Unit #2". The menu options are: MAIN, PERFORMANCE, ALARMS, CONFIG (highlighted), TEST, and INFO. Under CONFIG, the option "HDSL Alarm Types" is highlighted. The screen displays a table of HDSL alarm types and their configurations:</p> <table border="1"> <thead> <tr> <th>HDSL ALARMS</th> <th>TYPE</th> </tr> </thead> <tbody> <tr> <td>HDSL LOSV</td> <td>: <u>MJ</u> (NA, NR, MN, MJ, CR)</td> </tr> <tr> <td>HDSL ES 15 MN</td> <td>: <u>MN</u> (NA, NR, MN, MJ, CR)</td> </tr> <tr> <td>HDSL ES 24 HR</td> <td>: <u>MN</u> (NA, NR, MN, MJ, CR)</td> </tr> <tr> <td>HDSL UAS 15 MN</td> <td>: <u>MN</u> (NA, NR, MN, MJ, CR)</td> </tr> <tr> <td>HDSL UAS 24 HR</td> <td>: <u>MN</u> (NA, NR, MN, MJ, CR)</td> </tr> <tr> <td>HDSL LOW MARGIN</td> <td>: <u>MN</u> (NA, NR, MN, MJ, CR)</td> </tr> <tr> <td>HDSL LOOP REVERSAL</td> <td>: <u>MN</u> (NA, NR, MN, MJ, CR)</td> </tr> <tr> <td>HDSL TIP-RING REVERSAL</td> <td>: <u>NA</u> (NA, NR, MN, MJ, CR)</td> </tr> </tbody> </table> <p>Legend: [MN = Minor Alarm, MJ = Major Alarm, CR = Critical Alarm] [NA = Not Alarmed, NR = Not Reported]</p> <p>ACCEPT HDSL ALARM TYPE CHANGES</p> <p>The status bar at the bottom shows "08/19/2002", "System ID: PG-FlexPlus", and "00:02:06".</p>	HDSL ALARMS	TYPE	HDSL LOSV	: <u>MJ</u> (NA, NR, MN, MJ, CR)	HDSL ES 15 MN	: <u>MN</u> (NA, NR, MN, MJ, CR)	HDSL ES 24 HR	: <u>MN</u> (NA, NR, MN, MJ, CR)	HDSL UAS 15 MN	: <u>MN</u> (NA, NR, MN, MJ, CR)	HDSL UAS 24 HR	: <u>MN</u> (NA, NR, MN, MJ, CR)	HDSL LOW MARGIN	: <u>MN</u> (NA, NR, MN, MJ, CR)	HDSL LOOP REVERSAL	: <u>MN</u> (NA, NR, MN, MJ, CR)	HDSL TIP-RING REVERSAL	: <u>NA</u> (NA, NR, MN, MJ, CR)
HDSL ALARMS	TYPE																		
HDSL LOSV	: <u>MJ</u> (NA, NR, MN, MJ, CR)																		
HDSL ES 15 MN	: <u>MN</u> (NA, NR, MN, MJ, CR)																		
HDSL ES 24 HR	: <u>MN</u> (NA, NR, MN, MJ, CR)																		
HDSL UAS 15 MN	: <u>MN</u> (NA, NR, MN, MJ, CR)																		
HDSL UAS 24 HR	: <u>MN</u> (NA, NR, MN, MJ, CR)																		
HDSL LOW MARGIN	: <u>MN</u> (NA, NR, MN, MJ, CR)																		
HDSL LOOP REVERSAL	: <u>MN</u> (NA, NR, MN, MJ, CR)																		
HDSL TIP-RING REVERSAL	: <u>NA</u> (NA, NR, MN, MJ, CR)																		

CONFIG — HDSL Alarm Types (Continued)

Step	Action
3	<p>The following actions can be taken:</p> <ol style="list-style-type: none"> To change the field value, press SPACEBAR to toggle to the desired value, or press ↓ or ↑ to move to the next option. To save the HDSL Alarm Type changes, select the ACCEPT HDSL ALARM TYPE CHANGES button, then press ENTER. From the HDSL ALARM TYPES WILL BE CHANGED. CONTINUE (Y/N)? prompt, the following actions can be taken: <ul style="list-style-type: none"> To save the HDSL Alarm Types changes, press Y. The following events occur: <ul style="list-style-type: none"> – all current values are set to desired values <div data-bbox="479 655 1239 1102" style="border: 1px solid black; padding: 5px; margin: 10px 0;"> <pre> PC-FlexPlus C0 Line Unit #2 MAIN PERFORMANCE ALARMS CONFIG TEST INFO HDSL Alarm Types HDSL ALARMS TYPE HDSL LOSW : MJ (NA, NR, MN, MJ, CR) HDSL ES 15 MN : MN (NA, NR, MN, MJ, CR) HDSL ES 24 HR : MN (NA, NR, MN, MJ, CR) HDSL UAS 15 MN : MN (NA, NR, MN, MJ, CR) HDSL UAS 24 HR : MN (NA, NR, MN, MJ, CR) HDSL LOW MARGIN : MN (NA, NR, MN, MJ, CR) HDSL LOOP REVERSAL : MN (NA, NR, MN, MJ, CR) HDSL TIP-RING REVERSAL : NA (NA, NR, MN, MJ, CR) [MN = Minor Alarm, MJ = Major Alarm, CR = Critical Alarm] [NA = Not Alarmed, NR = Not Reported] ACCEPT HDSL ALARM TYPE CHANGES HDSL ALARM TYPES WILL BE CHANGED. CONTINUE (Y/N)? 08/19/2002 System ID: PC-FlexPlus 08:02:46 </pre> </div> <div data-bbox="479 1161 1239 1608" style="border: 1px solid black; padding: 5px; margin: 10px 0;"> <pre> PC-FlexPlus C0 Line Unit #2 MAIN PERFORMANCE ALARMS CONFIG TEST INFO HDSL Alarm Types HDSL ALARMS TYPE HDSL LOSW : MJ (NA, NR, MN, MJ, CR) HDSL ES 15 MN : MN (NA, NR, MN, MJ, CR) HDSL ES 24 HR : MN (NA, NR, MN, MJ, CR) HDSL UAS 15 MN : MN (NA, NR, MN, MJ, CR) HDSL UAS 24 HR : MN (NA, NR, MN, MJ, CR) HDSL LOW MARGIN : MN (NA, NR, MN, MJ, CR) HDSL LOOP REVERSAL : MN (NA, NR, MN, MJ, CR) HDSL TIP-RING REVERSAL : NA (NA, NR, MN, MJ, CR) [MN = Minor Alarm, MJ = Major Alarm, CR = Critical Alarm] [NA = Not Alarmed, NR = Not Reported] ACCEPT HDSL ALARM TYPE CHANGES HDSL ALARM TYPES HAVE BEEN CHANGED 08/19/2002 System ID: PC-FlexPlus 08:23:39 </pre> </div> <ul style="list-style-type: none"> To retain the existing HDSL Alarm Types, press N.
4	<p>Press ESC. The Main Menu screen reappears.</p>

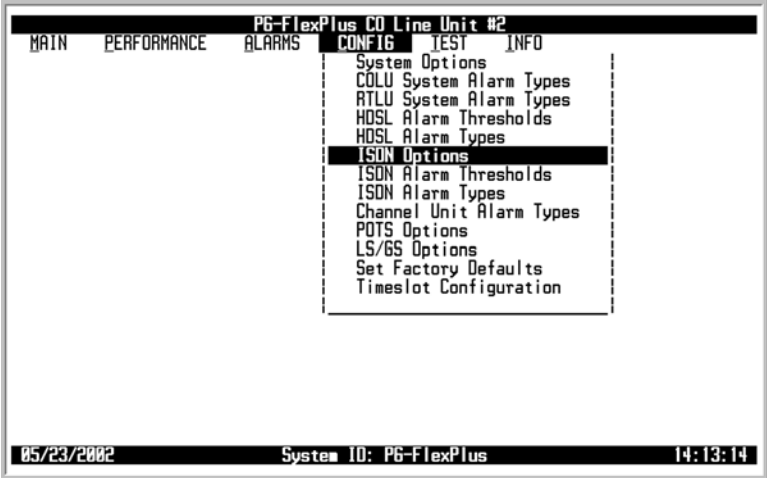
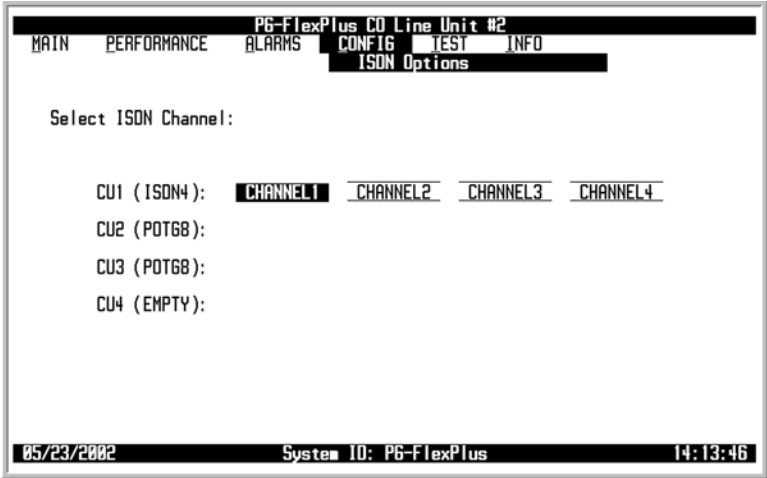
Table 17. HDSL Alarm Types

Alarms	Value	Description	Default
HDSL LOSW	CR, MJ, MN, NA, NR	HDSL Loop has lost synchronization	MJ
HDSL ES 15 MN	CR, MJ, MN, NA, NR	HDSL ES 15 minute alarm is generated if the current 15 minute HDSL ES count reaches or exceeds this threshold	MN
HDSL ES 24 HR	CR, MJ, MN, NA, NR	HDSL ES 24 hour alarm is generated if the HDSL ES 24 hour count reaches or exceeds this threshold	MN
HDSL UAS 15 MN	CR, MJ, MN, NA, NR	HDSL UAS 15 minute alarm is generated if the current 15-minute HDSL UAS count reaches or exceeds this threshold	MN
HDSL UAS 24 HR	CR, MJ, MN, NA, NR	HDSL UAS 24 hour alarm is generated if the HDSL UAS 24-hour count reaches or exceeds this threshold	MN
HDSL LOW MARGIN	CR, MJ, MN, NA, NR	HDSL low margin alarm is generated if the margin is equal to, or less than, this threshold	MN
HDSL LOOP REVERSAL	CR, MJ, MN, NA, NR	HDSL loops A and B are reversed on the span	MN
HDSL TIP-RING REVERSAL	CR, MJ, MN, NA, NR	HDSL tip-ring of the HDSL A/B loop is reversed on the span	NA

CONFIG — ISDN Options

This screen allows provisioning of ISDN options. Table 18 on page 83 lists the ISDN Option fields, values, descriptions and default settings.

CONFIG — ISDN Options

Step	Action
1	<p>At the Main Menu screen, select CONFIG. Press ↓ to choose ISDN Options. The following screen appears.</p>  <p>The screenshot shows a terminal window with the title 'PG-FlexPlus CO Line Unit #2'. The menu options are: MAIN, PERFORMANCE, ALARMS, CONFIG (highlighted), TEST, and INFO. Under CONFIG, the following options are listed: System Options, COLU System Alarm Types, RTLU System Alarm Types, HDSL Alarm Thresholds, HDSL Alarm Types, ISDN Options (highlighted), ISDN Alarm Thresholds, ISDN Alarm Types, Channel Unit Alarm Types, POTS Options, LS/BS Options, Set Factory Defaults, and Timeslot Configuration. The status bar at the bottom shows '05/23/2002', 'System ID: PG-FlexPlus', and '14:13:14'.</p>
2	<p>Press ENTER. The following screen appears.</p>  <p>The screenshot shows a terminal window with the title 'PG-FlexPlus CO Line Unit #2'. The menu options are: MAIN, PERFORMANCE, ALARMS, CONFIG (highlighted), TEST, and INFO. Under CONFIG, 'ISDN Options' is selected. The screen displays 'Select ISDN Channel:' followed by four options: CU1 (ISDN4): CHANNEL1 (highlighted), CHANNEL2, CHANNEL3, CHANNEL4; CU2 (POT68); CU3 (POT68); and CU4 (EMPTY). The status bar at the bottom shows '05/23/2002', 'System ID: PG-FlexPlus', and '14:13:46'.</p> <p>To view the ISDN option data, select the ISDN channel, then press ENTER.</p>

CONFIG — ISDN Options (Continued)

Step	Action
3	<p>The following actions can be taken:</p> <ol style="list-style-type: none"> To change the field value, press SPACEBAR to toggle to the desired value, or press ↓ or ↑ to move to the next option. To save the ISDN Option changes, select the ACCEPT ISDN OPTION CHANGES button, then press ENTER. From the ISDN OPTIONS WILL BE CHANGED. CONTINUE (Y/N)? prompt, the following actions can be taken: <ul style="list-style-type: none"> To save the ISDN Option changes, press Y. The following events occur: <ul style="list-style-type: none"> – all current values are set to desired values
4	<p>Press ESC. The Main Menu screen reappears.</p>

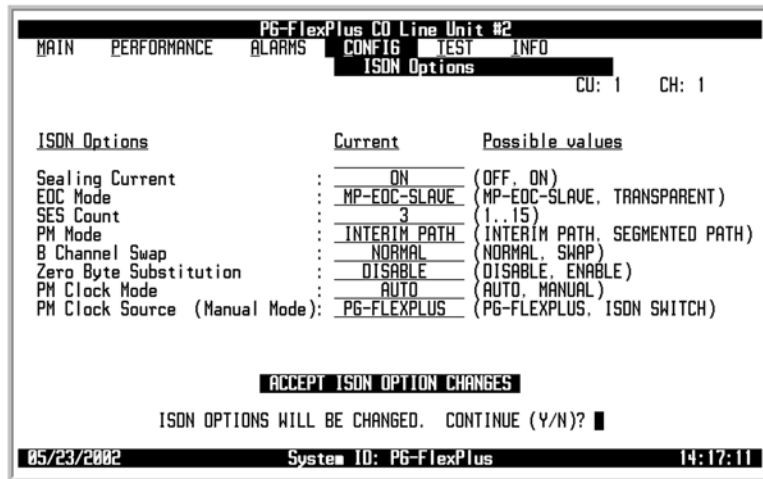
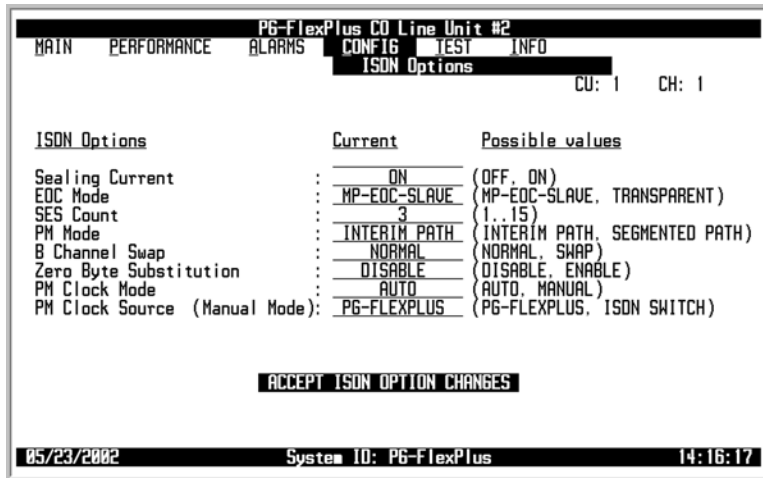



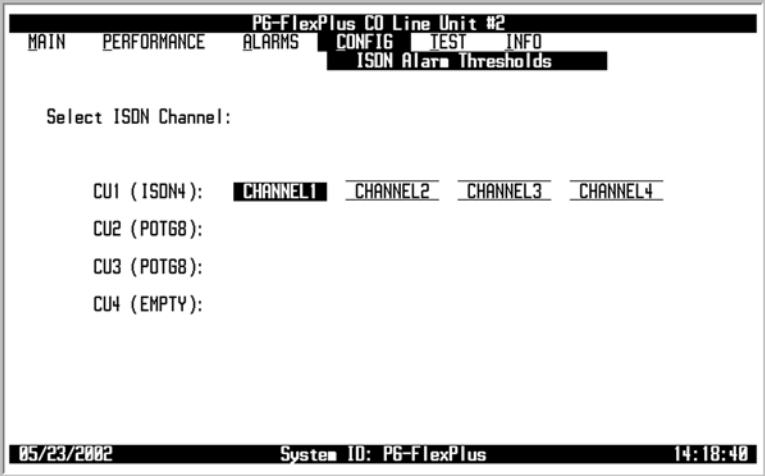
Table 18. ISDN Options

System Options	Value	Description	Default
Sealing Current	OFF	No sealing current is applied to the ISDN subscriber loop	ON
	ON	Constant current of approximately 5 MA flows in the ISDN subscriber loop at all time	
EOC Mode	MP-EOC-SLAVE	EOC messages are decoded and re-transmitted within the system	MP-EOC-SLAVE
	TRANSPARENT	EOC messages are not decoded and are passed through the system transparently	
SES Count	1 to 15	Number of ISDN BE allowed per second before SES count is incremented	3
PM Mode	INTERIM PATH	Considers the channel as one path and collects the end-to-end error rate for the entire transport path	INTERIM PATH
	SEGMENTED PATH	Considers the channel as separate sections and individually collects error rates for each DSL loop	
B Channel Swap	NORMAL	Channels "B1" and "B2" at the CO ISDN "U" interface are routed to channels "B1" and "B2" at the RT ISDN "U" interface	NORMAL
	SWAP	Channels "B1" and "B2" at the CO ISDN "U" interface are routed to channels "B2" and "B1" at the RT ISDN "U" interface	
Zero Byte Substitution	DISABLE	System passes all data through without any special encoding	DISABLE
	ENABLE	System uses a ZBS code to prevent long string of zeros in the data	
PM Clock Mode	AUTO	"0" byte of the channel unit determines the PM Clock Source field	AUTO
	MANUAL	Clock source is determined by PM Clock Source field	
PM Clock Source (Manual Mode)	PG-FLEXPLUS	Clock source is determined by system clock	PG-FLEXPLUS
	ISDN SWITCH	Clock source is determined by ISDN clock	

CONFIG — ISDN Alarm Thresholds

This screen allows the provisioning of ISDN alarm thresholds. The fields on this screen are measured hourly and daily. [Table 19 on page 86](#) lists the ISDN Alarm Threshold fields, values, descriptions and default settings.

CONFIG — ISDN Alarm Thresholds

Step	Action
1	<p>At the Main Menu screen, select CONFIG. Press ↓ to choose ISDN Alarm Thresholds. The following screen appears.</p>  <p>The screenshot shows a terminal window with the title 'PG-FlexPlus CO Line Unit #2'. The menu options are: MAIN, PERFORMANCE, ALARMS, CONFIG, TEST, INFO. The 'CONFIG' option is highlighted, and a sub-menu is displayed with the following items: System Options, COLU System Alarm Types, RTLU System Alarm Types, HDSL Alarm Thresholds, HDSL Alarm Types, ISDN Options, ISDN Alarm Thresholds (highlighted), ISDN Alarm Types, Channel Unit Alarm Types, POTS Options, LS/GS Options, Set Factory Defaults, and Timeslot Configuration. The status bar at the bottom shows the date '05/23/2002', 'System ID: PG-FlexPlus', and the time '14:18:05'.</p>
2	<p>Press ENTER. The following screen appears.</p>  <p>The screenshot shows the 'ISDN Alarm Thresholds' screen. At the top, the title 'PG-FlexPlus CO Line Unit #2' is present, and the menu options are MAIN, PERFORMANCE, ALARMS, CONFIG, TEST, INFO. The 'CONFIG' option is highlighted, and the sub-menu 'ISDN Alarm Thresholds' is displayed. Below the title, the text 'Select ISDN Channel:' is shown. There are four lines of input fields: 'CU1 (ISDN4):' with 'CHANNEL1' selected, 'CU2 (POT68):', 'CU3 (POT68):', and 'CU4 (EMPTY):'. The status bar at the bottom shows the date '05/23/2002', 'System ID: PG-FlexPlus', and the time '14:18:40'.</p> <p>To view the ISDN alarm threshold data, select the ISDN channel, then press ENTER.</p>

CONFIG — ISDN Alarm Thresholds (Continued)

Step	Action
3	<p>The following actions can be taken:</p> <ol style="list-style-type: none"> To change the threshold value, press ↓ or ↑ to go to the appropriate ISDN Alarm Threshold. Then type the appropriate numbers on the keypad for each field. To save the ISDN Alarm Threshold changes, select the ACCEPT ISDN THRESHOLD CHANGES button, then press ENTER. From the ISDN THRESHOLDS WILL BE CHANGED. CONTINUE (Y/N)? prompt, the following actions can be taken: <ul style="list-style-type: none"> To save the ISDN Alarm Threshold changes, press Y. The following events occur: <ul style="list-style-type: none"> – all current values are set to desired values <div data-bbox="479 646 1239 1119" style="border: 1px solid black; padding: 5px; margin: 10px 0;"> <pre> PG-FlexPlus CO Line Unit #2 MAIN PERFORMANCE ALARMS CONFIG TEST INFO ISDN Alarm Thresholds CU: 1 CH: 1 ISDN ALARMS THRESHOLD HOURLY ES : 040 (1..255) DAILY ES : 0100 (1..4095) HOURLY SES : 010 (1..127) DAILY SES : 0025 (1..2047) ACCEPT ISDN THRESHOLD CHANGES 05/23/2002 System ID: PG-FlexPlus 14:19:21 </pre> </div> <div data-bbox="479 1161 1239 1633" style="border: 1px solid black; padding: 5px; margin: 10px 0;"> <pre> PG-FlexPlus CO Line Unit #2 MAIN PERFORMANCE ALARMS CONFIG TEST INFO ISDN Alarm Thresholds CU: 1 CH: 1 ISDN ALARMS THRESHOLD HOURLY ES : 040 (1..255) DAILY ES : 0100 (1..4095) HOURLY SES : 010 (1..127) DAILY SES : 0025 (1..2047) ACCEPT ISDN THRESHOLD CHANGES ISDN THRESHOLDS WILL BE CHANGED. CONTINUE (Y/N)? 05/23/2002 System ID: PG-FlexPlus 14:20:03 </pre> </div> <ul style="list-style-type: none"> To retain the existing ISDN Alarm Thresholds, press N.
4	<p>Press ESC. The Main Menu screen reappears.</p>


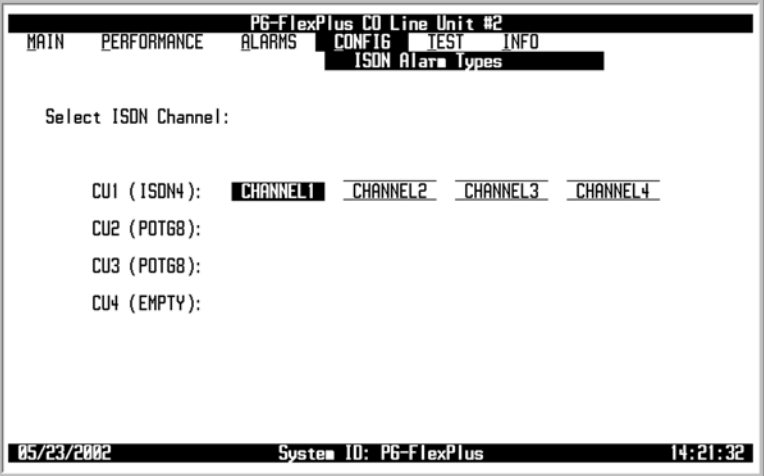
Table 19. ISDN Alarm Thresholds

Alarms	Value	Description	Default
HOURLY ES	1 to 255	ISDN hourly ES alarm is generated if the accumulated hourly ES count at the COLU/RTLU reaches or exceeds this threshold	40
DAILY ES	1 to 4095	ISDN daily ES alarm is generated if the accumulated daily ES count at the COLU/RTLU reaches or exceeds this threshold	100
HOURLY SES	1 to 127	ISDN hourly SES alarm is generated if the accumulated hourly SES count at the COLU/RTLU reaches or exceeds this threshold	10
DAILY SES	0 to 2047	ISDN daily SES alarm is generated if the accumulated daily SES count at the COLU/RTLU reaches or exceeds this threshold	25

CONFIG — ISDN Alarm Types

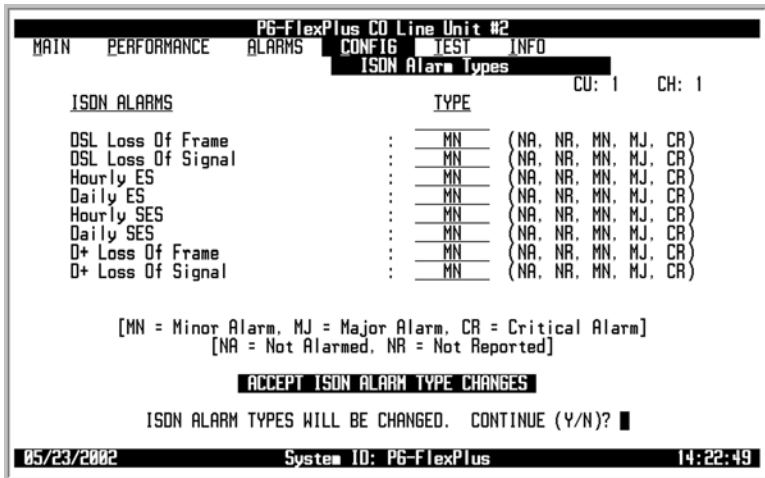
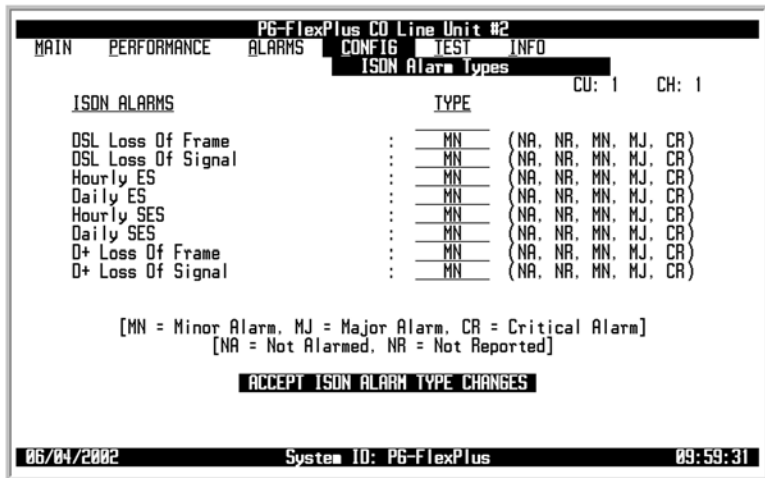
This screen allows the provisioning of ISDN alarm types. Table 20 on page 89 lists the ISDN Alarm Type fields, values, descriptions and default settings.

CONFIG — ISDN Alarm Types

Step	Action
1	<p>At the Main Menu screen, select CONFIG. Press ↓ to choose ISDN Alarm Types. The following screen appears.</p>  <p>The screenshot shows a terminal window with the following content:</p> <pre> PG-FlexPlus CO Line Unit #2 MAIN PERFORMANCE ALARMS CONFIG TEST INFO System Options COLU System Alarm Types RTLU System Alarm Types HDSL Alarm Thresholds HDSL Alarm Types ISDN Options ISDN Alarm Thresholds ISDN Alarm Types Channel Unit Alarm Types POTS Options LS/BS Options Set Factory Defaults Timeslot Configuration 05/23/2002 System ID: PG-FlexPlus 14:21:01 </pre>
2	<p>Press ENTER. The following screen appears.</p>  <p>The screenshot shows a terminal window with the following content:</p> <pre> PG-FlexPlus CO Line Unit #2 MAIN PERFORMANCE ALARMS CONFIG TEST INFO ISDN Alarm Types Select ISDN Channel: CU1 (ISDN4): CHANNEL1 CHANNEL2 CHANNEL3 CHANNEL4 CU2 (POT68): CU3 (POT68): CU4 (EMPTY): 05/23/2002 System ID: PG-FlexPlus 14:21:32 </pre> <p>To view the ISDN alarm type data, select the ISDN channel, then press ENTER.</p>

CONFIG — ISDN Alarm Types (Continued)

Step	Action
3	<p>The following actions can be taken:</p> <ol style="list-style-type: none"> To change the field value, press SPACEBAR to toggle to the desired value, or press ↓ or ↑ to move to the next option. To save the ISDN Alarm Type changes, select the ACCEPT ISDN ALARM TYPE CHANGES button, then press ENTER. From the ISDN ALARM TYPES WILL BE CHANGED. CONTINUE (Y/N)? prompt, the following actions can be taken: <ul style="list-style-type: none"> To save the ISDN Alarm Type changes, press Y. The following events occur: <ul style="list-style-type: none"> – all current values are set to desired values
4	<p>Press ESC. The Main Menu screen reappears.</p>



- To retain the existing ISDN Alarm Types, press **N**.


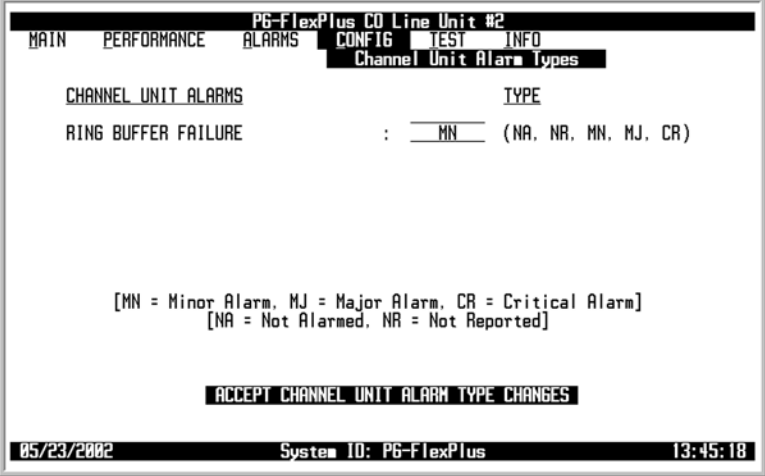
Table 20. ISDN Alarm Types

Alarms	Value	Description	Default
DSL Loss Of Frame	CR, MJ, MN, NA, NR	Generated if there is a DSL Loss of Frame	MN
DSL Loss Of Signal	CR, MJ, MN, NA, NR	Generated if there is a DSL Loss of Signal	MN
HOURLY ES	CR, MJ, MN, NA, NR	Generated if the accumulated hourly ES count at the COLU/RTLU reaches or exceeds its threshold value. A single threshold value is used for thresholds errors in the customer or network direction.	MN
DAILY ES	CR, MJ, MN, NA, NR	Generated if the accumulated daily ES count at the COLU/RTLU reaches or exceeds its threshold value. A single threshold value is used for thresholding errors in the customer or network direction.	MN
HOURLY SES	CR, MJ, MN, NA, NR	Generated if the accumulated hourly SES count at the COLU/RTLU reaches or exceeds its threshold value. A single threshold value is used for threshold errors in the customer or network direction.	MN
DAILY SES	CR, MJ, MN, NA, NR	Generated if the accumulated daily SES count at the COLU/RTLU reaches or exceeds its threshold value. A single threshold value is used for threshold errors in the customer or network direction.	MN
D+ Loss of Frame	CR, MJ, MN, NA, NR	Generated if the ISDN m-channel framing pattern has been lost on the HDSL link	MN
D+ Loss of Signal	CR, MJ, MN, NA, NR	Generated if the ISDN m-channel loses synchronization	MN

CONFIG — Channel Unit Alarm Types

This screen allows provisioning of channel unit alarms types. Each RT channel unit continuously monitors its subscriber ring generator circuits. If a ring generator circuit fails, the subscriber's equipment no longer rings. When an RT channel unit detects the failure of one of these circuits, it generates an alarm of the type selected on this screen. [Table 21 on page 92](#) lists the Channel Unit Alarm Type fields, values, descriptions and default settings.


CONFIG — Channel Unit Alarm Types

Step	Action
1	<p>At the Main Menu screen, select CONFIG. Press ↓ to choose Channel Unit Alarm Types. The following screen appears.</p>  <p>The screenshot shows a terminal window with the title 'PG-FlexPlus CO Line Unit #2'. The menu options are: MAIN, PERFORMANCE, ALARMS, CONFIG (highlighted), TEST, and INFO. Under CONFIG, the options are: System Options, COLU System Alarm Types, ATLU System Alarm Types, HOSL Alarm Thresholds, HOSL Alarm Types, ISDN Options, ISDN Alarm Thresholds, ISDN Alarm Types, Channel Unit Alarm Types (highlighted), POTS Options, LS/GS Options, Set Factory Defaults, and Timeslot Configuration. The status bar at the bottom shows '05/23/2002 System ID: PG-FlexPlus 14:23:43'.</p>
2	<p>Press ENTER. The following screen appears.</p>  <p>The screenshot shows the 'Channel Unit Alarm Types' configuration screen. It has a title bar 'PG-FlexPlus CO Line Unit #2' and menu options 'MAIN', 'PERFORMANCE', 'ALARMS', 'CONFIG', 'TEST', and 'INFO'. The main content area shows 'CHANNEL UNIT ALARMS' and 'TYPE'. Below this, it displays 'RING BUFFER FAILURE : MN (NA, NR, MN, MJ, CR)'. A legend at the bottom explains: '[MN = Minor Alarm, MJ = Major Alarm, CR = Critical Alarm]' and '[NA = Not Alarmed, NR = Not Reported]'. A button labeled 'ACCEPT CHANNEL UNIT ALARM TYPE CHANGES' is visible. The status bar at the bottom shows '05/23/2002 System ID: PG-FlexPlus 13:45:18'.</p>

CONFIG — Channel Unit Alarm Types (Continued)

Step	Action
3	<p>The following actions can be taken:</p> <ol style="list-style-type: none"> To change the Ring Buffer Failure field value, press SPACEBAR to toggle to the desired value. To save the Channel Unit Alarm Type changes, select the ACCEPT CHANNEL UNIT ALARM TYPE CHANGES button, then press ENTER. From the CHANNEL UNIT ALARM TYPES WILL BE CHANGED. CONTINUE (Y/N)? prompt, the following actions can be taken: <ul style="list-style-type: none"> To save the Channel Unit Alarm Type changes, press Y. The following events occur: <ul style="list-style-type: none"> – all current values are set to desired values <div data-bbox="477 611 1239 1083" style="border: 1px solid black; padding: 5px; margin: 10px 0;"> <pre> PG-FlexPlus CO Line Unit #2 MAIN PERFORMANCE ALARMS CONFIG TEST INFO Channel Unit Alarm Types CHANNEL UNIT ALARMS TYPE RING BUFFER FAILURE : MN (NA, NR, MN, MJ, CR) [MN = Minor Alarm, MJ = Major Alarm, CR = Critical Alarm] [NA = Not Alarmed, NR = Not Reported] ACCEPT CHANNEL UNIT ALARM TYPE CHANGES CHANNEL UNIT ALARM TYPES WILL BE CHANGED. CONTINUE (Y/N)? █ 05/23/2002 System ID: PG-FlexPlus 13:45:44 </pre> </div> <div data-bbox="477 1119 1239 1591" style="border: 1px solid black; padding: 5px; margin: 10px 0;"> <pre> PG-FlexPlus CO Line Unit #2 MAIN PERFORMANCE ALARMS CONFIG TEST INFO Channel Unit Alarm Types CHANNEL UNIT ALARMS TYPE RING BUFFER FAILURE : MN (NA, NR, MN, MJ, CR) [MN = Minor Alarm, MJ = Major Alarm, CR = Critical Alarm] [NA = Not Alarmed, NR = Not Reported] ACCEPT CHANNEL UNIT ALARM TYPE CHANGES CHANNEL UNIT ALARM TYPES HAVE BEEN CHANGED 05/23/2002 System ID: PG-FlexPlus 13:46:13 </pre> </div> <ul style="list-style-type: none"> To retain the existing Channel Unit Alarm Types, press N.
4	<p>Press ESC. The Main Menu screen reappears.</p>


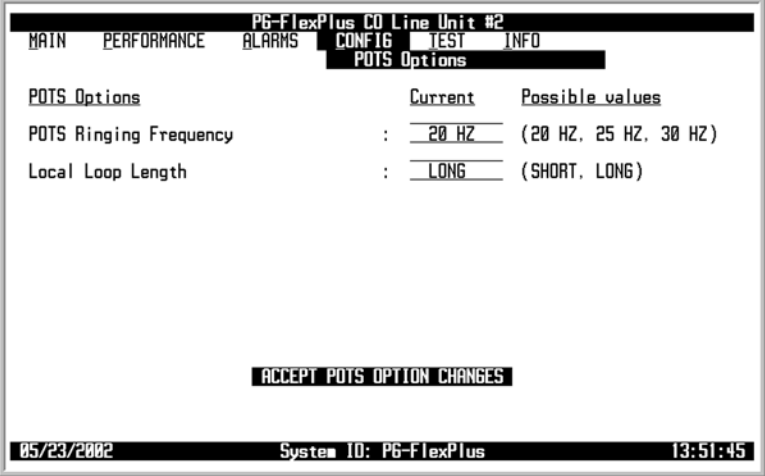
Table 21. Channel Unit Alarms

Alarms	Value	Description	Default
RTCU 1 RING BUFFER FAILURE	CR, MJ, MN, NA, NR	RTLU has detected a ring buffer failure on RTCU1. Associated CU must be replaced to restore ringing functionality.	MN
RTCU 2 RING BUFFER FAILURE	CR, MJ, MN, NA, NR	RTLU has detected a ring buffer failure on RTCU2. Associated CU must be replaced to restore ringing functionality.	MN
RTCU 3 RING BUFFER FAILURE	CR, MJ, MN, NA, NR	RTLU has detected a ring buffer failure on RTCU3. Associated CU must be replaced to restore ringing functionality.	MN
RTCU 4 RING BUFFER FAILURE	CR, MJ, MN, NA, NR	RTLU has detected a ring buffer failure on RTCU4. Associated CU must be replaced to restore ringing functionality.	MN
 If RTCU Ring Buffer Failure alarms are declared for all installed POTS Cards, the probable cause of failure is a faulty ring generator. The RTLU will need to be replaced.			

CONFIG — POTS Options

This screen allows provisioning of POTS lines. [Table 22 on page 95](#) lists the POTS Option fields, values, descriptions and default settings.

CONFIG — POTS Options

Step	Action
1	<p>At the Main Menu screen, select CONFIG. Press ↓ to choose POTS Options. The following screen appears.</p>  <p>The screenshot shows a terminal window with the following content:</p> <pre> PG-FlexPlus CO Line Unit #2 MAIN PERFORMANCE ALARMS CONFIG TEST INFO System Options COLU System Alarm Types RTLU System Alarm Types HOSL Alarm Thresholds HOSL Alarm Types ISON Options ISON Alarm Thresholds ISON Alarm Types Channel Unit Alarm Types POTS Options LS/GS Options Set Factory Defaults Timeslot Configuration 05/23/2002 System ID: PG-FlexPlus 14:24:18 </pre>
2	<p>Press ENTER. The following screen appears.</p>  <p>The screenshot shows a terminal window with the following content:</p> <pre> PG-FlexPlus CO Line Unit #2 MAIN PERFORMANCE ALARMS CONFIG TEST INFO POTS Options POTS Options Current Possible values POTS Ringing Frequency : 20 HZ (20 HZ, 25 HZ, 30 HZ) Local Loop Length : LONG (SHORT, LONG) ACCEPT POTS OPTION CHANGES 05/23/2002 System ID: PG-FlexPlus 13:51:45 </pre>

CONFIG — POTS Options (Continued)

Step	Action
3	<p>The following actions can be taken:</p> <ol style="list-style-type: none"> To change the POTS Ringing Frequency field value, press SPACEBAR to toggle to the desired value. To change the Local Loop Length field value, press SPACEBAR to toggle to the desired value. To save the POTS Option changes, select the ACCEPT POTS OPTION CHANGES button, then press ENTER. From the POTS OPTIONS WILL BE CHANGED. CONTINUE (Y/N)? prompt, the following actions can be taken: <ul style="list-style-type: none"> To save the POTS Option changes, press Y. The following events occur: <ul style="list-style-type: none"> – all current values are set to desired values <div data-bbox="479 646 1239 1119" style="border: 1px solid black; padding: 5px; margin: 10px 0;"> <pre> PG-FlexPlus CO Line Unit #2 MAIN PERFORMANCE ALARMS CONFIG TEST INFO POTS Options POTS Options Current Possible values POTS Ringing Frequency : 20 HZ (20 HZ, 25 HZ, 30 HZ) Local Loop Length : LONG (SHORT, LONG) ACCEPT POTS OPTION CHANGES POTS OPTIONS WILL BE CHANGED. CONTINUE (Y/N)? █ 05/23/2002 System ID: PG-FlexPlus 13:52:07 </pre> </div> <div data-bbox="479 1155 1239 1627" style="border: 1px solid black; padding: 5px; margin: 10px 0;"> <pre> PG-FlexPlus CO Line Unit #2 MAIN PERFORMANCE ALARMS CONFIG TEST INFO POTS Options POTS Options Current Possible values POTS Ringing Frequency : 20 HZ (20 HZ, 25 HZ, 30 HZ) Local Loop Length : LONG (SHORT, LONG) ACCEPT POTS OPTION CHANGES POTS OPTIONS HAVE BEEN CHANGED 05/23/2002 System ID: PG-FlexPlus 13:52:37 </pre> </div> <ul style="list-style-type: none"> To retain the existing POTS Options, press N.
4	<p>Press ESC. The Main Menu screen reappears.</p>


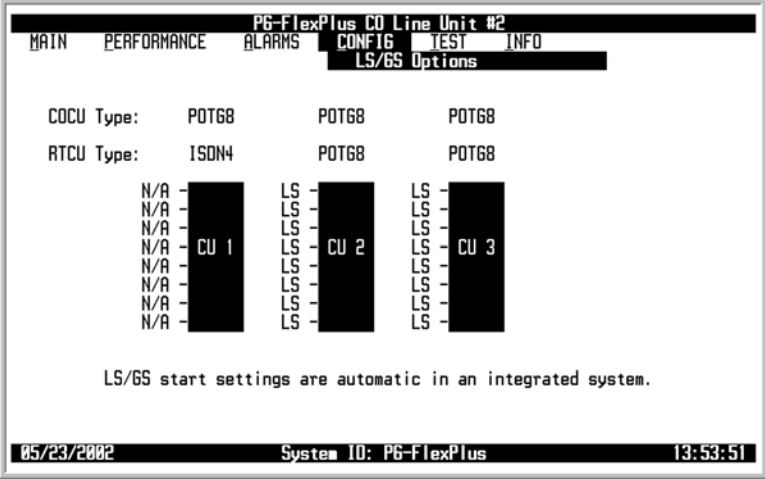

Table 22. POTS Options

Alarm	Value	Description	Default
POTS Ringing Frequency	20 HZ 25 HZ 30 HZ	Sets the ring generator frequency for all POTS circuits served by the RTLU	20 HZ
Local Loop Length	SHORT	All POTS circuits support short subscriber drops and results in slightly reduced power consumption from the CO battery	LONG
	LONG	All POTS circuits support standard length subscriber drops. The power consumption from the CO battery matches the published specifications	

CONFIG — LS/GS Options

This screen shows the Loop Start and Ground Start configuration.



CONFIG — LS/GS Options

Step	Action
1	<p>At the Main Menu screen, select CONFIG. Press ↓ to choose LS/GS Options. The following screen appears.</p>  <p>The screenshot shows a terminal window titled "PG-FlexPlus CO Line Unit #2". The menu options are: MAIN, PERFORMANCE, ALARMS, CONFIG (highlighted), TEST, and INFO. Under CONFIG, the options are: System Options, COLU System Alarm Types, RTLU System Alarm Types, HOSL Alarm Thresholds, HOSL Alarm Types, ISDN Options, ISDN Alarm Thresholds, ISDN Alarm Types, Channel Unit Alarm Types, POTS Options, LS/GS Options (highlighted), Set Factory Defaults, and Timeslot Configuration. The status bar at the bottom shows "05/23/2002", "System ID: PG-FlexPlus", and "14:24:43".</p>
2	<p>Press ENTER. The following screen appears.</p>  <p>The screenshot shows the "LS/GS Options" screen. It displays COCU and RTCU types for three units. COCU Type: POT68, POT68, POT68. RTCU Type: ISDN4, POT68, POT68. Below this, there are three columns for units CU 1, CU 2, and CU 3. Each column has "N/A" for the first two rows and "LS" for the remaining four rows. A message at the bottom states: "LS/GS start settings are automatic in an integrated system." The status bar at the bottom shows "05/23/2002", "System ID: PG-FlexPlus", and "13:53:51".</p> <p> Only POTS channel units indicate LS/GS. ISDN channel units always display N/A.</p>
3	<p>Press ESC. The Main Menu screen reappears.</p>

CONFIG — Set Factory Defaults

This screen resets the configuration data back to the original factory default setting.

CONFIG — Set Factory Defaults

Step	Action
1	<p>At the Main Menu screen, select CONFIG. Press ↓ to choose Set Factory Defaults. The following screen appears.</p>  <p>The screenshot shows a terminal window with the following content:</p> <pre> PG-FlexPlus CO Line Unit #2 MAIN PERFORMANCE ALARMS CONFIG TEST INFO System Options COLU System Alarm Types RTLU System Alarm Types HOSL Alarm Thresholds HOSL Alarm Types ISON Options ISON Alarm Thresholds ISON Alarm Types Channel Unit Alarm Types POTS Options LS/GS Options Set Factory Defaults Timeslot Configuration 05/23/2002 System ID: PG-FlexPlus 14:25:05 </pre>
2	<p>Press ENTER. The following screen appears.</p>  <p>The screenshot shows a terminal window with the following content:</p> <pre> PG-FlexPlus CO Line Unit #2 MAIN PERFORMANCE ALARMS CONFIG TEST INFO Set Factory Defaults CONFIGURATION DATA WILL BE SET TO FACTORY DEFAULTS (THIS MAY BE SERVICE AFFECTING!) CONTINUE (Y/N)? █ 05/23/2002 System ID: PG-FlexPlus 13:54:52 </pre> <p>CAUTION <i>Setting to Factory Defaults may cause a loss of service.</i></p>

CONFIG — Set Factory Defaults (Continued)

Step	Action
3	<p>The following actions can be taken:</p> <p>a. To reset the system options back to the original factor default settings, press ENTER. From the CONFIGURATION DATA WILL BE SET TO FACTORY DEFAULTS (THIS MAY BE SERVICE AFFECTING!) CONTINUE (Y/N)? prompt, the following actions can be taken:</p> <ul style="list-style-type: none"> • To save the Factory Default changes, press Y. The following events occur: <ul style="list-style-type: none"> – all current values are reset to the factory default values <div data-bbox="477 579 1240 1054" style="border: 1px solid black; padding: 10px; margin: 10px 0;"> <pre> PG-FlexPlus CO Line Unit #2 MAIN PERFORMANCE ALARMS CONFIG TEST INFO CONFIGURATION DATA HAS BEEN SET TO FACTORY DEFAULTS PRESS <ESC> TO CONTINUE 05/23/2002 System ID: PG-FlexPlus 13:55:19 </pre> </div> <ul style="list-style-type: none"> • To retain the existing configuration data, press N.
4	<p>Press ESC. The Main Menu screen reappears.</p>

CONFIG — Timeslot Configuration

This screen allows mapping of a timeslot to a channel and channel unit. [Table 23 on page 102](#) lists the Timeslot Configuration fields, values, descriptions and default settings.

Timeslot Mapping

The system supports 24 timeslots (DS0s) that can be mapped to the subscriber services. The POTS services require one timeslot per circuit and ISDN services require three timeslots per circuit. When the system initially powers up, the Timeslot Configuration screen displays "POTG8" channel units installed in for CU1, CU2, and CU3, regardless of what channel units are actually installed in these slots. If an FRE-86x RT enclosure is used, CU4 indicates "EMPTY"; CU4 indicates "POTG8" if an FRE-765 RT enclosure is used. All 24 timeslots are automatically mapped to all 24 POTG8 channel units. If only POTS channel units are installed in the RT enclosure, it may not be necessary to change any timeslot assignments. If ISDN channel units are installed in the RT, then additional timeslot provisioning is required.

To map timeslots to services, the following steps must be followed:

1. Set the type of channel unit installed in each slot of the RT enclosure. Refer to [Table 23 on page 102](#) for a description of the values available for CU1, CU2, CU3, and CU4.
2. Map each timeslot to the channel unit (CU#) and circuit (CH#) for each of the circuits to be provisioned:
 - a. For each POTS circuit, only one timeslot can be mapped to a channel unit and circuit. The sub-channel (SUB-CH#) assignment must be set to NA for POTS circuits.
 - b. For each ISDN circuit, three timeslots must be mapped to the same channel unit and circuit. Map the first timeslot sub-channel (SUB-CH#) to B1, the second timeslot sub-channel to B2, and the third timeslot sub-channel to D.
3. For all mapped timeslots, set ENABLE to ON. For all unmapped (unused) timeslots, set ENABLE to OFF.
4. Select SAVE SETTINGS to save the current timeslot mapping. If any mapping errors are detected, an appropriate message is displayed and the errors must be corrected before the mapping is saved.

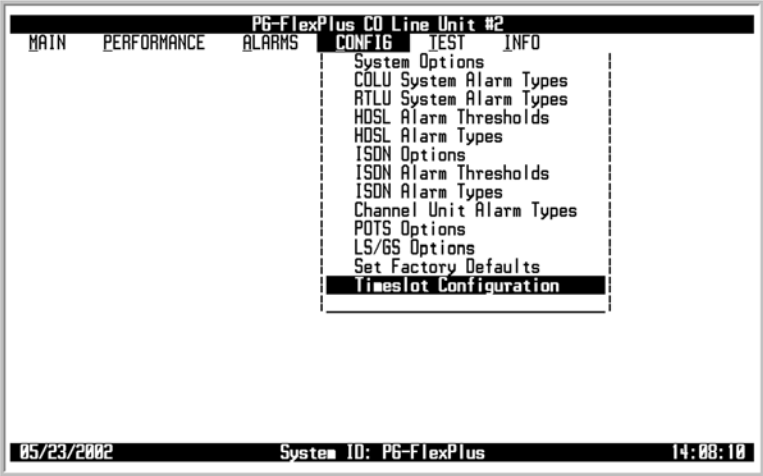
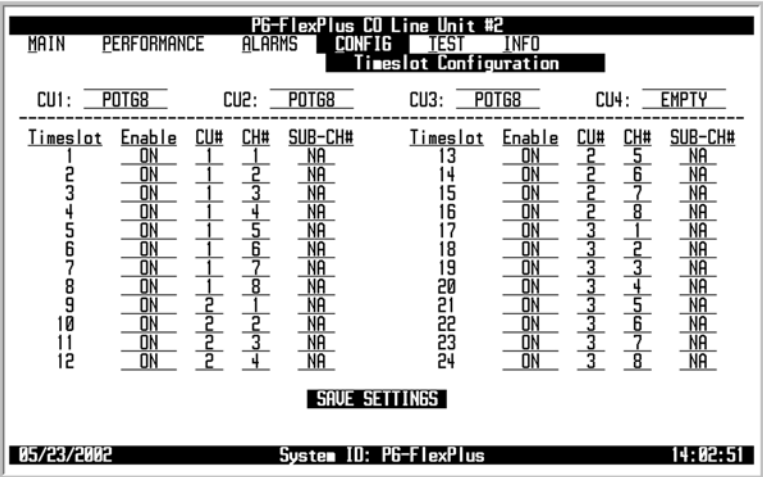


If an invalid timeslot configuration is detected, re-select the field and press **SPACEBAR** to toggle to the desired value. When an invalid configuration is detected, an error message is displayed such as:

```
ISDN CU:2 CH:1 requires a B1, B2, and D SUB-CH. ** Hit <CR> to Continue **
```

Press **ENTER** to return to the Timeslot Configuration screen. Re-select the field and press **SPACEBAR** to toggle to the desired value.

CONFIG — Timeslot Configuration

Step	Action																																																																																																																																		
1	<p>At the Main Menu screen, select CONFIG. Press ↓ to choose Timeslot Configuration. The following screen appears.</p>  <p>The screenshot shows a terminal-style interface with a menu. At the top, it says "PG-FlexPlus CO Line Unit #2". Below that are several menu options: MAIN, PERFORMANCE, ALARMS, CONFIG (highlighted), TEST, and INFO. A sub-menu is displayed for CONFIG, listing various options like System Options, COLU System Alarm Types, RTLU System Alarm Types, HOSL Alarm Thresholds, HOSL Alarm Types, ISDN Options, ISDN Alarm Thresholds, ISDN Alarm Types, Channel Unit Alarm Types, POT5 Options, LS/GS Options, Set Factory Defaults, and Timeslot Configuration (highlighted). At the bottom of the screen, it shows the date "05/23/2002", "System ID: PG-FlexPlus", and the time "14:08:10".</p>																																																																																																																																		
2	<p>Press ENTER. The following screen appears.</p>  <p>The screenshot shows the "Timeslot Configuration" screen. At the top, it says "PG-FlexPlus CO Line Unit #2" and "Timeslot Configuration". Below that, there are four columns for configuration: CU1: POT68, CU2: POT68, CU3: POT68, and CU4: EMPTY. A table follows with columns: Timeslot, Enable, CU#, CH#, SUB-CH#, Timeslot, Enable, CU#, CH#, SUB-CH#. The table lists 24 timeslots. At the bottom of the table, there is a "SAVE SETTINGS" button. At the bottom of the screen, it shows the date "05/23/2002", "System ID: PG-FlexPlus", and the time "14:02:51".</p> <table border="1" data-bbox="495 1144 1218 1396"> <thead> <tr> <th>Timeslot</th> <th>Enable</th> <th>CU#</th> <th>CH#</th> <th>SUB-CH#</th> <th>Timeslot</th> <th>Enable</th> <th>CU#</th> <th>CH#</th> <th>SUB-CH#</th> </tr> </thead> <tbody> <tr><td>1</td><td>ON</td><td>1</td><td>1</td><td>NA</td><td>13</td><td>ON</td><td>2</td><td>5</td><td>NA</td></tr> <tr><td>2</td><td>ON</td><td>1</td><td>2</td><td>NA</td><td>14</td><td>ON</td><td>2</td><td>6</td><td>NA</td></tr> <tr><td>3</td><td>ON</td><td>1</td><td>3</td><td>NA</td><td>15</td><td>ON</td><td>2</td><td>7</td><td>NA</td></tr> <tr><td>4</td><td>ON</td><td>1</td><td>4</td><td>NA</td><td>16</td><td>ON</td><td>2</td><td>8</td><td>NA</td></tr> <tr><td>5</td><td>ON</td><td>1</td><td>5</td><td>NA</td><td>17</td><td>ON</td><td>3</td><td>1</td><td>NA</td></tr> <tr><td>6</td><td>ON</td><td>1</td><td>6</td><td>NA</td><td>18</td><td>ON</td><td>3</td><td>2</td><td>NA</td></tr> <tr><td>7</td><td>ON</td><td>1</td><td>7</td><td>NA</td><td>19</td><td>ON</td><td>3</td><td>3</td><td>NA</td></tr> <tr><td>8</td><td>ON</td><td>1</td><td>8</td><td>NA</td><td>20</td><td>ON</td><td>3</td><td>4</td><td>NA</td></tr> <tr><td>9</td><td>ON</td><td>2</td><td>1</td><td>NA</td><td>21</td><td>ON</td><td>3</td><td>5</td><td>NA</td></tr> <tr><td>10</td><td>ON</td><td>2</td><td>2</td><td>NA</td><td>22</td><td>ON</td><td>3</td><td>6</td><td>NA</td></tr> <tr><td>11</td><td>ON</td><td>2</td><td>3</td><td>NA</td><td>23</td><td>ON</td><td>3</td><td>7</td><td>NA</td></tr> <tr><td>12</td><td>ON</td><td>2</td><td>4</td><td>NA</td><td>24</td><td>ON</td><td>3</td><td>8</td><td>NA</td></tr> </tbody> </table>	Timeslot	Enable	CU#	CH#	SUB-CH#	Timeslot	Enable	CU#	CH#	SUB-CH#	1	ON	1	1	NA	13	ON	2	5	NA	2	ON	1	2	NA	14	ON	2	6	NA	3	ON	1	3	NA	15	ON	2	7	NA	4	ON	1	4	NA	16	ON	2	8	NA	5	ON	1	5	NA	17	ON	3	1	NA	6	ON	1	6	NA	18	ON	3	2	NA	7	ON	1	7	NA	19	ON	3	3	NA	8	ON	1	8	NA	20	ON	3	4	NA	9	ON	2	1	NA	21	ON	3	5	NA	10	ON	2	2	NA	22	ON	3	6	NA	11	ON	2	3	NA	23	ON	3	7	NA	12	ON	2	4	NA	24	ON	3	8	NA
Timeslot	Enable	CU#	CH#	SUB-CH#	Timeslot	Enable	CU#	CH#	SUB-CH#																																																																																																																										
1	ON	1	1	NA	13	ON	2	5	NA																																																																																																																										
2	ON	1	2	NA	14	ON	2	6	NA																																																																																																																										
3	ON	1	3	NA	15	ON	2	7	NA																																																																																																																										
4	ON	1	4	NA	16	ON	2	8	NA																																																																																																																										
5	ON	1	5	NA	17	ON	3	1	NA																																																																																																																										
6	ON	1	6	NA	18	ON	3	2	NA																																																																																																																										
7	ON	1	7	NA	19	ON	3	3	NA																																																																																																																										
8	ON	1	8	NA	20	ON	3	4	NA																																																																																																																										
9	ON	2	1	NA	21	ON	3	5	NA																																																																																																																										
10	ON	2	2	NA	22	ON	3	6	NA																																																																																																																										
11	ON	2	3	NA	23	ON	3	7	NA																																																																																																																										
12	ON	2	4	NA	24	ON	3	8	NA																																																																																																																										

CONFIG — Timeslot Configuration (Continued)

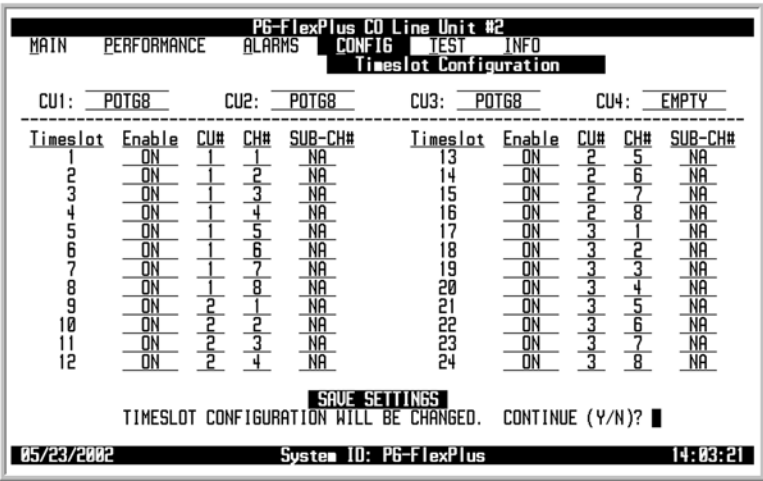
Step	Action																																																																	
3	<p>The following actions can be taken:</p> <ol style="list-style-type: none"> To change the CU value, press SPACEBAR to toggle to the desired value, or press ← or → to move to next option. To change the CU# and CH# values, press SPACEBAR to toggle to the desired value, or press ↓, ↑, ← or → to move to next option. To enable or disable timeslots, press SPACEBAR to toggle to the desired value, or press ↓, ↑, ← or → to move to next option. To assign the SUB-CH# value, press SPACEBAR to toggle to the desired value, or press ↓, ↑, ← or → to move to next option. To save the Timeslot Configuration changes, select the SAVE SETTINGS button, then press ENTER. From the TIMESLOT CONFIGURATION WILL BE CHANGED. CONTINUE (Y/N)? prompt, the following actions can be taken: <ul style="list-style-type: none"> To save the Timeslot Configuration changes, press Y. The following events occur: <ul style="list-style-type: none"> – all current values are set to desired values <div style="text-align: center;">  <p>The screenshot shows the 'Timeslot Configuration' screen for 'PG-FlexPlus CO Line Unit #2'. It displays a table with columns for Timeslot, Enable, CU#, CH#, and SUB-CH#. The current configuration is as follows:</p> <table border="1"> <thead> <tr> <th>Timeslot</th> <th>Enable</th> <th>CU#</th> <th>CH#</th> <th>SUB-CH#</th> </tr> </thead> <tbody> <tr><td>1</td><td>ON</td><td>1</td><td>1</td><td>NA</td></tr> <tr><td>2</td><td>ON</td><td>1</td><td>2</td><td>NA</td></tr> <tr><td>3</td><td>ON</td><td>1</td><td>3</td><td>NA</td></tr> <tr><td>4</td><td>ON</td><td>1</td><td>4</td><td>NA</td></tr> <tr><td>5</td><td>ON</td><td>1</td><td>5</td><td>NA</td></tr> <tr><td>6</td><td>ON</td><td>1</td><td>6</td><td>NA</td></tr> <tr><td>7</td><td>ON</td><td>1</td><td>7</td><td>NA</td></tr> <tr><td>8</td><td>ON</td><td>1</td><td>8</td><td>NA</td></tr> <tr><td>9</td><td>ON</td><td>2</td><td>1</td><td>NA</td></tr> <tr><td>10</td><td>ON</td><td>2</td><td>2</td><td>NA</td></tr> <tr><td>11</td><td>ON</td><td>2</td><td>3</td><td>NA</td></tr> <tr><td>12</td><td>ON</td><td>2</td><td>4</td><td>NA</td></tr> </tbody> </table> <p>Below the table, the prompt SAVE SETTINGS is displayed, followed by TIMESLOT CONFIGURATION WILL BE CHANGED. CONTINUE (Y/N)?. The system ID is PG-FlexPlus and the time is 14:03:21.</p> </div> <ol style="list-style-type: none"> To retain the existing configuration data, press N. 	Timeslot	Enable	CU#	CH#	SUB-CH#	1	ON	1	1	NA	2	ON	1	2	NA	3	ON	1	3	NA	4	ON	1	4	NA	5	ON	1	5	NA	6	ON	1	6	NA	7	ON	1	7	NA	8	ON	1	8	NA	9	ON	2	1	NA	10	ON	2	2	NA	11	ON	2	3	NA	12	ON	2	4	NA
Timeslot	Enable	CU#	CH#	SUB-CH#																																																														
1	ON	1	1	NA																																																														
2	ON	1	2	NA																																																														
3	ON	1	3	NA																																																														
4	ON	1	4	NA																																																														
5	ON	1	5	NA																																																														
6	ON	1	6	NA																																																														
7	ON	1	7	NA																																																														
8	ON	1	8	NA																																																														
9	ON	2	1	NA																																																														
10	ON	2	2	NA																																																														
11	ON	2	3	NA																																																														
12	ON	2	4	NA																																																														
4	<p>Press Esc. The Main Menu screen reappears.</p>																																																																	

Table 23. Timeslot Configuration Options

System Options	Value	Description	Default
Enable	ON	Enable timeslot	ON
	OFF	Disable timeslot	
CU1, CU2, CU3, or CU 4	POTS8	8 channel unit for POTS loop-start	POTS8
	POTG8	8 channel unit for POTS loop-start and ground-start	POTS8
	ISDN4	4 channel unit for ISDN	POTS8
	EMPTY	Current not configured or timeslot is empty	EMPTY
CU #	1	Possible channel unit values – Channel unit #4 value is only supported by the FRE-765 series of systems RT enclosures	Timeslot 1-24 are mapped as: CU1, CH-1-8 CU2, CH-1-8 CU3, CH-1-8 with SUB-CH=NA sequentially
	2		
	3		
	4		
CH #	1 – 8	Possible values for POTS8 and POTG8	
	1 – 4	Possible values for ISDN4	
SUB-CH #	NA	Possible values for POTS8 and POTG8	
	B1, B2, D	Possible values for ISDN4	

TEST MENU OPTIONS

The Test Menu provides access to the Subscriber Drop Test Facility. Refer to [Table 24](#) for sub-menu options and descriptions, parameters and valid values.



If you attempting to run a second test when one test is already in progress, a flashing warning message appears. Wait a few minutes, then try to run the test again.



Table 24. Test Menu Options

Sub-Menu Options	Sub-Menu Descriptions	Parameters	Valid Values
Subscriber Drop	Allows Subscriber Drop Test to be performed on a particular channel	<ul style="list-style-type: none"> • CU# • CH# • ISDN (CU#, CH#) Chosen for Test. **WARNING** Calls in Progress on Test Circuit will be Terminated. Continue with Test (Y/N)?: 	<ul style="list-style-type: none"> • 1 – 3 • 1 – 8 (POTS) • 1 – 4 (ISDN) • Y or N




TEST — Subscriber Drop Test

This screen allows a subscriber drop test to be performed on a particular channel.

CAUTION

Performing a subscriber drop test on any channel interrupts service on the line under test. The remaining lines on the system remain in service.


TEST — Subscriber Drop Test

Step	Action
1	<p>At the Main Menu screen, select TEST. Press  to choose Subscriber Drop Test. The following screen appears.</p> 
2	<p>Press ENTER. The following screen appears.</p> 

TEST — Subscriber Drop Test (Continued)

Step	Action
3	<p>The following actions can be taken:</p> <ol style="list-style-type: none"> To assign the CU# value, select the CU# field, then press SPACEBAR to toggle to the desired value. To assign the CH# value, select the CH# field, then press SPACEBAR to toggle to the desired value. To accept the changes, select the Accept CU#/Channel# and Start Test button, then press ENTER. From the ISDN (CU#, CH#) CHOSEN FOR TEST. **WARNING** CALLS IN PROGRESS ON TEST CIRCUIT WILL BE TERMINATED. CONTINUE WITH TEST (Y/N)? prompt, the following actions can be taken: <ul style="list-style-type: none"> To start the test, press Y. <div data-bbox="479 646 1239 1119" style="border: 1px solid black; padding: 5px; margin: 10px 0;"> <pre> PG-FlexPlus CO Line Unit #2 MAIN PERFORMANCE ALARMS CONFIG TEST INFO Subscriber Drop Test ISDN (CU1, CH1) CHOSEN FOR TEST. ** WARNING ** CALLS IN PROGRESS ON TEST CIRCUIT WILL BE TERMINATED. CONTINUE WITH TEST (Y/N)? 05/23/2002 System ID: PG-FlexPlus 14:34:08 </pre> </div> <div data-bbox="479 1150 1239 1623" style="border: 1px solid black; padding: 5px; margin: 10px 0;"> <pre> PG-FlexPlus CO Line Unit #2 MAIN PERFORMANCE ALARMS CONFIG TEST INFO Subscriber Drop Test ** ISDN (CU1, CH1) TEST IN PROGRESS ** 05/23/2002 System ID: PG-FlexPlus 14:34:35 </pre> </div> <ul style="list-style-type: none"> To abort the test, press N. Then press ESC and the Main Menu reappears.

TEST — Subscriber Drop Test (Continued)

Step	Action
4	<p>Upon completion of all tests, the Subscriber Drop Test Results screen with the Subscriber Test, Failure Condition, and Test Status results is displayed. Tests are performed in the order of display.</p> <div data-bbox="477 432 1239 905" style="border: 1px solid black; padding: 5px; margin: 10px auto; width: fit-content;"> <pre> PG-FlexPlus CO Line Unit #2 MAIN PERFORMANCE ALARMS CONFIG TEST INFO Subscriber Drop Test ISDN (CU1, CH1) SUBSCRIBER DROP TEST RESULTS SUBSCRIBER TEST FAILURE CONDITION TEST STATUS Hazardous Potential T-G or R-G > 50 Urms PASSED T-G or R-G > 135 Udc Foreign Voltage T-G or R-G AC volt. > 10 Urms PASSED T-G or R-G DC volt. > 6 Udc Resistive Fault T-G, R-G, or T-R resist. < 150 Kohms PASSED Network Termination No change in T-R DC resist. with a change in applied test voltage. FAILED 05/23/2002 System ID: PG-FlexPlus 14:34:57 </pre> </div> <p> If a test fails, the remaining tests are not performed (as per TA-909). It takes approximately seven to eight seconds for all tests to complete.</p>
5	<p>Press ESC. The Main Menu screen reappears.</p>

INFORMATION MENU OPTIONS

The Information Menu provides technical information about the system. Refer to [Table 25](#) for sub-menu options and descriptions.


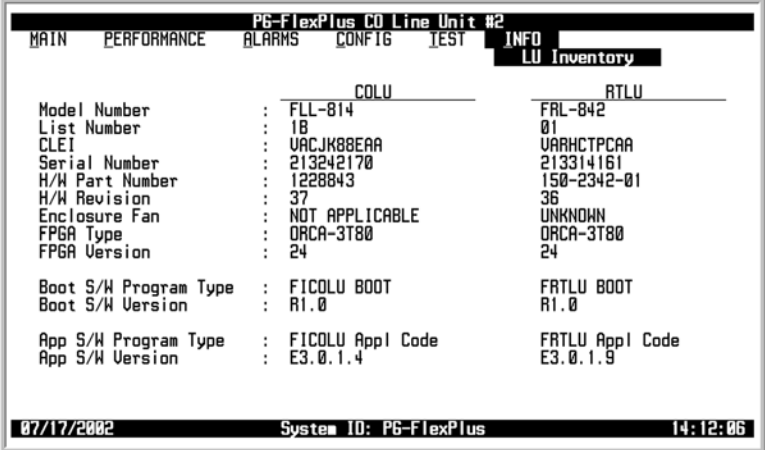


Table 25. Information Menu Options

Sub-Menu Options	Sub-Menu Descriptions
LU Inventory	Displays product identification information, manufacturing data, software versions and the hardware revisions for COLU and RTLU
RTCU Inventory	Displays product identification information, manufacturing data, software versions and the hardware revisions for RT Channel Units (CU1, CU2, CU3)
Doublers	Displays product identification information, manufacturing data, software versions and the hardware revisions for Doublers (DB1, DB2)
Common Cards	Displays product identification information, manufacturing data, software versions and the hardware revisions for Common Cards (Alarm)
Help	Provides information on using the system screens and menus


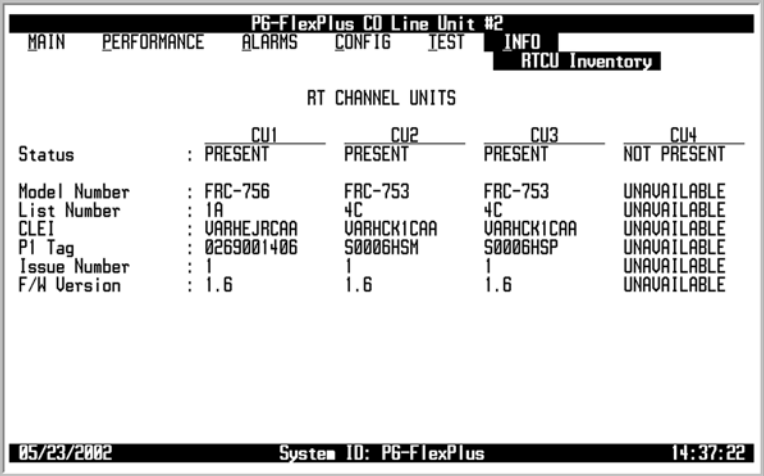
INFO — LU Inventory

This screen displays product identification information, manufacturing data, software versions and the hardware revisions for COLU and RTLU.

Step	Action																																										
1	<p>At the Main Menu screen, select INFO. Press ↓ to choose LU Inventory. The following screen appears.</p>  <p>The screenshot shows a terminal window titled "PG-FlexPlus CO Line Unit #2". The menu options are: MAIN, PERFORMANCE, ALARMS, CONFIG, TEST, and INFO. The INFO option is highlighted, and a sub-menu is displayed with options: LU Inventory, RTCU Inventory, Doublers, Common Cards, and Help. The bottom status bar shows the date 05/23/2002, System ID: PG-FlexPlus, and time 14:35:28.</p>																																										
2	<p>Press ENTER. The following screen appears.</p>  <p>The screenshot shows the "LU Inventory" screen with columns for COLU and RTLU. The data is as follows:</p> <table border="1"> <thead> <tr> <th></th> <th>COLU</th> <th>RTLU</th> </tr> </thead> <tbody> <tr> <td>Model Number</td> <td>FLL-814</td> <td>FRL-842</td> </tr> <tr> <td>List Number</td> <td>18</td> <td>01</td> </tr> <tr> <td>CLEI</td> <td>UACJK88EAA</td> <td>UAAHCTPCAA</td> </tr> <tr> <td>Serial Number</td> <td>213242170</td> <td>213314161</td> </tr> <tr> <td>H/W Part Number</td> <td>1228843</td> <td>150-2342-01</td> </tr> <tr> <td>H/W Revision</td> <td>37</td> <td>36</td> </tr> <tr> <td>Enclosure Fan</td> <td>NOT APPLICABLE</td> <td>UNKNOWN</td> </tr> <tr> <td>FPGA Type</td> <td>ORCA-3T80</td> <td>ORCA-3T80</td> </tr> <tr> <td>FPGA Version</td> <td>24</td> <td>24</td> </tr> <tr> <td>Boot S/W Program Type</td> <td>FICOLU BOOT</td> <td>FRTLU BOOT</td> </tr> <tr> <td>Boot S/W Version</td> <td>R1.0</td> <td>R1.0</td> </tr> <tr> <td>App S/W Program Type</td> <td>FICOLU Appl Code</td> <td>FRTLU Appl Code</td> </tr> <tr> <td>App S/W Version</td> <td>E3.0.1.4</td> <td>E3.0.1.9</td> </tr> </tbody> </table> <p>The bottom status bar shows the date 07/17/2002, System ID: PG-FlexPlus, and time 14:12:06.</p>		COLU	RTLU	Model Number	FLL-814	FRL-842	List Number	18	01	CLEI	UACJK88EAA	UAAHCTPCAA	Serial Number	213242170	213314161	H/W Part Number	1228843	150-2342-01	H/W Revision	37	36	Enclosure Fan	NOT APPLICABLE	UNKNOWN	FPGA Type	ORCA-3T80	ORCA-3T80	FPGA Version	24	24	Boot S/W Program Type	FICOLU BOOT	FRTLU BOOT	Boot S/W Version	R1.0	R1.0	App S/W Program Type	FICOLU Appl Code	FRTLU Appl Code	App S/W Version	E3.0.1.4	E3.0.1.9
	COLU	RTLU																																									
Model Number	FLL-814	FRL-842																																									
List Number	18	01																																									
CLEI	UACJK88EAA	UAAHCTPCAA																																									
Serial Number	213242170	213314161																																									
H/W Part Number	1228843	150-2342-01																																									
H/W Revision	37	36																																									
Enclosure Fan	NOT APPLICABLE	UNKNOWN																																									
FPGA Type	ORCA-3T80	ORCA-3T80																																									
FPGA Version	24	24																																									
Boot S/W Program Type	FICOLU BOOT	FRTLU BOOT																																									
Boot S/W Version	R1.0	R1.0																																									
App S/W Program Type	FICOLU Appl Code	FRTLU Appl Code																																									
App S/W Version	E3.0.1.4	E3.0.1.9																																									
3	<p>Press ESC. The Main Menu screen reappears.</p>																																										


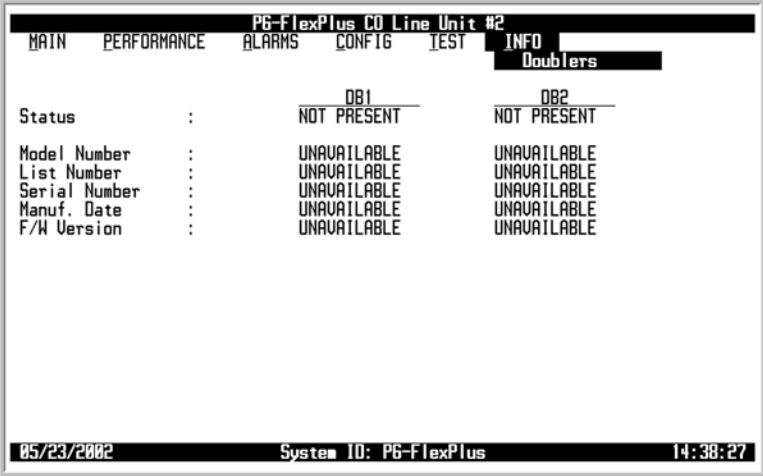
INFO — RTCU Inventory

This screen displays product identification information, manufacturing data, software versions and the hardware revisions for RT Channel Units (CU1, CU2, CU3, CU4).

Step	Action																																								
1	<p>At the Main Menu screen, select INFO. Press ↓ to choose RTCU Inventory. The following screen appears.</p>  <p>The screenshot shows a terminal window with a menu at the top: MAIN PERFORMANCE ALARMS CONFIG TEST INFO. The 'INFO' option is selected, and a sub-menu is shown with options: CU Inventory, RTCU Inventory (highlighted), Doublers, Common Cards, and Help. At the bottom, the date is 05/23/2002, System ID is PG-FlexPlus, and the time is 14:36:48.</p>																																								
2	<p>Press ENTER. The following screen appears.</p>  <p>The screenshot shows the 'RTCU Inventory' screen with the title 'RT CHANNEL UNITS'. It displays a table of information for four units:</p> <table border="1"> <thead> <tr> <th></th> <th>CU1</th> <th>CU2</th> <th>CU3</th> <th>CU4</th> </tr> </thead> <tbody> <tr> <td>Status</td> <td>PRESENT</td> <td>PRESENT</td> <td>PRESENT</td> <td>NOT PRESENT</td> </tr> <tr> <td>Model Number</td> <td>FAC-756</td> <td>FAC-753</td> <td>FAC-753</td> <td>UNAVAILABLE</td> </tr> <tr> <td>List Number</td> <td>1A</td> <td>4C</td> <td>4C</td> <td>UNAVAILABLE</td> </tr> <tr> <td>CLEI</td> <td>UARHEJCAA</td> <td>UARHCK1CAA</td> <td>UARHCK1CAA</td> <td>UNAVAILABLE</td> </tr> <tr> <td>PI Tag</td> <td>0269001406</td> <td>S0006HSH</td> <td>S0006HSP</td> <td>UNAVAILABLE</td> </tr> <tr> <td>Issue Number</td> <td>1</td> <td>1</td> <td>1</td> <td>UNAVAILABLE</td> </tr> <tr> <td>F/W Version</td> <td>1.6</td> <td>1.6</td> <td>1.6</td> <td>UNAVAILABLE</td> </tr> </tbody> </table> <p>At the bottom, the date is 05/23/2002, System ID is PG-FlexPlus, and the time is 14:37:22.</p>		CU1	CU2	CU3	CU4	Status	PRESENT	PRESENT	PRESENT	NOT PRESENT	Model Number	FAC-756	FAC-753	FAC-753	UNAVAILABLE	List Number	1A	4C	4C	UNAVAILABLE	CLEI	UARHEJCAA	UARHCK1CAA	UARHCK1CAA	UNAVAILABLE	PI Tag	0269001406	S0006HSH	S0006HSP	UNAVAILABLE	Issue Number	1	1	1	UNAVAILABLE	F/W Version	1.6	1.6	1.6	UNAVAILABLE
	CU1	CU2	CU3	CU4																																					
Status	PRESENT	PRESENT	PRESENT	NOT PRESENT																																					
Model Number	FAC-756	FAC-753	FAC-753	UNAVAILABLE																																					
List Number	1A	4C	4C	UNAVAILABLE																																					
CLEI	UARHEJCAA	UARHCK1CAA	UARHCK1CAA	UNAVAILABLE																																					
PI Tag	0269001406	S0006HSH	S0006HSP	UNAVAILABLE																																					
Issue Number	1	1	1	UNAVAILABLE																																					
F/W Version	1.6	1.6	1.6	UNAVAILABLE																																					
3	<p>Press ESC. The Main Menu screen reappears.</p>																																								


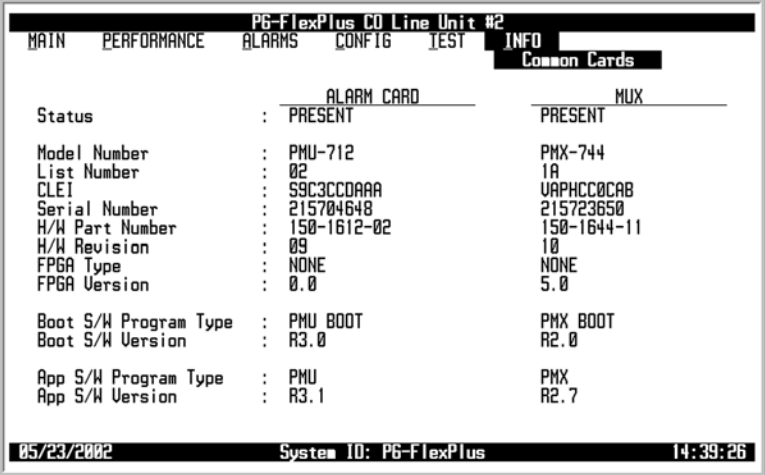
INFO — Doublers

This screen displays product identification information, manufacturing data, software versions and the hardware revisions for Doublers (DB1, DB2).

Step	Action																					
1	<p>At the Main Menu screen, select INFO. Press ↓ to choose Doublers. The following screen appears.</p>  <p>The screenshot shows a terminal window with a title bar 'PG-FlexPlus CO Line Unit #2'. The menu options are: MAIN, PERFORMANCE, ALARMS, CONFIG, TEST, and INFO. The INFO menu is expanded to show: LU Inventory, RTCU Inventory, Doublers (highlighted), Common Cards, and Help. The status bar at the bottom shows '05/23/2002', 'System ID: PG-FlexPlus', and '14:37:48'.</p>																					
2	<p>Press ENTER. The following screen appears.</p>  <p>The screenshot shows the 'Doublers' screen with columns for DB1 and DB2. The data is as follows:</p> <table border="1"> <thead> <tr> <th></th> <th>DB1</th> <th>DB2</th> </tr> </thead> <tbody> <tr> <td>Status :</td> <td>NOT PRESENT</td> <td>NOT PRESENT</td> </tr> <tr> <td>Model Number :</td> <td>UNAVAILABLE</td> <td>UNAVAILABLE</td> </tr> <tr> <td>List Number :</td> <td>UNAVAILABLE</td> <td>UNAVAILABLE</td> </tr> <tr> <td>Serial Number :</td> <td>UNAVAILABLE</td> <td>UNAVAILABLE</td> </tr> <tr> <td>Manuf. Date :</td> <td>UNAVAILABLE</td> <td>UNAVAILABLE</td> </tr> <tr> <td>F/W Version :</td> <td>UNAVAILABLE</td> <td>UNAVAILABLE</td> </tr> </tbody> </table> <p>The status bar at the bottom shows '05/23/2002', 'System ID: PG-FlexPlus', and '14:38:27'.</p>		DB1	DB2	Status :	NOT PRESENT	NOT PRESENT	Model Number :	UNAVAILABLE	UNAVAILABLE	List Number :	UNAVAILABLE	UNAVAILABLE	Serial Number :	UNAVAILABLE	UNAVAILABLE	Manuf. Date :	UNAVAILABLE	UNAVAILABLE	F/W Version :	UNAVAILABLE	UNAVAILABLE
	DB1	DB2																				
Status :	NOT PRESENT	NOT PRESENT																				
Model Number :	UNAVAILABLE	UNAVAILABLE																				
List Number :	UNAVAILABLE	UNAVAILABLE																				
Serial Number :	UNAVAILABLE	UNAVAILABLE																				
Manuf. Date :	UNAVAILABLE	UNAVAILABLE																				
F/W Version :	UNAVAILABLE	UNAVAILABLE																				
3	<p>Press ESC. The Main Menu screen reappears.</p>																					


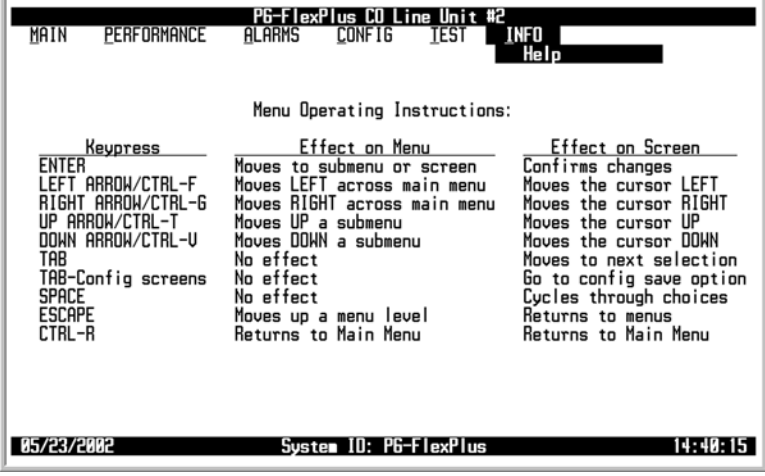
INFO — Common Cards

This screen displays product identification information, manufacturing data, software versions and the hardware revisions for Common Cards (PMU/PAU and PMX cards).

Step	Action																																										
1	<p>At the Main Menu screen, select INFO. Press ↓ to choose Common Cards. The following screen appears.</p>  <p>The screenshot shows a terminal window with a title bar 'PG-FlexPlus CO Line Unit #2'. The menu options are: MAIN, PERFORMANCE, ALARMS, CONFIG, TEST, and INFO. The INFO menu is expanded, showing: LU Inventory, RTCU Inventory, Doublers, Common Cards (highlighted), and Help. At the bottom, it shows the date '05/23/2002', 'System ID: PG-FlexPlus', and the time '14:38:57'.</p>																																										
2	<p>Press ENTER. The following screen appears.</p>  <p>The screenshot shows the 'Common Cards' screen with the following data:</p> <table border="1"> <thead> <tr> <th></th> <th>ALARM CARD</th> <th>MUX</th> </tr> </thead> <tbody> <tr> <td>Status</td> <td>: PRESENT</td> <td>PRESENT</td> </tr> <tr> <td>Model Number</td> <td>: PMU-712</td> <td>PMX-744</td> </tr> <tr> <td>List Number</td> <td>: 02</td> <td>1A</td> </tr> <tr> <td>CLEI</td> <td>: S9C3CCDAAA</td> <td>UAPHCC0CAB</td> </tr> <tr> <td>Serial Number</td> <td>: 215704648</td> <td>215723650</td> </tr> <tr> <td>H/W Part Number</td> <td>: 150-1612-02</td> <td>150-1644-11</td> </tr> <tr> <td>H/W Revision</td> <td>: 09</td> <td>10</td> </tr> <tr> <td>FPGA Type</td> <td>: NONE</td> <td>NONE</td> </tr> <tr> <td>FPGA Version</td> <td>: 0.0</td> <td>5.0</td> </tr> <tr> <td>Boot S/W Program Type</td> <td>: PMU BOOT</td> <td>PMX BOOT</td> </tr> <tr> <td>Boot S/W Version</td> <td>: R3.0</td> <td>R2.0</td> </tr> <tr> <td>App S/W Program Type</td> <td>: PMU</td> <td>PMX</td> </tr> <tr> <td>App S/W Version</td> <td>: R3.1</td> <td>R2.7</td> </tr> </tbody> </table> <p>At the bottom, it shows the date '05/23/2002', 'System ID: PG-FlexPlus', and the time '14:39:26'.</p>		ALARM CARD	MUX	Status	: PRESENT	PRESENT	Model Number	: PMU-712	PMX-744	List Number	: 02	1A	CLEI	: S9C3CCDAAA	UAPHCC0CAB	Serial Number	: 215704648	215723650	H/W Part Number	: 150-1612-02	150-1644-11	H/W Revision	: 09	10	FPGA Type	: NONE	NONE	FPGA Version	: 0.0	5.0	Boot S/W Program Type	: PMU BOOT	PMX BOOT	Boot S/W Version	: R3.0	R2.0	App S/W Program Type	: PMU	PMX	App S/W Version	: R3.1	R2.7
	ALARM CARD	MUX																																									
Status	: PRESENT	PRESENT																																									
Model Number	: PMU-712	PMX-744																																									
List Number	: 02	1A																																									
CLEI	: S9C3CCDAAA	UAPHCC0CAB																																									
Serial Number	: 215704648	215723650																																									
H/W Part Number	: 150-1612-02	150-1644-11																																									
H/W Revision	: 09	10																																									
FPGA Type	: NONE	NONE																																									
FPGA Version	: 0.0	5.0																																									
Boot S/W Program Type	: PMU BOOT	PMX BOOT																																									
Boot S/W Version	: R3.0	R2.0																																									
App S/W Program Type	: PMU	PMX																																									
App S/W Version	: R3.1	R2.7																																									
3	<p>Press ESC. The Main Menu screen reappears.</p>																																										

INFO — Help

This screen provides information on using the system screens and menus.

Step	Action
1	<p>At the Main Menu screen, select INFO. Press ↓ to choose Help. The following screen appears.</p> 
2	<p>Press ENTER. The following screen appears.</p> 
3	<p>Press Esc. The Main Menu screen reappears.</p>

FAULT ISOLATION AND TROUBLESHOOTING

Table 26 provides fault isolation and troubleshooting procedures for the FLL-814.

Table 26. FLL-814 and FRL-842 Fault Isolation

Indicator	Probable Cause	Solution
No LEDs On	<ul style="list-style-type: none"> No input power FLL-814 power fuse blown FLL-814 processor stopped 	Check input power at COT shelf backplane with FLL-814 removed
		If power is present at COT shelf backplane, replace the FLL-814
		If power is not present at COT shelf backplane, replace the fuse in the backplane
PWR LED off	No input power	Check input power at COT shelf backplane with FLL-814 removed
	On-board fuse is blown on FLL-814	If power is present at COT shelf backplane, replace the FLL-814
		If power is not present at COT shelf backplane, replace the fuse in the backplane
Fault LED On	Indicates an fault condition on the FLL-814 has been detected	Replace the FLL-814
Alarm LED On	Indicates an existing alarm condition on the FLL-814	From the Main Menu (Performance sub-menu), determine the cause of the alarm. Correct the condition, if possible. If you cannot view the FLL-814 Main screen, a communication error exists.
		Remove and re-insert the FLL-814
		If the communication error still exists, replace the FLL-814
Alarm LED Flashing	Indicates an existing alarm condition on the FRL-842	From the Main Menu (Performance sub-menu), determine the cause of the alarm. Correct the condition, if possible. If you cannot view the FLL-814 Main screen, a communication error exists.
		Remove and re-insert the FLL-814
		If the communication error still exists, replace the FLL-814
Margin LED On	Distance limitation	From the Main Menu (Performance sub-menu), verify that no alarms exist.
	Fault in HDSL line	Initial installation, verify the distance between COT shelf and RT. Also, view HDSL loss.
	Faulty FLL-814	If existing installation, view loss of HDSL line to ensure that the maximum allowable loss has not been exceeded
		Replace FLL-814 and/or the RT

Indicator	Probable Cause	Solution
SYNC LED Off	HDSL line has lost synchronization	Initial installation, check engineering records for distance between COT shelf and RT
	Distance limitation may have been exceeded	
	Faulty FLL-814	If existing installation, view loss of HDSL line to ensure that the maximum allowable loss has not been exceeded

SUBSCRIBER REPORTED FAULTS

Table 27 provides fault isolation procedures for the system. Problems are listed in decreasing order of probability; the most likely action to resolve the problem is listed first. It is assumed that the system has successfully powered up, the HDSL circuits are synchronized end-to-end, there are no ES, UAS, or margin errors occurring, and no Fault LEDs are illuminated on the units installed in the COT Shelf or RT Enclosure.

Table 27. Subscriber Fault Isolating

Indication	Problem	Action
All subscriber circuits cannot draw dial tone, telephones are not ringing, and ISDN circuits are not synchronizing	Incorrect provisioning of the PMX-744(s) and/or FLL-814	PMX-744 – Verify the system options are set correctly FLL-814 – Verify the timeslots are correctly assigned and enabled for all mapped circuits
	Problem with the DS1 signals	DS1 – Verify the presence and integrity of the DS1 signals terminated on the COT shelf
	Undetected hardware problem	Replace the following units with known good units in the following order: - FLL-814 - FRL-842 - PMX-744(s) - RT channel units
One or more subscriber circuits on a single channel unit can not draw dial tone, telephones are not ringing, and ISDN circuits are not synchronizing	Undetected hardware problem	Replace the following units with known good units in the following order: - RT channel unit on which the failures are occurring - FRL-842 - All RT channel units of the same type on which the failures are occurring



If system problems cannot be resolved after following the procedures in Table 27, contact Product Support on page 121.

Appendix A

24 Channel Line Unit Feature Matrix

Feature	FLL-812	FLL-814				FRL-842 ⁽¹⁾				
	L1A	L1	L1A	L1B	L2	L1	L1A	L1B	L1C	L2
Power										
Line	•	•	•	•	•	•	•	•	•	
Local	•			•						•
Alarms										
System	•	•	•	•	•	•	•	•	•	•
Environmental	•			•	•			•	•	•
Fan	•			•	•			•	•	•
Subscriber Drop Testing										
TR-909	•	•	•	•	•	•	•	•	•	•
Bypass Pair	•	•	•	•	•	•	•	•	•	•
Management										
TL1			•	•	•		•	•	•	•
Switch Interface										
UDLC	•					•	•	•	•	•
IDLC		•	•	•	•	•	•	•	•	•
Services										
POTS	•	•	•	•	•	•	•	•	•	•
ISDN	•	•	•	•	•	•	•	•	•	•
Customer Defaults										
BellSouth					•					
Notes:										
• Feature implemented										
⁽¹⁾ Default configuration parameters for the FRL-842 are determined by the FLL-812/FLL-814										

Compatibility Matrix

CO Line Unit		Compatibility	RT Line Unit	
Catalog/List Numbers	App S/W Version		Catalog/List Numbers	App S/W Version
FLL-812 L1A	1.x	Compatible with	FRL-842 L1B, L1C, L2	3.2 or later
FLL-814 L1	1.1	Compatible with	FRL-842 L1	1.1
FLL-814 L1A, L2	2.x	Compatible with	FRL-842 L1A	2.X
FLL-814 L1B	3.2	Compatible with	FRL-842 L1B	3.2
FLL-814 L1A, L1B, L2	2.x or later	Compatible with	FRL-842 L1C	3.3 or later
FLL-814 L1B	3.2 or later	Compatible with	FRL-842 L2	3.3 or later

Note:
x = Any Number

ACRONYMS

A

AWG – American Wire Gauge

C

CD – Carrier Defect

CEV – Controlled Environment Vault

CO – Central Office

COT – Central Office Terminal

CPE – Customer Premises Equipment

CU – Channel Unit

D

DCE – Data Carrier Equipment

DS0 – Digital Signal Level 0

DSR – Data Set Ready

DTE – Data Terminal Equipment

DTR – Data Terminal Ready

E

ES – Errored Seconds

ESD – Electrostatic Discharge

F

FCC – Federal Communications Commission

G

GND – Ground

H

HDSL – High-bit-rate Digital Subscriber Line

I

IDLC – Integrated Digital Loop Carrier

ISDN – Integrated Services Digital Network

L

LED – Light Emitting Diode

LOS – Loss of Signal

LS/GS – Loop Start/Ground Start

LU – Line Unit

M

MLT – Mechanized Loop Testing

MU – Management Unit

MUX – Multiplexer

N**NEBS** – Network Equipment Building System**NT1** – Network Termination Type-1**P****PGTC** – Pair Gain Test Controller**PM** – Performance Monitoring**POTS** – Plain Old Telephone Service**R****REN** – Ringer Equivalence**RMA** – Return Material Authorization**RT** – RemoteTerminal**S****SES** – Severely Errored Seconds**SYNC** – Synchronization**T****TBCU** – Test Bus Control Unit**U****UAS** – Unavailable Seconds**X****xDU** – Doubler Unit**Z****ZBS** – Zero Bit Substitution

PRODUCT SUPPORT

TECHNICAL SUPPORT

Technical Assistance is available 24 hours a day, 7 days a week by the contacting Customer Service Engineering group at:

Telephone: 800.366.3891
The 800 telephone support line is toll-free in the U.S. and Canada.

Email: wsd_support@adc.com

Knowledge Base: http://adc.com/Knowledge_Base/index.jsp

Web: www.adc.com

LIMITED WARRANTY

Product warranty is determined by your service agreement. Refer to the ADC Warranty/Software Handbook for additional information, or contact your sales representative or Customer Service for details.

RETURNS

To return equipment to ADC:

1. Locate the number of the purchase order under which the equipment was purchased. To obtain a return authorization number, you need to provide the original purchase order number to ADC's Return Material Authorization (RMA) Department.
2. Call or write ADC's RMA Department to ask for an RMA number and any additional instructions. Use the telephone number, fax number or email address listed below:
 - Telephone: 800.366.3891
 - Email Address: rma@ADC.com
3. Include the following information, in writing, along with the equipment you are returning:
 - Company name and address
 - Contact name and telephone number
 - Shipping address to which ADC should return the repaired equipment
 - Original purchase order number
 - Description of the equipment that includes the model and part number of each unit being returned, as well as the number of units that you are returning.
 - Reason for the return. For example:
 - The equipment needs an ECO/ECN upgrade.
 - The equipment is defective.



If the equipment is defective, please tell us what you observed just before the equipment malfunctioned. Be as detailed in your description as possible.

If there is any other reason for returning the equipment, please let us know so we can determine how best to help you.

4. Pack the equipment in a shipping carton.

5. Write ADC's address and the RMA Number you received from the RMA Department clearly on the outside of the carton and return to:

ADC DSL Systems, Inc.

14402 Franklin Ave.

Tustin, CA 92780-7013

Attention: **RMA (Number)**



All shipments are to be returned prepaid. ADC will not accept any collect shipments.

FCC CLASS A COMPLIANCE

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the use will be required to correct the interference at his own expense.

MODIFICATIONS

The FCC requires the user to be notified that any changes or modifications made to this device that are not expressly approved by ADC voids the user's warranty.

All wiring external to the product(s) should follow the provisions of the current edition of the National Electrical Code.

World Headquarters:

ADC Telecommunications, Inc.
12501 Whitewater Drive
Minnetonka, Minnesota USA 55343

For Technical Assistance:

800.366.3891



1262061
