


QUICK INSTALLATION

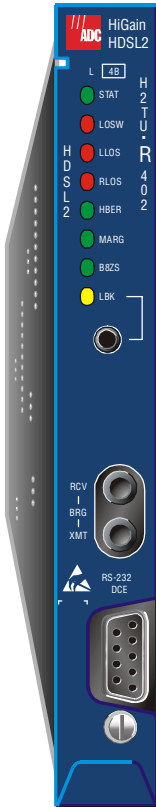

H2TU-R-402 LIST 4B REMOTE UNIT

H2TU-R-402 LIST 4B

The H2TU-R-402 List 4B functions as the remote end of a repeaterless T1 transmission system when connected to a HiGain HDSL2 line unit (H2TU-C). Setting new standards for interoperability and efficiency, HiGain HDSL2 modules transmit a 1.544 Mbps T1 payload on one unconditioned copper pair over the full Carrier Service Area (CSA) range.


FEATURES

-
- Front-panel status LEDs and craft port
 - Performance Report Messaging (SPRM and NPRM)
 - Local or line-powered
 - Blockage Indicator History
 - Loss of Signal (LOS)/Alarm Indication Signal (AIS) payload alarm option
 - Remote provisioning through TL1 FDL or 11-bit payload commands
 - Transceiver optimized to better adapt to cable impairments
 - Bit Error Rate (BER) alarm options
 - Bipolar Violation Transparency (BPVT) options
 - DS1 Sectionalized Event Log
 - Ultra-low wander
 - Payload or HiGain loopback source identification
 - HiGain HDSL2 maintenance screens for remote provisioning, performance monitoring, inventory, and troubleshooting
-

SPECIFICATIONS

Operating Temperature	-40 °F to +149 °F (-40 °C to + 65 °C)
Operating Humidity	5% to 95% non-condensing
Line Power Consumption	5 W
Electrical Protection	Secondary surge and power cross protection on all DS1 and HDSL2 ports
Mounting	Any 400 or 200 mechanics shelf
HDSL2 Line Rate	1.552 Mbps Overlapped Pulse Amplitude Modulated Transmission with Interlocking Spectra (OPTIS)
HDSL2 Output	+16.5 dBm \pm 0.5 dBm, 135 Ω
DS1 Pulse Output	0 dB, -7.5 dB, -15 dB
Maximum Provisioning Loss	35 dB at 196 KHz, 135 Ω
DS1 Line Rate	1.544 Mbps \pm 200 bps
DS1 Line Format	Alternate Mark Inversion (AMI) or Bipolar with 8-zero Substitution (B8ZS)
DS1 Frame Format	Extended SuperFrame (ESF), SuperFrame (SF), or Unframed (UNFR)

1 INSTALLATION

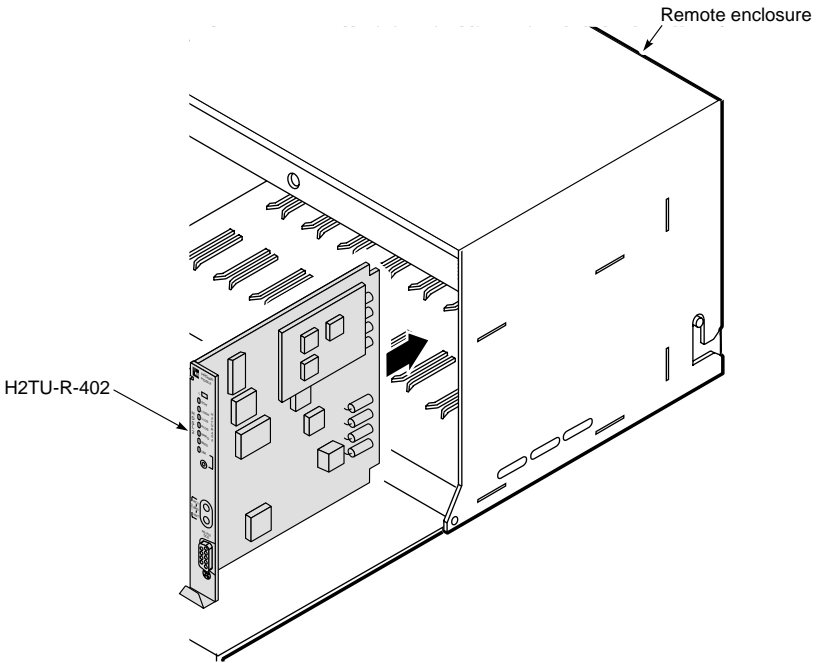

**Wear an antistatic wrist strap when installing the H2TU-R.
Avoid touching components on the circuit board.**


- 1 Align the H2TU-R with the enclosure slot guides and slide the unit in. Push the unit back until it touches the backplane card-edge connector.
- 2 Place your thumbs on the H2TU-R front panel and push the unit into the card-edge connector.

Continued



Card-edge connector

56	<input type="checkbox"/>	55	Tip
54	<input type="checkbox"/>	53	DS1 RCV
52	<input type="checkbox"/>	51	Ring
50	<input checked="" type="checkbox"/>	49	Ring1
48	<input type="checkbox"/>	47	Ring1
46	<input type="checkbox"/>	45	HDSL2
44	<input type="checkbox"/>	43	Span
42	<input checked="" type="checkbox"/>	41	Tip 1
40	<input type="checkbox"/>	39	Factory use only
38	<input checked="" type="checkbox"/>	37	Factory use only
36	<input type="checkbox"/>	35	Factory use only
34	<input type="checkbox"/>	33	Factory use only
32	<input type="checkbox"/>	31	Factory use only
30	<input type="checkbox"/>	29	Factory use only
28	<input checked="" type="checkbox"/>	27	Chassis Ground*
26	<input type="checkbox"/>	25	Factory use only
24	<input type="checkbox"/>	23	Factory use only
22	<input type="checkbox"/>	21	Factory use only
20	<input checked="" type="checkbox"/>	19	Factory use only
18	<input type="checkbox"/>	17	Factory use only
16	<input checked="" type="checkbox"/>	15	Ring1
14	<input type="checkbox"/>	13	Factory use only
12	<input type="checkbox"/>	11	Factory use only
10	<input type="checkbox"/>	9	Factory use only
8	<input type="checkbox"/>	7	Factory use only
6	<input checked="" type="checkbox"/>	5	Tip1
4	<input type="checkbox"/>	3	DS1 XMT
2	<input type="checkbox"/>	1	Factory use only

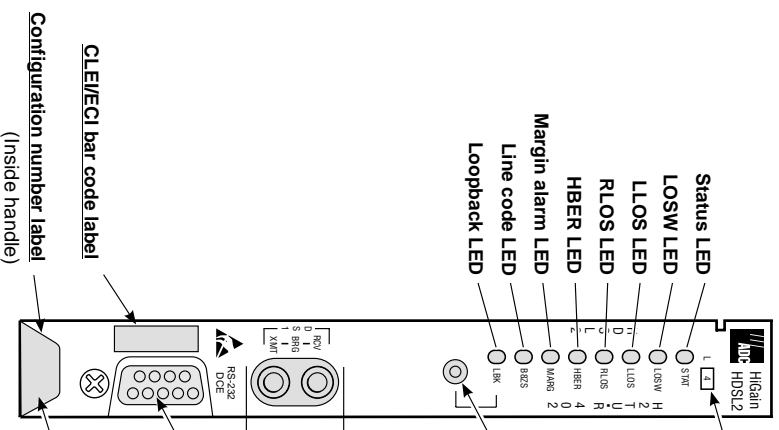

List number

Indicates the list number of the H2TU-R-402.

Loopback control button

Press the button for 5 seconds to activate a bidirectional loopback towards the network and the customer (NREM and CLOC). Any existing loopback is terminated before these loopbacks are activated. The unit can be looped down by pressing the LPBK control button again for 5 seconds, by the standard loopdown inband messages, or by the maintenance terminal.

DS1 input (XMT) and output (RCV) bridging (BRG) jacks

Provides non-intuitive bridging jack access to (RCV) and from (XMT) the HDSL2 span at the DS1 interface. Allows testing of the HDSL2 system.

Craft port provisioning

To access all system maintenance, provisioning, and performance screens, connect a standard 9-pin terminal cable between the serial port on a PC and the H2TU-R craft port.

Extraction handle

Use to remove the H2TU-R-402 from its slot.

Maintenance Terminal Modem Settings

9600 baud
8 data bits
No parity
1 stop bit
Hardware flow control: OFF
Terminal emulation: VT-100

Active pins are highlighted in black.

* Chassis Ground may be tied to Earth Ground according to local practice.

2 VERIFICATION

Once the H2TU-R is installed, verify that it is operating properly by monitoring the Status LEDs on the front panel.


Status LED Descriptions

LED Status	Indicates
Status (STAT) LED OFF Solid green Blinking once per second	Shows status of power, loop acquisition, and span synchronization. Indicates that no power is applied to the H2TU-R. Indicates normal operation: the HDSL2 span is synchronized. Indicates that the HDSL2 loop is trying to acquire synchronization.
Loss of Sync Word (LOSW) LED OFF Solid red	Shows synchronization status for the connected HDSL2 span. Indicates normal operation: the connected HDSL2 span is synchronized. Indicates that the HDSL2 loop has lost synchronization.
Line (Unit) Loss of Signal (LLOS) LED OFF Solid red	Shows the presence of the DSX-1 signal at the H2TU-C line unit. Indicates normal operation: the DSX-1 signal is present at the H2TU-C. Indicates a loss of the DSX-1 signal at the H2TU-C.
Remote (Unit) Loss of Signal (RLOS) LED OFF Solid red	Shows presence of the DS1 signal at the H2TU-R. Indicates normal operation: the DS1 signal is present at the H2TU-R. Indicates a loss of the DS1 signal at the H2TU-R.
HDSL2 Block Error Rate (HBER) LED OFF Solid green Solid red	Shows the status of the HDSL2 Block Error Rate (HBER) alarm for the span connected to the H2TU-R. The HDSL2 span is not synchronized. Indicates that the span connected to the H2TU-R has no HBER alarm. Indicates that the span connected to the H2TU-R has crossed the HBER alarm threshold.
Margin alarm (MARG) LED OFF Solid green Solid red	Shows the status of the MARG alarm for the span connected to H2TU-R. Indicates that the HDSL2 span is not synchronized. Indicates that the HDSL2 span connected to the H2TU-R is synchronized. Indicates that the span connected to the H2TU-R has crossed the MARG alarm threshold.
Line code (B8ZS) LED OFF Solid green	Shows whether the line code option is provisioned for AMI or B8ZS. Indicates that the system is provisioned for AMI line code. Indicates that the system is provisioned for B8ZS line code.
Loopback (LBK) LED OFF Solid yellow	Shows the presence of an active loopback at the H2TU-R. Indicates no loopback at the H2TU-R. Indicates there is loopback activated at the H2TU-R.

3 LOGGING ON TO THE MAIN MENU

The H2TU-R supports remote logon through a maintenance terminal (ASCII terminal or a PC running terminal emulation software) connected to the craft port on the H2TU-R front panel.

Logging on creates menus and screens for the H2TU-R that are replications of those viewed at the H2TU-C. Once logged on, you can view system settings and inventory, initiate loopbacks, monitor performance, and configure the circuit.

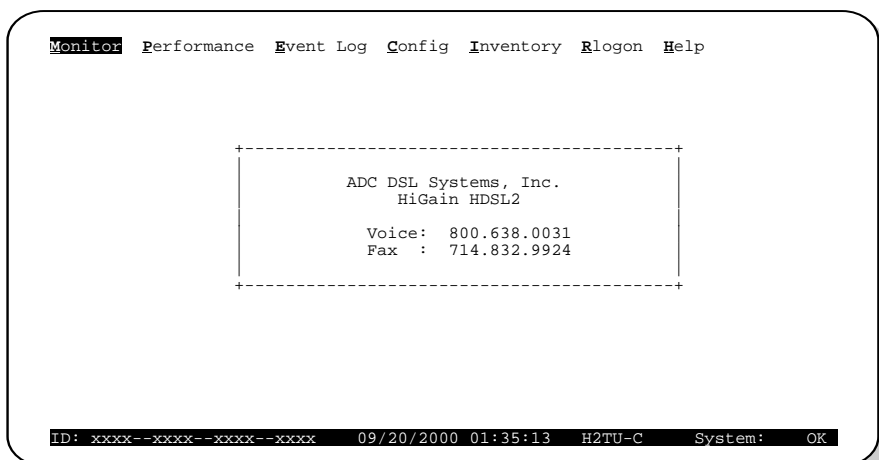

To log on using a maintenance terminal:

- 1 Press **CTRL** + **R** to refresh the Logon screen, if necessary.
- 2 Press the first letter of the desired menu. Use the **SPACEBAR** to cycle through menu selections and press **ENTER** to change a setting or display a menu.
- 3 Press **R** to log off.


Type the first letter	To view:
M onitor	A graphical representation of circuit activity and devices.
P erformance	Performance history statistics (current, 25-hour, 48-hour, 31-day, blockage indicator) at DS1 and HDSL interfaces. Also, displays alarm status and count.
E vent log	Sectionalized Event History for alarms and errors at all four legs of the DS1 signal at the H2TU-R.
C onfig	Configuration options (standard, ADC, signal generation, date and time, master clear, factory defaults).
I nventory	Product information, circuit and unit identifications.
R ogon	Maintenance terminal screens at the H2TU-C.
H elp	Glossary, screen navigation keys, ADC contact information.



For more information about the HiGain HDSL2 maintenance screens, refer to the technical practice for the H2TU-C line unit. Publications can be downloaded from the ADC website at www.adc.com. To order a hard copy, please contact ADC Product Literature at 1.800.370.9670 (extension 14) or 1.714.832.9922 (extension 14) or email ADC at wsd_info@adc.com

4 LOOPBACK TESTING

Initiate loopbacks with the H2TU-R-402 LBK button, the H2TU-C front-panel display, the maintenance terminal monitor screen, or with inband codes. The inband codes shown below can be sent by a test set. For more information, refer to the technical practice for the H2TU-C line unit.

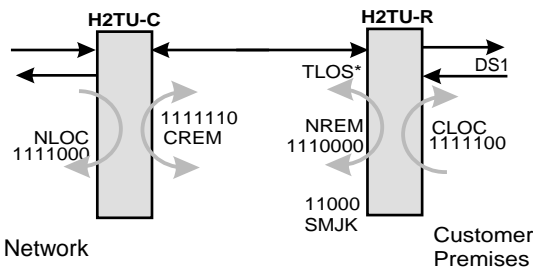

* When enabled, TLOS is an automatic loopback that occurs with a LOS at the remote DS1 input.

GNLB Loopback Commands

Loopback	Inband Code	Description
NLOC	1111000	DSX-1 signal is looped back to the network at the H2TU-C.
NREM	1110000	DSX-1 signal is looped back to the network at the H2TU-R.
SMJK	11000	DSX-1 signal is looped back to the network at the H2TU-R SmartJack module.
CREM	1111110	Signal from customer is looped back to the customer at the H2TU-C.
CLOC	1111100	Signal from customer is looped back to the customer at the H2TU-R.
Loopdown	11100	Deactivates any of the above loopbacks.

FCC Class A Compliance

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

Limited Warranty

Product warranty is determined by your service agreement. Contact your sales representative or Customer Service for details.

Modifications

Any changes or modifications made to this device that are not expressly approved by ADC DSL Systems, Inc. voids the user's warranty.

All wiring external to the products should follow the provisions of the current edition of the National Electrical Code.

Standards Compliance

This equipment has been tested and verified to comply with the applicable sections of the following standards:

- GR 63-CORE - Network Equipment-Building System (NEBS) Requirements
- GR 1089-CORE - Electromagnetic Compatibility and Electrical Safety
- Binational standard, UL-1950/CSA-C22.2 No. 950-95: Safety of Information Technology Equipment

Trademark Information

ADC and Soneplex are registered trademarks of ADC Telecommunications, Inc. HiGain is a registered trademark of PairGain Technologies, Inc. Other product names mentioned in this installation guide are used for identification purposes only and may be trademarks or registered trademarks of their respective companies.

Copyright Information

© 2001 ADC DSL Systems, Inc. All rights reserved. Information contained in this document is company private to ADC DSL Systems, Inc., and shall not be modified, used, copied, reproduced or disclosed in whole or in part without the written consent of ADC.

ADC DSL Systems, Inc.

14402 Franklin Avenue
Tustin, CA 92780-7013
Tel: 714.832.9922
Fax: 714.832.9924

Technical Assistance

800.638.0031
714.730.3222



Product: H2TU-R-402-L4B
CLEI: VAR1DACA
Document: LTPH-QI-1079-02, Issue 2



1191545
August 1, 2001