


QUICK INSTALLATION

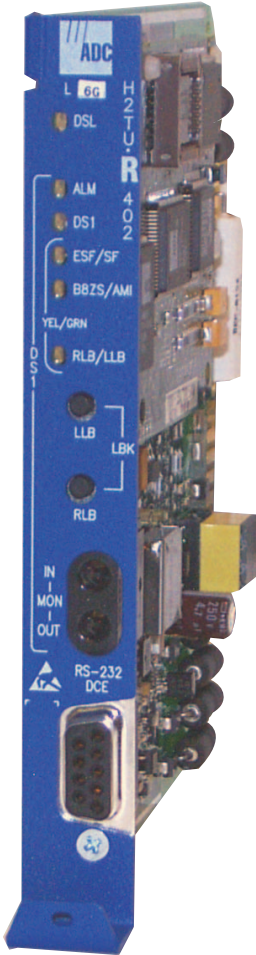

HIGAIN

H2TU-R-402 LIST 6G (LINE POWER)

H2TU-R-402 LIST 6H (LOCAL POWER)

REMOTE UNIT

THE H2TU-R-402 LIST 6G/LIST 6H

The H2TU-R-402 List 6G/List 6H (H2TU-R) functions as the remote end of a repeaterless T1 transmission system when connected to a HiGain® HDSL2 line unit (H2TU-C). The H2TU-R-402 List 6G is for line power only and the H2TU-R-402 List 6H is for local power only. Setting new standards for interoperability and efficiency, HiGain HDSL2 modules transmit 1.544 Mbps T1 payload on one unconditioned copper pair over the full Carrier Service Area (CSA) range.

FEATURES

Front panel: status LEDs, craft port for maintenance screen access, DS1 monitor jacks, and LLB and RLB loopback pushbuttons for activating loopback commands

Maintenance screens for inventory, provisioning, performance monitoring, troubleshooting, including:

- Remote provisioning through TL1 FDL commands
- Loop attenuation and insertion loss reporting


- HDSL2 Tip/Ring reversal indication
- Power Back Off (PBON and PBOC) for configuring HDSL2 transmit power to reduce crosstalk
- Performance Report Messaging (SPRM, NPRM, and AUTO)

SPECIFICATIONS

Operating Temperature	-40°F to +149°F (-40°C to + 65°C)
Operating Humidity	5% to 95% non-condensing
Line Power Consumption	4.5 Watts
Electrical Protection	Secondary surge and power cross-protection on all DS1 and HDSL2 ports
Mounting	Any 400 or 200 mechanics shelf
HDSL2 Line Rate	1.552 Mbps Overlapped Pulse Amplitude Modulated Transmission with Interlocking Spectra (OPTIS)
HDSL2 Output	+16.5 dBm ±0.5 dBm, 135Ω
DS1 Pulse Output	0 dB, -7.5 dB, -15 dB
Maximum Insertion Loss	35 dB at 196 KHz, 135Ω
DS1 Line Rate	1.544 Mbps ±200 bps
DS1 Line Format	Alternate Mark Inversion (AMI) or Bipolar with 8-zero Substitution (B8ZS)
DS1 Frame Format	Extended SuperFrame (ESF), SuperFrame (SF), or Unframed (UNFR)

1

INSTALLATION

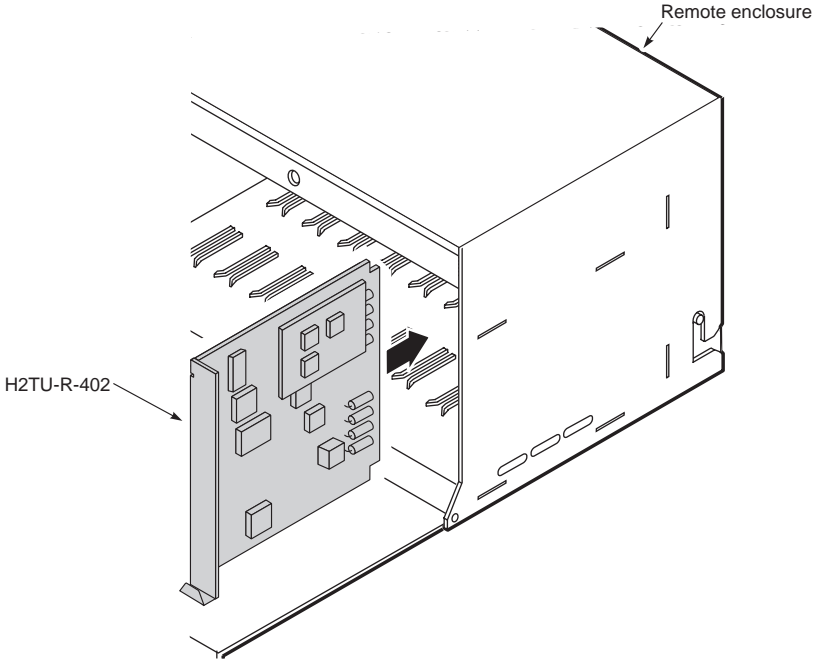

**Wear an antistatic wrist strap when installing the H2TU-R.
Avoid touching components on the circuit board.**

Align the H2TU-R with the enclosure slot guides and slide the unit in until it touches the backplane card-edge connector. Place your thumbs on the H2TU-R front panel and push the unit into the card-edge connector.

Continued




Card-edge connector

56	<input type="checkbox"/>	55	Tip
54	<input type="checkbox"/>	53	DS1 IN
52	<input type="checkbox"/>	51	
50	<input type="checkbox"/>	49	Ring
48	<input checked="" type="checkbox"/>	47	DS1 OUT
46	<input type="checkbox"/>	45	
44	<input type="checkbox"/>	43	Tip 1
42	<input type="checkbox"/>	41	
40	<input checked="" type="checkbox"/>	39	Chassis GND*
38	<input checked="" type="checkbox"/>	37	
36	<input checked="" type="checkbox"/>	35	-48V (L6H)
34	<input type="checkbox"/>	33	Factory use only
32	<input type="checkbox"/>	31	
30	<input type="checkbox"/>	29	Factory use only
28	<input checked="" type="checkbox"/>	27	
26	<input type="checkbox"/>	25	Factory use only
24	<input type="checkbox"/>	23	
22	<input type="checkbox"/>	21	Factory use only
20	<input checked="" type="checkbox"/>	19	
18	<input checked="" type="checkbox"/>	17	-48V Return (L6H)
16	<input checked="" type="checkbox"/>	15	Ring 1
14	<input type="checkbox"/>	13	Ring
12	<input checked="" type="checkbox"/>	11	HDSL2 Span
10	<input type="checkbox"/>	9	
8	<input type="checkbox"/>	7	Tip
6	<input type="checkbox"/>	5	Tip 1
4	<input type="checkbox"/>	3	Chassis GND
2	<input checked="" type="checkbox"/>	1	

Note: No battery connection for L6G.

Active pins are highlighted in black.
* Chassis Ground may be tied to Earth Ground according to local practice.

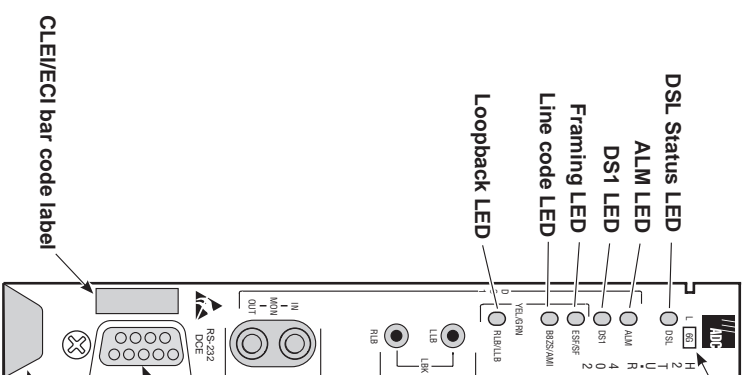

List number
Indicates the list number of the H2TU-R-402.

Loopback control pushbuttons

Press the pushbutton for 5 seconds to activate a dual loopback at the network (RLB) or at the customer (LLB). Any existing loopbacks is terminated before these loopbacks are activated. The unit can be looped down by pressing either control pushbutton again for 5 seconds, by the standard loopdown inband messages, or by the maintenance terminal.

DS1 input (OUT) and output (IN) monitor (MON) jacks

Provides non-intrusive access monitor to the DS1 signal received from (IN) and transmitted to (OUT) the Customer Premises Equipment (CPE). Allows testing of the HDSL2 system.

Craft port provisioning

To access all system maintenance, provisioning, and performance screens, connect a standard 9-pin terminal cable between the serial port on a PC and the H2TU-R craft port.

Extraction handle

Use to remove the H2TU-R-402 from its slot.

Maintenance Terminal Modern Settings

9600 baud
8 data bits
No parity
1 stop bit
Hardware flow control: OFF
Terminal emulation: VT100

2 VERIFICATION

Once the H2TU-R is installed, verify that it is operating properly by monitoring the Status LEDs on the front panel.


Table 1. LED Status and Functions

LED/Status	Function
DSL	
OFF	No power is applied to the H2TU-R.
Solid green	Normal operation: the HDSL2 span is synchronized.
Solid red	HBER, MARG, or PWR alarm is present at the H2TU-R.
Flashing red once per second	HDSL2 loop is attempting synchronization.
ALM	
OFF	Normal operation: the DS-1 signal is present at both the H2TU-R and H2TU-C.
Solid yellow	LLOS is present at the H2TU-C.
Solid red	RLOS is present at the H2TU-R.
DS1	
Solid green	Normal operation: the DS1 signal at the H2TU-R is error free.
Solid red	RLOS, BPV, frame error, or CRC is detected at the H2TU-R.
ESF/SF	
OFF	Unframed DS1 present at the H2TU-R, unit set as unframed, or no DS1 is detected at the H2TU-R.
Solid yellow	ESF frame formatting is present at the H2TU-R.
Flashing yellow once per second	ESF frame formatting and frame error/CRC are present at the H2TU-R.
Solid green	SF frame formatting is present at the H2TU-R.
Flashing green once per second	SF frame formatting and frame error are present at the H2TU-R.
B8ZS/AMI	
OFF	No DS-1 signal is present at H2TU-R.
Solid yellow	B8ZS line code is present at the H2TU-R.
Flashing yellow once per second	B8ZS and excess zeros string are present at the H2TU-R.
Solid green	AMI line code is present at the H2TU-R.
Flashing green once per second	AMI and BPV are present at the H2TU-R.
LLB/RLB	
OFF	H2TU-R is not ARMed or in loopback.
Solid yellow	H2TU-C is in either NLOC or CREM (RLB).
Flashing yellow once per second	System is ARMed.
Solid green	H2TU-R is in either NREM or CLOC (LLB).

3 LOGGING ON TO THE MAIN MENU

The H2TU-R supports local and remote logon through a maintenance terminal (ASCII terminal or a PC running terminal emulation software) connected to the craft port on the H2TU-R front panel.

Logging on creates menus and screens for the H2TU-R that are replications of those viewed at the H2TU-C. Once logged on, you can view system settings and inventory, initiate loopbacks, monitor performance, and configure the circuit.

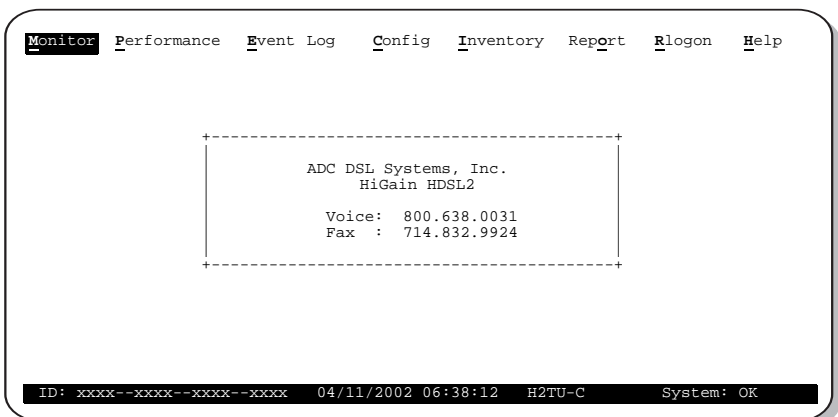

To log on using a maintenance terminal:

- 1 Press **CTRL** + **R** to refresh the Logon screen, if necessary.
- 2 Press the first letter of the desired menu. Use the **SPACEBAR** to cycle through menu selections, and press **ENTER** to change a setting or display a menu.

Type the first letter **To view:**


M onitor	A graphical representation of circuit activity and devices.
P erformance	Performance history statistics (current, 25-hour, 48-hour, 31-day, and blockage indicator) at DS1 and HDSL interfaces. Also, displays alarm status and count.
E vent log	Sectionalized Event History for alarms and errors at all four legs of the DS1 signal at the H2TU-R.
C onfig	Configuration options (standard, ADC, signal generation, date and time, master clear, factory defaults).
I nventory	Product information, circuit and unit identifications.
R logon	Maintenance terminal screens at the H2TU-C.
H elp	Glossary, screen navigation keys, ADC contact information.
Rep O rt	Downloading status and performance monitoring data to file.



For more information about the HiGain HDSL2 maintenance screens, refer to the user manual of the H2TU-C line unit. Copies of user manuals can be downloaded from the ADC website at www.adc.com. To order a hard copy, please contact your sales representative.

4 LOOPBACK TESTING

Initiate loopbacks with the H2TU-R LLB or RLB pushbuttons, the H2TU-C front-panel display, the maintenance terminal monitor screen, or with inband codes. The inband codes shown below can be sent by a test set. For more information, refer to the user manual for the H2TU-C line unit.

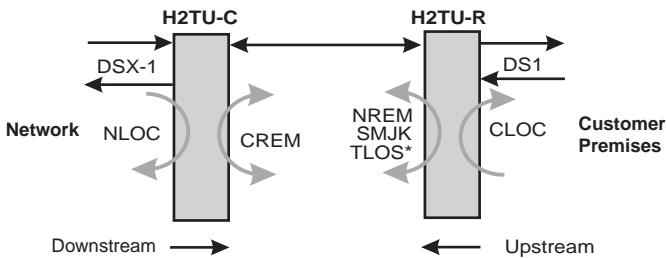

* When enabled, TLOS is an automatic loopback that occurs with an LOS at the remote DS1 input.

H0025-A

GNLB Loopback Commands

Loopback	Inband Code	Description
NLOC	1111000	DSX-1 signal is looped back to the network at the H2TU-C.
NREM	1110000	DSX-1 signal is looped back to the network at the H2TU-R.
SMJK	11000	DSX-1 signal is looped back to the network at the H2TU-R SmartJack module.
CREM	1111110	DS1 signal from customer is looped back to the customer at the H2TU-C.
CLOC	1111100	DS1 signal from customer is looped back to the customer at the H2TU-R.
Loopdown	11100	Deactivates any of the above loopbacks.

FCC Class A Compliance

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

Limited Warranty

Product warranty is determined by your service agreement. Contact your sales representative or Customer Service for details.

Modifications

Any changes or modifications made to this device that are not expressly approved by ADC DSL Systems, Inc. voids the user's warranty.

All wiring external to the products should follow the provisions of the current edition of the National Electrical Code.

Standards Compliance

This equipment has been tested and verified to comply with the applicable sections of the following safety standards:

- GR 63-CORE - Network Equipment-Building System (NEBS) Requirements
- GR 1089-CORE - Electromagnetic Compatibility and Electrical Safety
- Binational standard, UL-1950/CSA C22.2 No. 950-95: Safety of Information Technology Equipment.

Trademark Information

ADC is a registered trademark of ADC Telecommunications, Inc. Other product names mentioned in this installation guide are used for identification purposes only and may be trademarks or registered trademarks of their respective companies.

Copyright Information

© 2002 ADC DSL Systems, Inc. All rights reserved. Information contained in this document is company private to ADC DSL Systems, Inc., and shall not be modified, used, copied, reproduced or disclosed in whole or in part without the written consent of ADC.

ADC DSL Systems, Inc.

14402 Franklin Avenue
Tustin, CA 92780-7013
Tel: 714.832.9922
Fax: 714.832.9924

Technical Assistance

Tel: 800.638.0031
Tel: 714.730.3222
Fax: 714.730.2400



Product Catalogs: H2TU-R-402-L6G,
H2TU-R-402-L6H
CLEIs: VAR1AAPA, VAR1WDPA
Document: LTPH-QI-1155-01

