


HiGAIN

HLU-388 List 5A Line Unit Quick Installation Guide

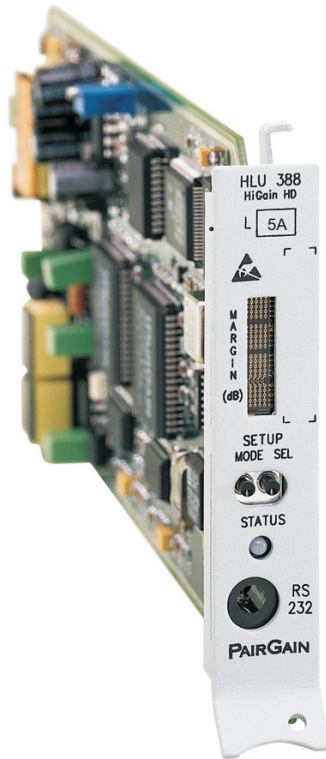

PAIRGAIN

THE HLU-388 LIST 5A

The PairGain® HiGain® Line Unit HLU-388 List 5A is the Central Office (CO) side of a repeaterless, T1 transmission system. When used in conjunction with a HiGain Remote Unit (HRU), the system provides 1.544 Mbps transmission on two unconditioned copper pairs over the full Carrier Service Area (CSA) range. The CSA includes loops up to 12,000 feet of 24 (American Wire Gauge) AWG or 9,000 feet of 26 AWG wire, including bridged taps. This line unit can be used in applications with or without HiGain Doubler Units (HDUs).

FEATURES

-
- Front panel status LED, four-character status display
 - Ultra-low wander
 - Five-span range with four doublers (60 kft, 24 AWG)
 - Selectable power feed modes
 - Loss of Signal (LOS)/Alarm Indicator Signal (AIS) payload alarm option
 - Additional screens for inventory and troubleshooting
 - Payload (PL) or HiGain (HG) loopback source identification
 - Reduced power consumption
 - Low line-power option (-140 Vdc) for circuits with a single doubler
 - Bit Error Rate (BER) alarm options
 - Bipolar Violation Transparency (BPVT) options
 - Grounded loop detection
-

SPECIFICATIONS

| | |
|----------------------------------|---|
| Operating Temperature | -40 °F to 149 °F (-40 °C to +65°C) |
| Operating Humidity | 5% to 95% non-condensing |
| HDSL Span Voltage | -140 or ±112 Vdc |
| Mounting | DDM+ high-density shelf |
| HDSL Line Code | 784 kbps 2B1Q |
| HDSL Output | +13.5 dBm ±0.5 dB, 135 Ω |
| Maximum Provisioning Loss | 35 dB at 196 kHz, 135 Ω |
| DS1 Line Rate | 1.544 Mbps ±200 bps |
| DS1 Line Format | Alternate Mark Inversion (AMI), Bipolar with 8-Zero Substitution (B8ZS), or Zero Byte Time Slot Interchange (ZBTSI) |
| DS1 Frame Format | Extended SuperFrame (ESF), SuperFrame (SF), or Unframed (UNFR) |
| DSX-1 Pulse Output | 6 V ^{pk-pk} , pre-equalized for 0 to 655 feet of ABAM cable |
| DSX-1 Input Level | +1.5 to -7.5 dB DSX |

1 INSTALLATION

To ensure proper installation of the HLU-388 List 5A:

- 1 Lift up the entire front panel and align the HLU-388 List 5A with the shelf rails.
- 2 Slide the unit in and press the front panel down to secure.

2 POWER-UP SEQUENCE

When the HLU powers up, the four-character display illuminates and reports status messages.

If the HLU is not communicating with the next span device, the following occurs:

- 1 Alarm and diagnostic messages display (see the Front Panel Alarm Messages and Front Panel Diagnostic Messages tables inside), followed by the SELF TEST message.
- 2 The Status LED turns yellow, indicating it has entered self-test mode.

If the HLU is communicating with the next span device, the following occurs:

- 1 The Status LED flashes red while acquiring each device in the system, and turns a steady green when the entire system is operating without any alarms.
- 2 The four-character display reports margin (signal-to-noise ratio) readings and insertion loss.
- 3 If the status LED is not solid green, the display reports alarm conditions (see the Front Panel Alarm Messages table inside).


3 PROVISIONING

- 1 Access the Maintenance Terminal screens by pressing **SPACEBAR** several times.
 - a Set the date and time (select Set Clock from the Main Menu).
 - b Set the circuit IDs (select View System Inventory).
- 2 Access the Systems Settings selection on the Main Menu to change the default settings of any system parameters.
- 3 Access the View Troubleshooting screen to view a graphical analysis of any potential system problems.
- 4 When the HLU is successfully installed and provisioned, clear Span Status, Performance Data, Performance History, and Alarm History screens to ensure accurate data and alarm reporting.

Continued




Front Panel

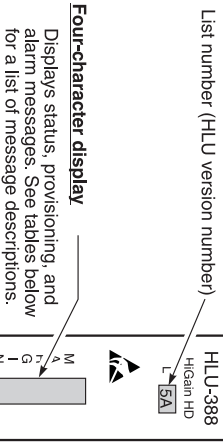

Modem Settings

1200-9600 baud
8 data bits
No parity
1 stop bit
Hardware flow control: OFF
Terminal emulation software: VT 100

Card-edge Connector

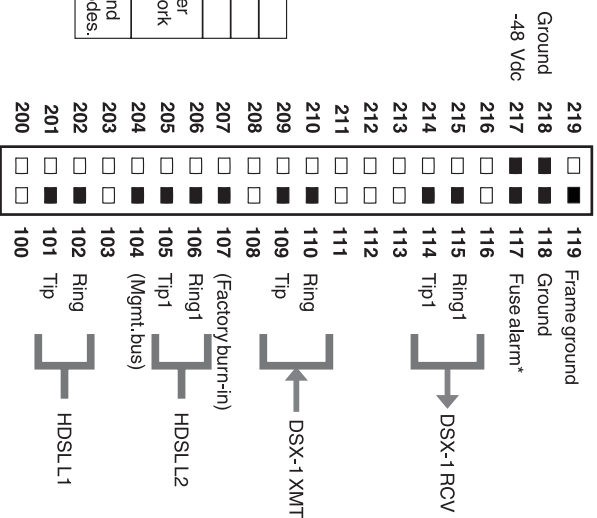


Status LED

Reports the following conditions:

| | |
|---------------------|---|
| Green LED | Normal operation |
| Red LED | Fuse alarm |
| Flashing Red LED | System alarm or HDSL acquisition |
| Yellow LED | Self Test is in process, or a Customer Remote Loopback (CREM) or Network Local Loopback (NLOCL) is in effect. |
| Flashing Yellow LED | System is in Armed (ARM) to respond to Intelligent Line Repeater (ILR) codes. |

System option buttons (for manual setting of system parameters)

- 1 Use MODE and SEL to manually modify user options, initiate loopbacks, and display DSX-1 line parameters.
- 2 Press the MODE button for 2 seconds and release. The front panel alternately displays the first system parameter and its current setting.
- 3 Press SEL to step through all possible system settings for the displayed parameter.
- 4 Press MODE to update the parameter and advance to the next parameter.
- 5 After scrolling through all the parameters, press SEL to confirm changes when prompted with a CONF YES message, or press MODE to cancel all changes.




RS-232 craft port

Bartam 210 jack provides bidirectional communication between the unit and an external terminal by way of DB-9 or DB-25 connector to allow configuration and performance monitoring through the maintenance terminal menus. (Use adapter for jack, part number 120-1035-01.)

* Fuse alarm is normally floating (0 to 80 V maximum) and at -48 Vdc (10 mA maximum) when activated.

4 LOOPBACK TESTING

Initiate loopback testing from the HiGain maintenance menus or use the MODE and SEL buttons. The hexadecimal inband codes shown below can be sent by a test set.

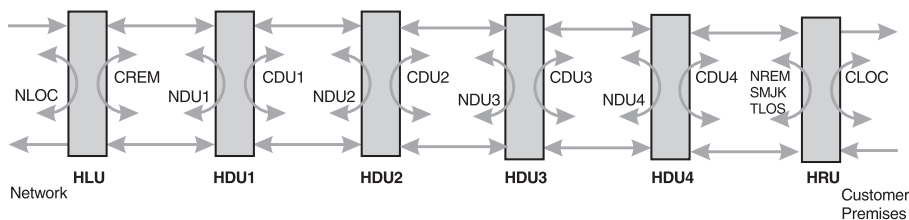

GNLB Loopback Commands

| Loopback | Inband Code | Description |
|----------|-------------|---|
| NLOC | 1111000 | DSX-1 signal is looped back to the network at the HLU. |
| NDU1 | 110000 | DSX-1 signal is looped back to the network at the HDU1. |
| NDU2 | 111000 | DSX-1 signal is looped back to the network at the HDU2. |
| NDU3 | 1010001 | DSX-1 signal is looped back to the network at the HDU3. |
| NDU4 | 1010010 | DSX-1 signal is looped back to the network at the HDU4. |
| NREM | 1110000 | DSX-1 signal is looped back to the network at the HRU. |
| SMJK | 11000 | DSX-1 signal is looped back to the network at the HRU SmartJack module. |
| CLOC | 1111100 | Signal from customer is looped back to the customer at the HLU. |
| CDU1 | 111100 | Signal from customer is looped back to the customer at the HDU1. |
| CDU2 | 111110 | Signal from customer is looped back to the customer at the HDU2. |
| CDU3 | 1011001 | Signal from customer is looped back to the customer at the HDU3. |
| CDU4 | 1011010 | Signal from customer is looped back to the customer at the HDU4. |
| CREM | 1111110 | Signal from customer is looped back to the customer at the HRU. |
| Loopdown | 11100 | Deactivates any of the above loopbacks. |



For more detailed information about the Maintenance Terminal screens, provisioning, and loopback mode testing, refer to the HLU-388 List 5A technical practice, document number 150-388-151-xx. It can be downloaded from the Customer Site portion of the PairGain Web page at www.pairgain.com. A password is required to access the Customer Site Web pages. If you do not have a password, contact your PairGain sales representative.

Front-Panel Alarm Messages^(a)

| Message | Description |
|--------------|--|
| LOSW | Indicates that one of the HDSL loops has lost sync. |
| LLOS | Indicates that no signal is detected at the DSX-1 input to the HLU. |
| RLOS | Indicates that no signal is detected at the DS-1 input to the HRU. |
| BER | A system Bit Error Rate alarm is in effect. |
| MAL1 or MAL2 | The margin on HDSL Loop 1 or Loop 2 has dropped below the threshold set by the user. |
| NONE | No alarm present. |

(a) Alarm (ALRM) displays prior to an alarm message. Pressing the SEL button initiates an Alarm Cutoff (ACO) message.

System Configuration Codes

| Code | Description |
|-----------|---|
| VER xxxx | The release revision of the firmware (appears during the System Settings review mode). |
| LIST xxxx | The model number of the product (appears during the System Settings review mode). |
| FRM xxxx | Indicates the type of frame pattern being received from the DSX-1, where xxxx is SF, ESF, UNFR, or NONE). |
| CODE xxxx | The line code setting, where xxxx is Alternate Mark Inversion (AMI) or Bipolar with 8-Zero Substitution (B8ZS). |
| PLEV xxxx | Indicates the HDSL line voltage in its LOW (-140 Vdc), HIGH (± 112 Vdc), or DIS (disabled). |

Front-Panel Diagnostic Messages

| Message | Description (normal operating messages in bold) |
|---------------------|---|
| 1=xx or 2=yy | Indicates the power of the received HDSL signal on each loop relative to noise. Any value of 06 (dB) or greater is adequate for reliable system operation. |
| ACQ1 or ACQ2 | The multiplexers of the HLU and the HRU or the first doubler are trying to establish synchronization over Loop 1 or Loop 2 of Span 1. |
| <i>AnL1 or AnL2</i> | The multiplexers of the two devices on Span <i>n</i> are trying to establish synchronization with each other on Loop 1 or Loop 2, where <i>n</i> is the number of the span. |
| BAD RT? | The HLU is not receiving any response from the HRU. |
| DSO | NONE = no DSO channels blocked. BLK = some channels blocked. |
| FERR | Framing bit error occurred at HLU DSX-1 input. |
| H1ES or H2ES | HDSL Loop 1 or Loop 2 CRC error. |
| nH DU | Indicates the number (<i>n</i>) of doublers in the circuit (if any are present). |
| INSL xxB | The maximum Insertion Loss message (INSL) appears followed by xxB, where xx is the maximum insertion in dB of all spans and loops. |
| LBPV | A local bipolar violation has been received at the DSX-1 input to the HLU-388 List 5A. |
| MNGD | The HLU is under control of the HMU-319 network management unit. |
| PWR FEED GND | One of the HDSL loops has been grounded. |
| PWR FEED ON | Indicates that the HDSL loops are not grounded or shorted. |
| PWR FEED OFF | HDSL span power has been turned off. |
| PWR FEED SHRT | Indicates a short between the two HDSL pairs or the inability of the HRU to communicate with the HLU. |
| SELF TEST | The HLU is in a self-test mode. This occurs every power on/off cycle. |
| SIG1 or SIG2 | The transceivers of the HLU and HRU or first doubler are trying to establish contact with each other on Loop 1 or Loop 2 of Span 1. |
| <i>SnL1 or SnL2</i> | The transceivers of the two devices on Span <i>n</i> are trying to establish contact with each other on Loop 1 or Loop 2, where <i>n</i> is the number of the span. |
| TL0S | HRU is in a logic loopback state caused by a loss of its T1 input from the CI. |

System Settings

| Display Code | Description (default values in bold) |
|--------------|---|
| EQL | Sets the Equalizer (EQL) DSX-1 to: 0 (0 to 133 ft.), 133 (133 to 266 ft.), 266 (266 to 399 ft.), 399 (399 to 533 ft.), 533 (533 to 655 ft.). |
| LPBK | Enables (ENA) or disables (DIS) all inband SMJK loopback commands. |
| SPLB | Configures the system for generic inband loopback commands (GNLB) or special loopback commands (A1LB, A2LB, A3LB, A4LB, A5LB). |
| PWRF | DIS = disables HDSL powering. LOW = HDSL line voltage at -140 Vdc maximum. AUTO = automatically switches between -140 Vdc for non-doubler applications and ± 112 Vdc for doubler applications. HIGH = ± 112 Vdc for all applications. |
| ZBTS | ON = ESF frame is operating in its Zero-Byte Time Slot Interchange (ZBTSI) mode. OFF = ESF frame is operating in its normal non-ZBTSI mode. |
| BERT | NONE = prevents generation of a system alarm due to excessive BER. 1E-6 or 1E-7 = alarm activates when BER threshold exceeds 10^{-6} or 10^{-7} , respectively. |
| LBTO | Loopback timeout = NONE, 20, 60 , 120 minutes. |
| DS1 | Line code = , AUTO, B8ZS, or AMI . |
| FRMG | Framing = AUTO or UNFR (unframed). |
| HAIS | Transmits the AIS signal at the HLU and HRU output ports if one (1LP) or both (2LP) HDSL loops are not in sync. |
| SAIS | Enables (ENA) or disables (DIS) NREM/SMJK loopback mode. |
| DSO | DSO blocking on (BLK) or off (NONE); can only be set through the Maintenance Terminal. |
| MARG | 0 to 15 dB; default is 4dB ; can only be set through the Maintenance Terminal. |
| RDA | Enables (ENA) or disables (DIS) remote DS1 LOS at HRU input. |
| ALMP | Enables line to output an (AIS) payload or an (LOS) condition. |
| RTPV | Enables (ENA) or disables (DIS) remote provisioning. |
| BPVT | Enables (ENA) or disables (DIS) bipolar violation transparency (BVP). |
| CONF | YES = confirms that all operating modes are to be updated to their current selections. NO = prevents the most recently selected operating mode selection from being updated. |

FCC Class A Compliance

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

Limited Warranty

PairGain Technologies warrants this product to be free of defects and to be fully functional for a period of 60 months from the date of original shipment, given correct customer installation and regular maintenance. PairGain will repair or replace at PairGain's option any unit without cost during this period if the unit is found to be defective for any reason other than abuse or incorrect use or installation.

Do not try to repair the unit. If it fails, replace it with another unit and return the faulty unit to PairGain for repair. Any modifications of the unit by anyone other than an authorized PairGain representative voids the warranty.

If a unit needs repair, call PairGain for a Return Material Authorization (RMA) number and return the defective unit, freight prepaid, along with a brief description of the problem.

PairGain continues to repair faulty modules beyond the warranty program at a nominal charge. Contact your PairGain sales representative for details and pricing.

Modifications

Any changes or modifications made to this device that are not expressly approved by PairGain Technologies, Inc. may void the user's warranty.

All wiring external to the products should follow the provisions of the current edition of the National Electrical Code.

Standards Compliance

The HLU-388 List 5A has been tested and verified to comply with the applicable sections of the following standards.

- GR 63-CORE - Network Equipment-Building System (NEBS) Requirements: Physical Protection
- GR 1089-CORE - Electromagnetic Compatibility and Electrical Safety

Trademark Information

PairGain and HiGain are registered trademarks of PairGain Technologies, Inc. All other product names mentioned in this installation guide are used for identification purposes only and may be trademarks or registered trademarks of their respective companies.

Copyright Information

© Copyright 1999 PairGain Technologies, Inc.

Information contained in this document is company private to PairGain Technologies, Inc., and shall not be modified, used, copied, reproduced or disclosed in whole or in part without the written consent of PairGain.

Corporate Office:
14402 Franklin Avenue
Tustin, CA 92780
Tel: 714.832.9922
FAX: 714.832.9924

For Technical Assistance:
800.638.0031



Product Number: 150-1141-51

Section Number: 350-388-151-02

December 7, 1999