


## QUICK INSTALLATION

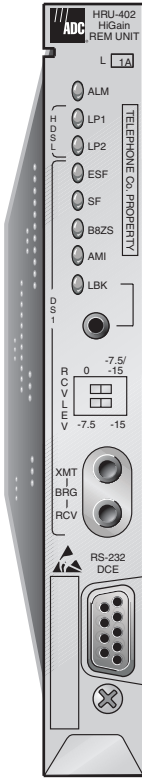

## HRU-402 LIST 1A REMOTE UNIT

---

# THE HRU-402 LIST 1A

The HiGain<sup>®</sup> Remote Unit, HRU-402 List 1A, functions as the remote end of a repeaterless T1 transmission system. An HRU connects to a HiGain HDSL Line Unit (HLU), creating a HiGain system that provides 1.544 Mbps transmission on two unconditioned copper pairs over the full Carrier Service Area (CSA) range. HiGain Doubler Units (HDUs) can also be used to extend the range. The HRU-402 List 1A is powered by an upstream line unit. It cannot be locally powered.

## FEATURES

- 
- 1.544 Mbps full-duplex transmission on two unconditioned copper pairs
  - Status Light Emitting Diodes (LEDs) for Digital Signal Level 1 (DS1) and HDSL
  - Craft port access for maintenance terminal connection
  - Narrow 200 mechanics
  - Support for up to five spans
  - Generic and addressable repeater loopback activation codes
  - Lightning and power cross-protection on HDSL and DS1 interfaces
  - DS1 transmit and receive monitor jacks for testing
  - Remote provisioning
  - Ultra-low wander
- 

## SPECIFICATIONS


---

<b>Operating Temperature</b>	-40 °F to +149 °F (-40 °C to + 65 °C)
<b>Operating Humidity</b>	5% to 95% non-condensing
<b>Power Consumption</b>	3.1 W (when connected to HLU-231 List 8x, HLU-319 List 5x, or HLU-388 List 5x; 4.5 W when connected to all other line units.)
<b>Electrical Protection</b>	Secondary surge and power cross-protection on all DS1 and HDSL ports
<b>Mounting</b>	Narrow 200 mechanics shelf (half-width 400 mechanics)
<b>HDSL Line Code</b>	784 kbps 2B1Q full duplex
<b>HDSL Output</b>	+13 dBm ±0.5 dBm, 135 Ω
<b>DS1 Pulse Output</b>	0 dB, -7.5 dB, -15 dB
<b>Maximum Provisioning Loss</b>	35 dB at 196 KHz, 135 Ω
<b>DS1 Line Rate</b>	1.544 Mbps ±200 bps
<b>DS1 Line Format</b>	Alternate Mark Inversion (AMI), Bipolar with 8-zero Substitution (B8ZS) or Zero Byte Time Slot Interchange (ZBTSI)
<b>DS1 Frame Format</b>	Extended SuperFrame (ESF), SuperFrame (SF) or THRU (unframed)

---

# 1

## INSTALLATION

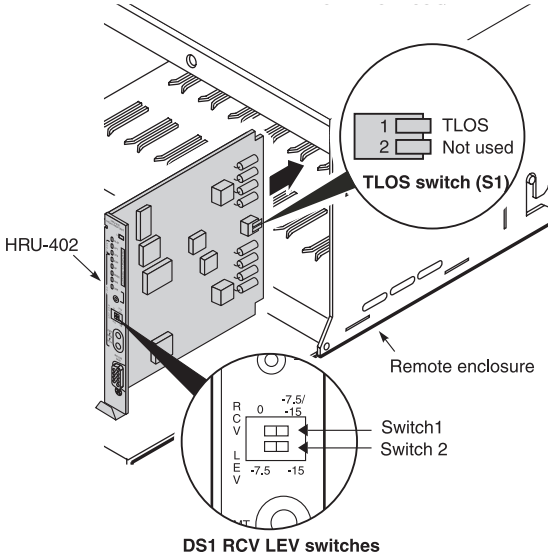

**DS1 RCV LEV switches**

- 1 Set the DS1 RCV LEV configuration switches located on the front panel. These switches set the DS1 receive line buildout level toward the Customer Interface (CI).

<b>Switch 1</b>	0	Default setting. Sets the DS1 receive level toward the CI to 0 db.
	-7.5/-15	Sets the DS1 receive level toward the CI according to the switch setting of Switch 2.
<b>Switch 2</b>	-7.5	Sets the DS1 receive level toward the CI to -7.5 dB if Switch 1 is set to -7.5/-15.
	-15	Sets the DS1 receive level toward the CI to -15 dB if Switch 1 is set to -7.5/-15.

- 2 Set the TLOS switch (S1) adjacent to the card-edge connector.

Disable (down position)	Default setting. This disables the TLOS option. When an RLOS occurs, an AIS pattern is sent toward the network.
Enable (up position)	Enables the TLOS option. When an RLOS occurs, the HRU goes into loopback toward the network.

- 3 Align the HRU with the enclosure slot guides, then push the unit in until it is properly seated in the backplane card-edge connector.

*Continued*




## Card-edge Connector

56	<input type="checkbox"/>	55	DS1 Tip
54	<input type="checkbox"/>	53	
52	<input type="checkbox"/>	51	
50	<input type="checkbox"/>	49	DS1 Ring
48	<input type="checkbox"/>	47	DS1 Ring1
46	<input type="checkbox"/>	45	
44	<input type="checkbox"/>	43	
42	<input type="checkbox"/>	41	HDLSL2 Tip1
40	<input type="checkbox"/>	39	
38	<input type="checkbox"/>	37	Factory Use Only
36	<input type="checkbox"/>	35	
34	<input type="checkbox"/>	33	
32	<input type="checkbox"/>	31	
30	<input type="checkbox"/>	29	
28	<input type="checkbox"/>	27	Chassis Ground*
26	<input type="checkbox"/>	25	
24	<input type="checkbox"/>	23	
22	<input type="checkbox"/>	21	
20	<input type="checkbox"/>	19	
18	<input type="checkbox"/>	17	Circuit Ground
16	<input type="checkbox"/>	15	DS1 Ring1
14	<input type="checkbox"/>	13	HDLSL1 Ring
12	<input type="checkbox"/>	11	
10	<input type="checkbox"/>	9	
8	<input type="checkbox"/>	7	HDLSL1 Tip
6	<input type="checkbox"/>	5	DS1 Tip1
4	<input type="checkbox"/>	3	
2	<input type="checkbox"/>	1	Chassis Ground*

XMT

RCV

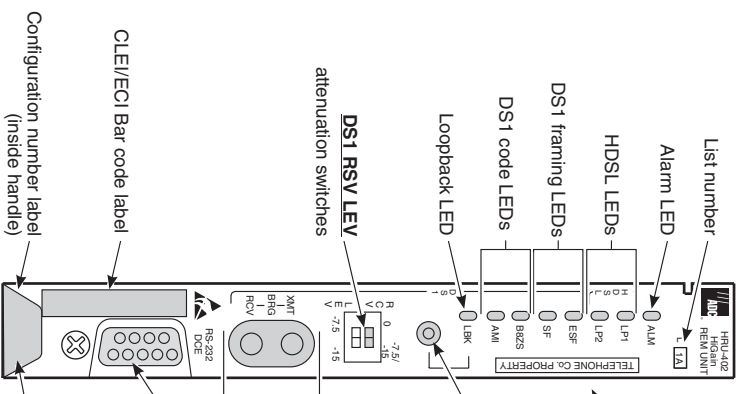

### TILOS option switches

Located next to card-edge connector. See step 1 (Installation) for more information

### Loopback control button

Pressing the button for 5 seconds activates a remote loopback towards the network, called a Network Remote Loopback (NREM). Any existing loopback is terminated before NREM is activated. The unit can be looped down by either pressing the LPBK control button again for 5 seconds or by the standard loopdown inband messages.

### DS1 transmit (XMT) and receive (RCV) bridging jacks

For non-intrusive test access

### Craft port provisioning

To access all system maintenance, provisioning and performance screens, connect a standard 9-pin, terminal cable between the serial port on a PC and the HRU craft port.

### Modern settings:

1200-9600 baud  
8 data bits  
No parity  
1 stop bit  
Hardware flow control: OFF  
Terminal emulation: VT-100

\*Chassis Ground may be tied to earth ground per local practices.

Note: Active pins are highlighted in black.

## 2 VERIFICATION

Once the HRU is installed, verify that it is operating properly by monitoring the Status LEDs on the front panel.

### *Status LED Descriptions*

LED Status	Indicates
<b>Alarm (ALM) LED</b>	Shows alarm states for remote and local Loss of Signal (LOS).
Solid red	Indicates a Loss of Signal (LOS) condition at the T1 input of the HRU.
Blinking	Indicates a LOS condition at the T1 input of the line unit.
<b>HDSL LED</b>	Displays HDSL Loop 1 (LP1) and Loop 2 (LP2) conditions.
Solid green	Indicates HDSL loop is in sync.
Blinking once per second	Indicates the HDSL loop is trying to acquire sync.
Blinking 4 times per second	Indicates a margin alarm condition on the HDSL loop.
Blinking 10 times per second	Indicates a Cyclical Redundancy Check (CRC) error on the HDSL loop.
OFF	Indicates no activity on the HDSL loop.
<b>DS1 Framing (FRM) LEDs (ESF and SF)<sup>(a)</sup></b>	Indicates framing patterns. If DS1 signals are not detected, the ESF and SF LEDs will not light.
ESF LED = Solid green	Indicates Extended Super Frame (ESF). The LED blinks once per second when a frame error occurs.
SF LED = Solid green	Indicates Super Frame (SF). The LED blinks once per second when a frame error occurs.
OFF	Indicates unframed or no signal.
<b>DS1 Code LEDs (B8ZS and AMI)<sup>(a) (b)</sup></b>	Indicates DS1 code options. If DS1 signals are not detected, the B8ZS and AMI LEDs will not light.
B8ZS LED = Solid green	Indicates that the DS1 line code option is set to Bipolar with 8-Zero Substitution (B8ZS). The LED blinks once per second when a string of excessive zeros is detected.
AMI LED = Solid green	Indicates that the user DS1 line code option is set to Alternate Mark Inversion (AMI). This LED blinks once per second when a Bipolar Violation (BPV) is detected.
<b>Loopback (LPBK) LED</b>	Shows loopback states to and from the network and to and from the Customer Interface (CI).
Solid yellow	Indicates Network Remote (NREM), SmartJack (SMJK), or Transmit Loss of Signal (TLOS) loopback.
Blinking once per second	Indicates Customer Local (CLOC) loopback state.
Blinking 4 times per second	Indicates the HRU is in an Armed state.

(a) If DS1 signals are not detected the ESF, SF, B8ZS and AMI LEDs do not light.

(b) Auto option indicates when the DS1 code is being detected as AMI or B8ZS. This option is not available with HLU-231 List 8D and List 8E, HLU-319 List 5D and List 5E, or HLU-388 List 5D and List 5E.

## 3 LOGGING ON TO THE MAIN MENU

The HRU-402 List 1A supports local and remote logon through a maintenance terminal (VT-100 or a PC running VT-100 terminal-emulation software) connected to the craft port on the front panel. Remote login creates menus and screens for the HLU that are identical to those viewed at the HLU. Once logged on, you can access the Remote Terminal Main Menu screens to view system settings, initiate loopbacks and provision the circuit.

To log on and access the Remote Terminal Main Menu screens using a maintenance terminal:


- 1 Press the **SPACEBAR** several times to display the Remote Login screen.
- 2 Press the **ENTER** key to view the HiGain Maintenance Terminal Screen. The Remote Terminal Main Menu items are replications of the line unit screens. Depending on the HLU attached to the HRU-402, remote provisioning may be available. Refer to the HLU technical practice for details.



**For more detailed information about the Maintenance Terminal screens, provisioning, and loopback mode testing, download the appropriate line unit technical practice from the ADC website at [www.adc.com](http://www.adc.com). To order a hard copy, please contact your sales representative.**

# 4 LOOPBACK TESTING

Initiate loopback testing from the maintenance terminal menus or by using inband codes. The inband codes shown below can be sent by a test set. For more information, refer to the technical practice for the HLU line unit.

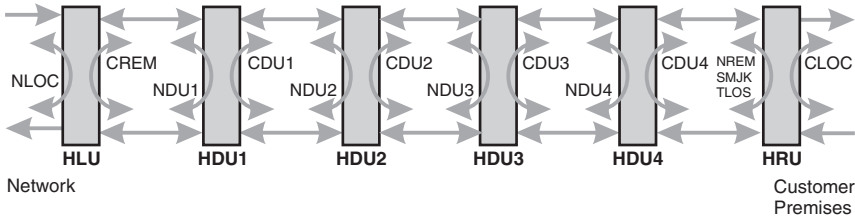

## A5LB Loopback Commands

Loopback	Inband Code	Description
NLOC	D3D3	DSX-1 signal is looped back to the network at the HLU.
NDU1	C741	DSX-1 signal is looped back to the network at HDU1.
NDU2	C742	DSX-1 signal is looped back to the network at HDU2.
NDU3	C743	DSX-1 signal is looped back to the network at HDU3.
NDU4	C744	DSX-1 signal is looped back to the network at HDU4.
NREM	C754	DSX-1 signal is looped back to the network at the HRU.
SMJK	11000	DSX-1 signal is looped back to the network at the HRU SmartJack module.
CLOC	C754	Signal from customer is looped back to the customer at the HRU.
CDU1	C741	Signal from customer is looped back to the customer at HDU1.
CDU2	C742	Signal from customer is looped back to the customer at HDU2.
CDU3	C743	Signal from customer is looped back to the customer at HDU3.
CDU4	C744	Signal from customer is looped back to the customer at HDU4.
CREM	D3D3	Signal from customer is looped back to the customer at the HLU.
Loopdown	11100	Deactivates any of the above loopbacks.

## COMPATIBILITY

The HRU-402 List 1A can be used with all HiGain doublers and doubler-compatible line units in two or three-span applications. The HRU-402 List 1A supports four-span applications when used with the following ADC products:

Line Units	Doublers	Indoor Enclosures	Outdoor Enclosures
HLU-231 List 8x	HDU-404	HRE-420	HRE-450
HLU-319 List 5x	HDU-407	HRE-422	HRE-454
HLU-388 List 5x	HDU-409	HRE-425	
HLU-432 List 1		HRE-204	
		200 mechanics shelves	
		400 mechanics shelves	

## FCC Class A Compliance

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

## Limited Warranty

Product warranty is determined by your service agreement. Contact your sales representative or Customer Service for details.

## Modifications

Any changes or modifications made to this device that are not expressly approved by ADC DSL Systems, Inc. voids the user's warranty.

All wiring external to the products should follow the provisions of the current edition of the National Electrical Code.

## Standards Compliance

This equipment has been tested and verified to comply with the applicable sections of the following safety standards:

- GR 63-CORE - Network Equipment-Building System (NEBS) Requirements
- GR 1089-CORE - Electromagnetic Compatibility and Electrical Safety
- Binational standard, UL-1950/CSA-C22.2 No. 950-95: Safety of Information Technology Equipment

## Trademark Information

ADC is a registered trademark of ADC Telecommunications, Inc. HiGain is a registered trademark of ADC DSL Systems, Inc. Other product names mentioned in this installation guide are used for identification purposes only and may be trademarks or registered trademarks of their respective companies.

## Copyright Information

© 2000 ADC DSL Systems, Inc. All rights reserved. Information contained in this document is company private to ADC DSL Systems, Inc., and shall not be modified, used, copied, reproduced or disclosed in whole or in part without the written consent of ADC.

## ADC DSL Systems, Inc.

14402 Franklin Avenue  
Tustin, CA 92780-7013  
Tel: 714.832.9922  
Fax: 714.832.9924

## Technical Assistance

Tel: 800.638.0031  
Tel: 714.730.3222  
Fax: 714.730.2400



Product Catalog: HRU-402-L1A  
CLEI: T1L3KLPD  
Document: 350-402-111-03, Issue 3



1213844  
March 30, 2000