

PG-FLEX

TECHNICAL PRACTICE



4 CHANNEL ISDN CENTRAL OFFICE CHANNEL UNIT

Model	List	CLEI Code
FLC-706	1A	VACHEGPC~~

Revision History of This Practice

Revision	Release Date	Revisions Made
01	July 29, 1999	Initial Release
02	January 24, 2002	Release to rebrand document to comply with ADC standards
03	January 6, 2003	Updated Product Support Information

©Copyright 2003 ADC DSL Systems, Inc. All Rights Reserved.

ADC is a registered trademark of ADC Technologies, Inc. PG-Flex is a registered trademark of ADC DSL Systems, Inc. No right, license, or interest to such trademarks is granted hereunder, and you agree that you shall assert no such right, license, or interest with respect to such trademarks. Other product names mentioned in this document are used for identification purposes only and may be trademarks or registered trademarks of their respective companies.

Information contained in this document is company private to ADC DSL Systems, Inc., and shall not be modified, used, copied, reproduced or disclosed in whole or in part without the written consent of ADC.

Contents herein are current as of the date of publication. ADC reserves the right to change specifications at any time without notice. Information furnished by ADC is believed to be accurate and reliable. In no event shall ADC be liable for any damages resulting from the loss of data, loss of use, or loss of profits and ADC further disclaims any and all liability for indirect, incidental, special, consequential or other similar damages. This disclaimer of liability applies to all products, publications and services during and after the warranty period.

USING THIS PRACTICE

Three types of messages, identified by icons, appear in the text.



Notes indicate information about special circumstances.



Cautions indicate the possibility of equipment damage or the possibility of personal injury.



Electrostatic Discharge (ESD) susceptibility symbols indicate that a device or assembly is susceptible to damage from electrostatic discharge. You must wear an antistatic wrist strap connected to the appropriate ground connection prior to performing installation procedures. You must also observe normal ESD precautions when handling electronic equipment. Do not hold electronic plugs by their edges. Do not touch components or circuitry.

INSPECTING YOUR SHIPMENT

Upon receipt of the equipment:

- Unpack each container and visually inspect the contents for signs of damage. If the equipment has been damaged in transit, immediately report the extent of damage to the transportation company and to ADC. Order replacement equipment, if necessary.
- Check the packing list to ensure complete and accurate shipment of each listed item. If the shipment is short or irregular, contact ADC as described in [“Returns” on page 8](#). If you must store the equipment for a prolonged period, store the equipment in its original container.

TABLE OF CONTENTS

Overview	1
Description and Features	1
Operational Capabilities	1
Applications	2
Front Panel	3
Specifications	4
Installation And Test	4
Integration Parameters	4
Installing the FLC-706 in the COT Shelf	5
Provisioning the FLC-706	5
Verify operation	5
Outgoing calls	5
Incoming calls	6
Troubleshooting	7
Product Support	8
Technical Support	8
Limited Warranty	8
Returns	8
FCC Class A Compliance	10
Modifications	10
Acronyms	11

LIST OF FIGURES

1. Typical ISDN Configuration	2
2. FLC-706 ISDN Channel Unit Front Panel	3

LIST OF TABLES

1. FLC-706 Front Panel LEDs.....	3
2. COT Channel Unit Troubleshooting	7

OVERVIEW

The ADC® PG-Flex® FLC-706 List 1A ISDN Basic Rate Interface Central Office Channel Unit provides an interface to North American ISDN Basic Access services through a PG-Flex COT shelf. The FLC-706 accommodates four ISDN channels and provides ISDN Line Unit Network Termination (LUNT) at the COT shelf. The FLC-706 installs into a single slot of a PG-Flex COT shelf.

DESCRIPTION AND FEATURES

The FLC-706 features are:

- four ISDN U-interfaces
- MLT compatible and metallic test access
- Vdc resistive test signature
- mp/pp-eoc slave mode in 3-DS0 format
- segmented path performance monitoring
- interim path performance monitoring
- software provisioning
- loopbacks
- Pair Gain Test Controller (PGTC) compatible

Operational Capabilities

The FLC-706 supports two-wire DSL 2B+D data or subsets of that rate. The B1 and B2 channels carry digitized voice and data. The D channel communicates control signalling and low-speed, packet-switched data.

Segmented path performance monitoring collects the error rates for each DSL loop individually. Interim path performance monitoring collects the end-to-end error rate for the entire transport path.

For system isolation and system tests, the FLC-706 provides:

- a hybrid transformer that isolates the equipment from the facility and provides coupling and impedance matching at 135 Ω
- metallic test access through the FPI-729 PGTC Interface Unit
- MLT compatibility
- a DC resistive test signature of 120 k Ω for out-of-service system tests

Applications

ISDN is a networking standard that provides end-to-end, simultaneous handling of digitized voice and data traffic on the same link. [Figure 1](#) shows a typical ISDN configuration. The FLC-706 connects an ISDN Digital Subscriber Line (DSL) to the Central Office (CO). Line Termination (LT) in the CO occurs at the ISDN switch. The DSL loops are U-interface. The FRC-756 provides Line Unit Line Termination (LULT) at the RT. The subscriber site has the Network Termination (NT1).

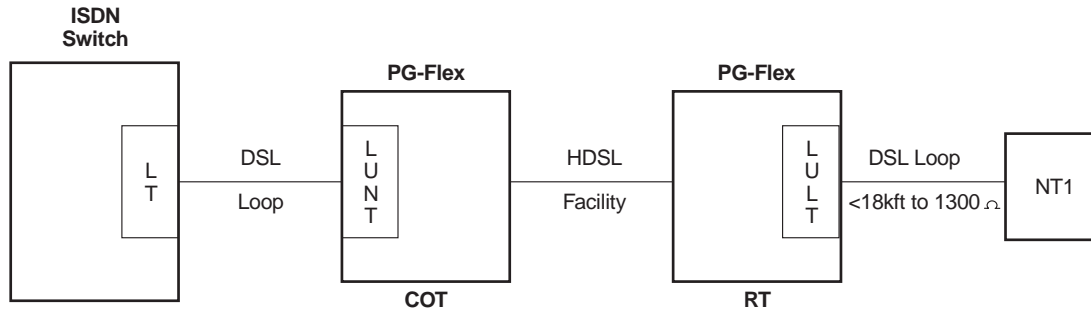


Figure 1. Typical ISDN Configuration

Set all options for the FLC-706 through the PG-Flex COLU or PGTC unit RS-232 maintenance port. Disable ISDN by means of the maintenance port to prevent time slots from being assigned when they are not in use. The FLC-706 must be plugged into a COT shelf before any ISDN provisioning screens can be displayed.

To provide clocking to the FLC-706, ensure the following conditions exist:

- a composite clock on the PG-Flex COT shelf is connected and correctly terminated
- an FPI-729 or an FAU-728 List 2 card is installed

FRONT PANEL

The front panel LEDs indicate the state of the FLC-706 (see [Figure 2](#)).

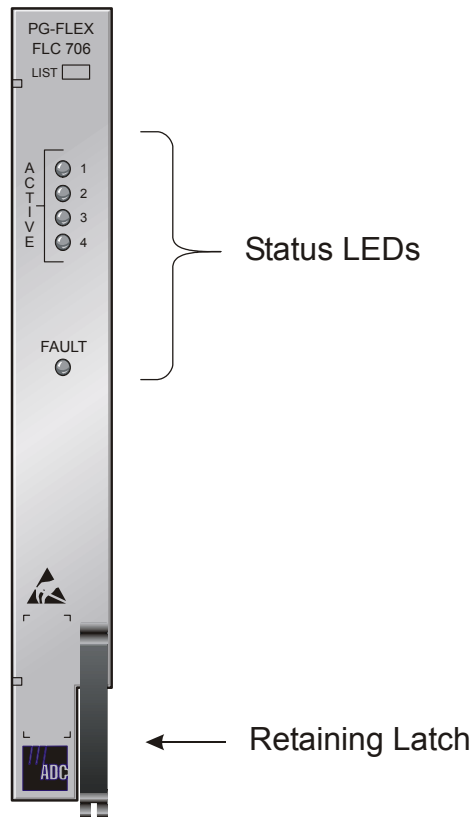


Figure 2. FLC-706 ISDN Channel Unit Front Panel

Each LED for the four channels has the same states and indications.

Table 1. FLC-706 Front Panel LEDs

LEDs	State	Indicates
ACTIVE (1 through 4)	Solid green	Channel is in SYNC
	Fast-flashing green	Channel is attempting to SYNC
	Slow-flashing green	Channel is in a maintenance state which is either loopback or subscriber circuit testing
FAULT	Solid red	A fault has been detected on the unit during powerup
	Off	No faults have been detected on the unit during powerup

SPECIFICATIONS

Transmission

Code	2B1Q, 2 binary, one quaternary, at 160 kbps
Network Interface	3DS0 format
Basic Rate Interface	2B+D; 2 B channels at 64 kbps, one D channel at 16 kbps
dc Resistive Test Signature	120 k Ω
Terminal Impedance	135 Ω

Environmental

Temperature Range	-40° F to +150° F (-40° C to +65° C)
Altitude	-200 ft. to 13,000 ft. (-60 m to 4,000 m)

Dimensions

Height	6.75 in. (17.1 cm.)
Depth	10.5 in. (26.7 cm.)
Width	1.0 in. (2.54 cm.)
Weight	0.8 lb. (0.4 kg.)

Standards

ANSI T1.601-1992 Layer 1
TR-NWT-000397 ISDN Basic Access Transport System Requirements
TR-NWT-000393 ISDN Basic Access Digital Subscriber Lines
TR-TSY-000829 Embedded Operations Channels

INSTALLATION AND TEST

INTEGRATION PARAMETERS

Install the FLC-706 into PG-Flex systems with:

- List 3 or higher PG-Flex CO Line Unit
- List 3 or higher PG-Flex RT Line Unit
- an FPI-729 or FAU-728 List 2 card (used for clocking) in the COT shelf

Observe normal ESD precautions when handling electronic equipment. Do not hold electronic plug-ins by their edge. Take care not to touch components or circuitry.

INSTALLING THE FLC-706 IN THE COT SHELF

Insert the FLC-706 into the COT shelf. Ensure the LEDs go through the following sequencing:

- turn ON for about 2 seconds
- turn OFF for about 2 seconds
- scan ON from top to bottom
- turn OFF

If the LEDs do not follow the above sequence, see [Table 2 on page 7](#).

Provisioning the FLC-706

Provision the FLC-706 using a List 3 or higher COLU practice. Access the ISDN Channel Setup menu and select the appropriate options.

Verify operation

Verify incoming and outgoing calls for both B channels, where B1 is the digitized voice channel and B2 is the data channel:



When verifying the B1 and B2 channels, only the B channel used for digitized voice has dial tone. The data channel does not have dial tone.

To verify the operation steps, use a Tektronix Craftec CT-100 ISDN type test set (or equivalent) that can generate a PRBS/2047 pattern to perform a data Bit Error Rate Test (BERT) when the circuit connects to the far end. This is the most stressful pattern for ISDN circuits. A test result that does not exceed 10^{-7} BER must be demonstrated.

Outgoing calls

Verify outgoing calls for both B channels, for example, calls from the NT1 to the LT (refer to [Figure 1 on page 2](#)):

- 1 Originate an outgoing B1 voice call and make sure that:
 - a dial tone is present
 - b the number you called is displayed (when answered)
the number from which you called is displayed as the originating number
- 2 Hold up the B1 voice circuit, then switch to the B2 data circuit.
- 3 Originate an outgoing B2 data call to the data loopback (LPBK) test line and perform the BER test (after the data call is established).
- 4 After the B2 data test is completed, drop the B2 data line, then drop the B1 voice line.
- 5 Return all circuits to normal.

Incoming calls

Verify incoming calls for both B channels, for example, calls from the LT to the NT1 (refer to [Figure 1 on page 2](#)):

- 1** To test an incoming B1 voice call:
 - a** draw dial tone from another ISDN or POTS circuit
 - b** dial the ISDN B1 voice circuit number
 - c** verify that the number you called is displayed (when answered)
verify that the number from which you called is displayed as the originating number
- 2** Hold up the B1 voice circuit, then switch to the B2 data circuit.
- 3** Originate an outgoing call on the B2 data circuit using another ISDN data circuit and call the B2 data circuit under test. Then, perform the BER test.
- 4** Drop the B2 data line after the B2 test is completed. Then drop the B1 voice line.
- 5** Return all circuits to normal.

TROUBLESHOOTING

Table 2 provides troubleshooting procedures using the front panel LEDs and customer reports. The FLC-706 supports CO initiated loopbacks.

Table 2. COT Channel Unit Troubleshooting

LEDs	State	Indicates	Action
FAULT	On	Fault detected in the PG-Flex system	Replace channel unit.
FAULT + ACTIVE 1	On	Internal fault on the FLC-706	Replace channel unit.
FAULT + ACTIVE 2	On	Internal fault on the FLC-706	Replace channel unit.
FAULT + ACTIVE 3	On	Internal fault on the FLC-706	Replace channel unit.
FAULT + ACTIVE 4	On	Internal fault on the FLC-706	Replace channel unit.
ACTIVE	Slow-Flash	Circuit is in either Loopback or PGTC test setup state	Access the circuit by means of the PG-Flex Line Unit maintenance port and release the circuit or wait for the test originator to complete testing.
ACTIVE	Fast-Flash	ISDN circuit lost sync	Check loop or for NT1 removal by customer.
Problem Reported	Condition	Action	
Customer reports no dial tone	Off-hook not extended to CO	Check status LEDs. Clear any indicated trouble. Use PG-Flex Line Unit maintenance port as required.	
Customer reports data transmission errors	Customer experiencing errors	Perform Step 3 on page 6 . Check performance monitoring record.	
Technician establishes loopback	Loopback customer circuit at various points	Use loopback portion of PG-Flex Line Unit maintenance port to select and activate loopbacks.	

PRODUCT SUPPORT

TECHNICAL SUPPORT

Technical Assistance is available 24 hours a day, 7 days a week by the contacting Customer Service Engineering group at:

Telephone: 800.366.3891
The 800 telephone support line is toll-free in the U.S. and Canada.

Email: wsd_support@adc.com

Knowledge Base: http://adc.com/Knowledge_Base/index.jsp

Web: www.adc.com

LIMITED WARRANTY

Product warranty is determined by your service agreement. Refer to the ADC Warranty/Software Handbook for additional information, or contact your sales representative or Customer Service for details.

RETURNS

To return equipment to ADC:

- 1 Locate the number of the purchase order under which the equipment was purchased. To obtain a return authorization number, you need to provide the original purchase order number to ADC's Return Material Authorization (RMA) Department.
- 2 Call or write ADC's RMA Department to ask for an RMA number and any additional instructions. Use the telephone number, fax number or email address listed below:
 - Telephone: 800.366.3891
 - Email Address: rma@ADC.com
- 3 Include the following information, in writing, along with the equipment you are returning:
 - Company name and address.
 - Contact name and telephone number.
 - The shipping address to which ADC should return the repaired equipment.
 - The original purchase order number.
 - A description of the equipment that includes the model and part number of each unit being returned, as well as the number of units that you are returning.
 - The reason for the return. For example:
 - The equipment needs an ECO/ECN upgrade.
 - The equipment is defective.



If the equipment is defective, please tell us what you observed just before the equipment malfunctioned. Be as detailed in your description as possible.

If there is another reason for returning the equipment, please let us know so we can determine how best to help you.

- 4 Pack the equipment in a shipping carton.
- 5 Write ADC's address and the RMA Number you received from the RMA Department clearly on the outside of the carton and return to:

ADC DSL Systems, Inc.
14352 Franklin Ave.
Tustin, CA 92780-7013

Attention: **RMA (Number)**



All shipments are to be returned prepaid. ADC will not accept any collect shipments.

FCC CLASS A COMPLIANCE

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

Modifications

The FCC requires the user to be notified that any changes or modifications made to this device that are not expressly approved by ADC Technologies, Inc. voids the user's warranty.

All wiring external to the product(s) should follow the provisions of the current edition of the National Electrical Code.

ACRONYMS

BER	Bit Error Rate
BERT	Bit Error Rate Test
CO	Central Office
COLU	Central Office Line Unit
COT	Central Office Terminal
DSL	Digital Subscriber Line
eoc	Embedded Operations Channel
ISDN	Integrated Services Digital Network
LPBK	Loop Back
LULT	Line Unit Line Termination
LUNT	Line Unit Network Termination
MLT	Mechanized Loop Testing
mp-eoc	Multipoint Embedded Operations Channel
NSYN	No Synchronization
NT1	Network Termination (Type 1)
PGTC	Pair Gain Test Controller
pp-eoc	Point To Point Embedded Operations Channel
RMA	Return Material Authorization
RT	Remote Terminal

World Headquarters:

ADC Telecommunications, Inc.
12501 Whitewater Drive
Minnetonka, Minnesota USA 55343

For Technical Assistance:

800.366.3891



1251761
